

## 17X1 SERIES DISPLAY BREAKDOWN

1. Front Panel Name Plate	100-159-340	24. Rear Cover Gasket	?
2. Panel	100-159-222	25. Front Cover Gasket	100-159-401
3. Panel Gasket	100-159-231	26. Bracket Boss	100-167-792
4. CRT Assy (Only comes with Item 6)		27. Cover	100-159-392
5. Sticker (High Voltage)	390-100-010	28. Gyro Connecting Label	100-178-170
6. Deflection PCB/ CRT	008-139-438	29. Power Supply (1721 Series)	008-431-230
7. Spacers	000-304-442	Power Supply (1731,51,61 Series)	008-431-240
8. Card Spacer	000-303-109	30. Cable Assy. (Gyro)	008-428-660
9. T/R Fixing Plate	100-159-372	31. Cable Assy. (NMEA 4Pin)	008-428-670
10. FIL 9049	008-428-860	32. Processor (SPU9046)	008-428-880
11. Cushion Sponge	100-167-780	33. EH Connector	008-428-950
12. Heat Sink Sheet	100-159-253	34. PNL9043/9044	008-428-770
13. O-Ring NMEA/HDG	100-234-150	35. TB9045	008-428-810
14. Plastic Nut (Only comes with Item 31)		36. Keyboard Fixing Plate	100-159-243
15. NMEA Waterproof Cap	000-109-510	37. Water Drain Tube	100-159-323
16. Option Waterproof Cap	100-159-430	38. Shaft Liner	100-159-272
17. Fuse Rating Label	100-144-700	39. Shaft	100-192-732
18. Female Blue 24 Pin Plug	000-500-104	40. Shaft Support Plate	100-159-292
19. Power Rating Label	100-111-250	41. Plunger	000-803-206
20. Power Connector	000-511-403	42. Keyboard (English)	100-159-350
21. Fuse Cover	100-167-801	43. Trackball	000-805-467
22. Fuse Holder	000-103-164	44. Trackball Receptacle	000-803-106
23. Fuse (5 Amp)	000-112-785	45. Switch Cover (English)	100-159-331
		46. Knob	100-159-252



Double Click on the box to see missing P/N's

# 17X1 SERIES DISPLAY BREAKDOWN

## FURUND

