




### How to switch screens

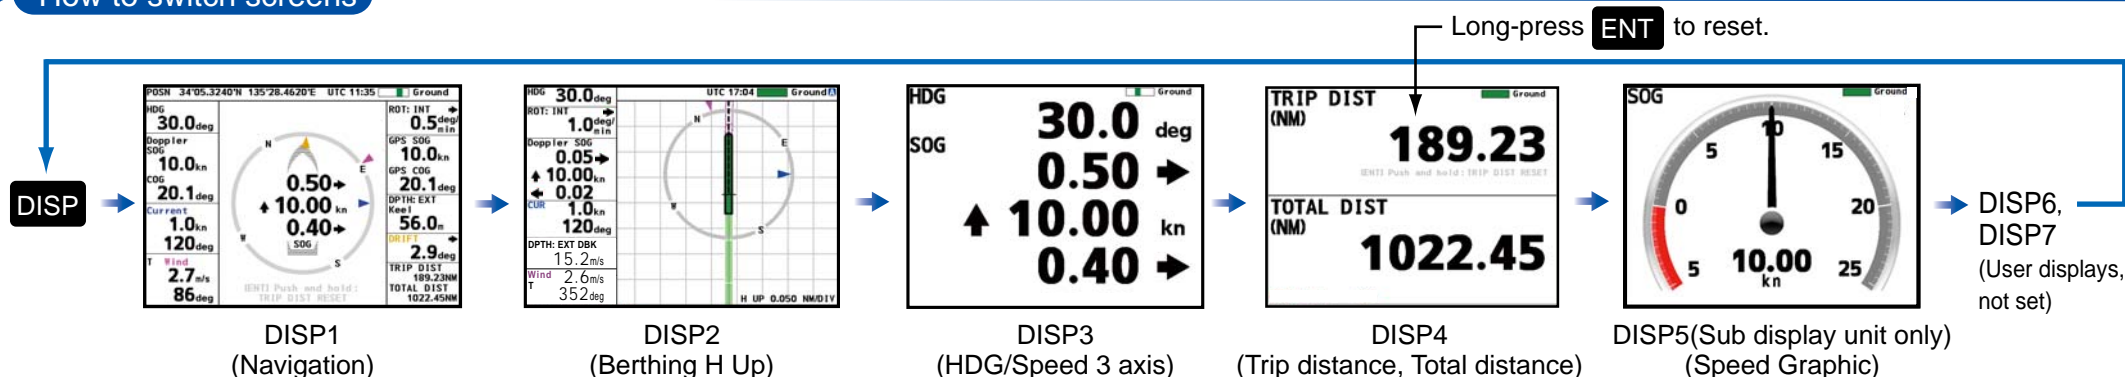

### How to edit displays

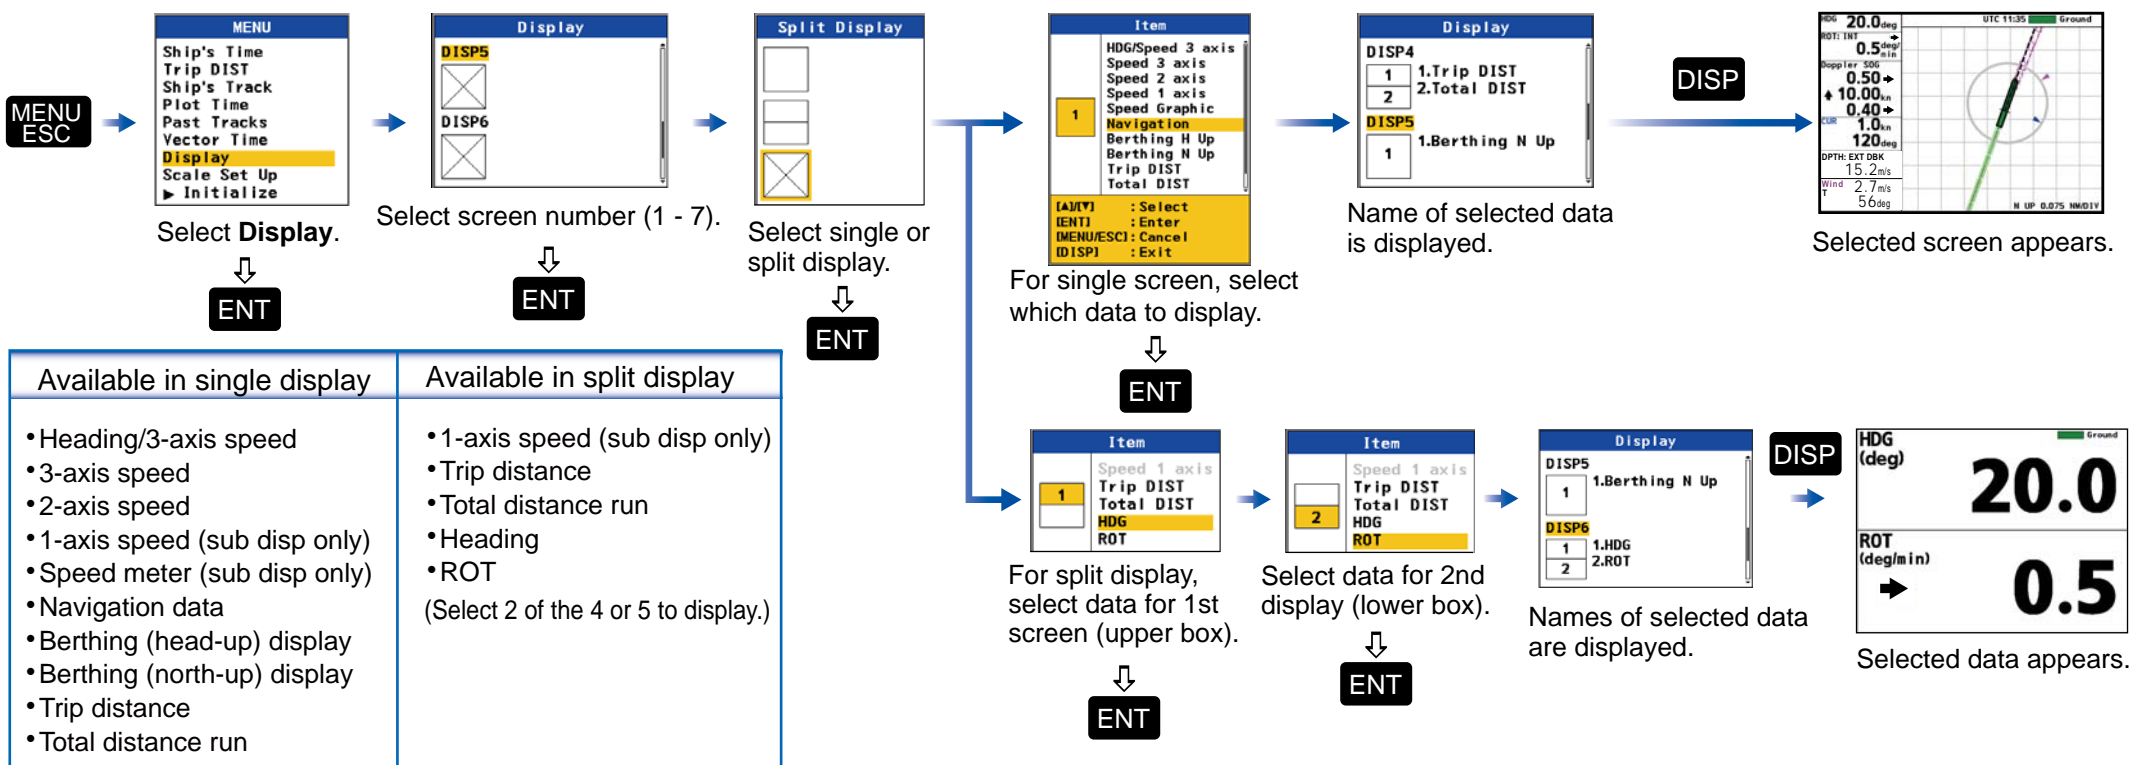


## Navigation data display

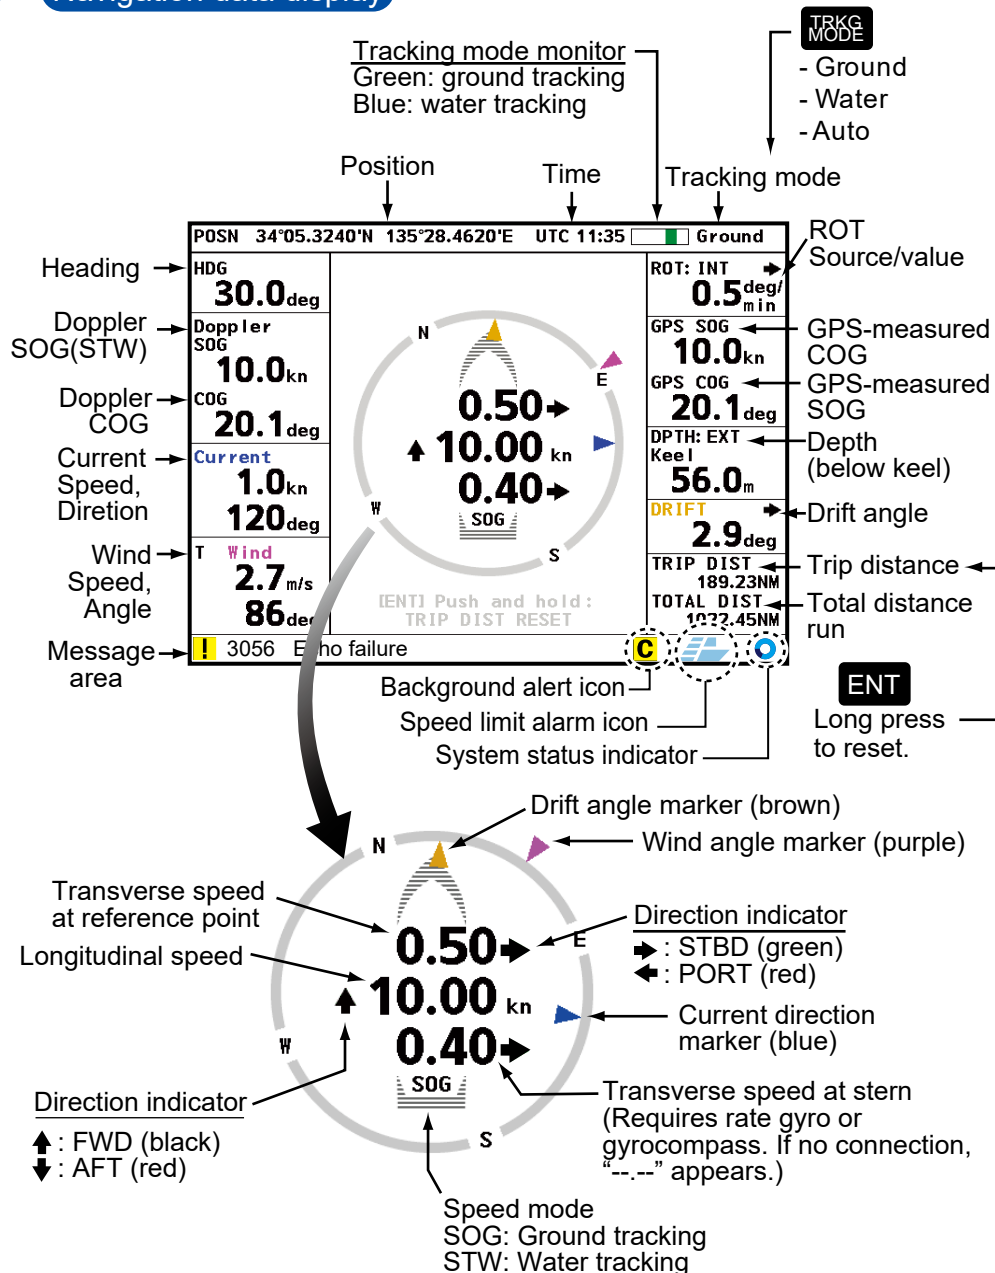


## Berthing display

Show position of ship in relation to pier, etc.

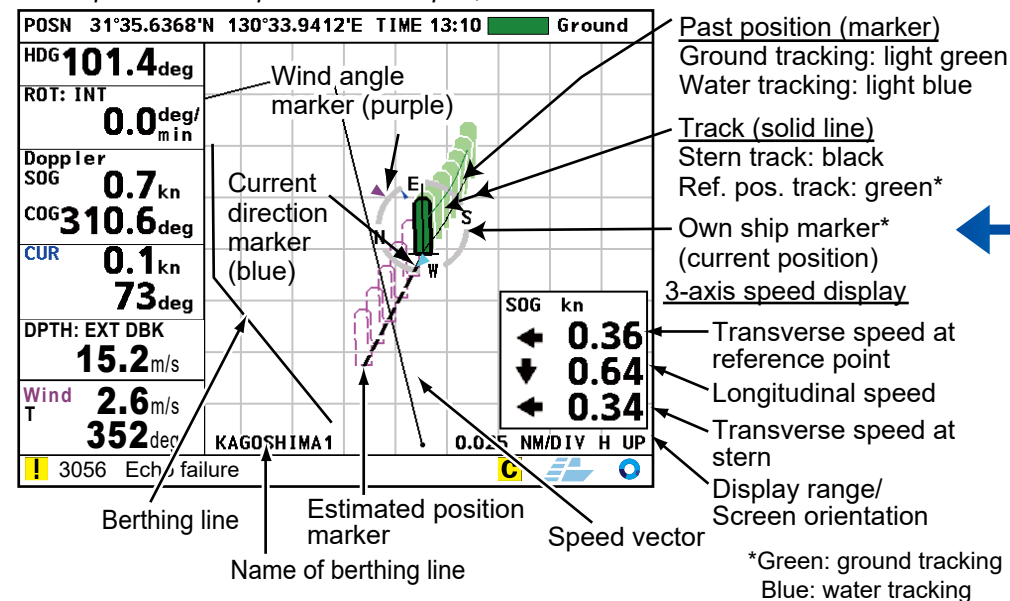

Long press **ENT** to switch the berthing display.

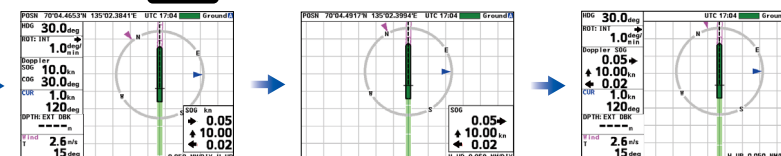

## How to change display data unit

