

Menu

MENU
DISTANCE RUN DISPLAY
DEMO
SYSTEM MENU
SYSTEM MENU2

DISTANCE RUN DISPLAY	
DATA DISPLAY	_____
CONTACT CLOSURE	
RESET	OFF
SET	_____
0.00nm	
ENT : SET	

DEMO	
SPEED	_____
+10.0 kt	
DATA DISPLAY	OFF
ENT: SET	

SYSTEM MENU	
SHIP SPEED AVG	15 SEC
SPEED OFFSET	+0.0%
TRACK DEPTH	2.0 m
XDR OFFSET	+000
SPD DATA SELECT	_____
DOPPLER	
ENT: SET	

SYSTEM MENU2	
TEST	
DIMMER	INTERNAL
ゲシゴ/LANG.	ENGLISH
ENT: SET	

Select display method.

Reset distance run.

Set distance run value.

Set speed to use.

Turn demo display on/off.

Set speed averaging interval.

Apply offset to speed value.

Set tracking depth.

Set transducer offset (for installer).

Select speed source.

Test equipment.

Select internal or external dimmer control.

Select language.


Omnipad

Select item, option on menus.

ENT key

Confirm menu setting.


Adjust dimmer

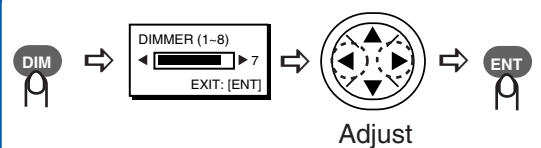

Power On/Off

Turn power on/off.

Select display

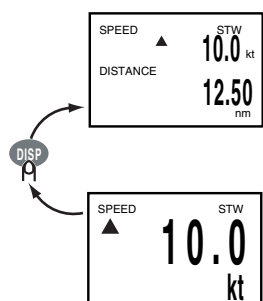

Adjust LCD contrast

