



QUICK REFERENCE CARD FOR FM-2510^(A) marine VHF radiotelephone

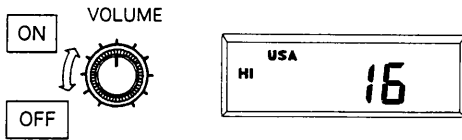

POWER ON/OFF



ADJUSTING DIMMER

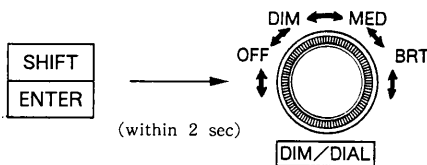


ADJUSTING VOLUME & SQUELCH

SQUELCH



Turn SQUELCH control fully counterclockwise.

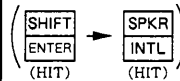

If "SPKR" (SPKR OFF) is displayed, hit SHIFT and then SPKR key to put off the mark.

VOLUME



Adjust VOLUME control for an optimum sound level.



SQUELCH











Turn SQUELCH slowly clockwise until the noise just fades away.

SELECTING DESIRED CHANNEL




CHANNEL 16

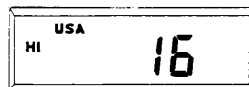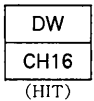


MARINE CHANNELS

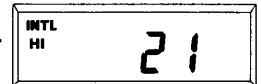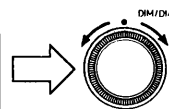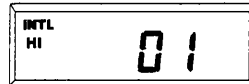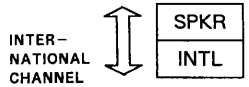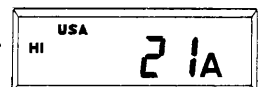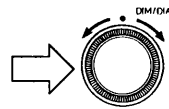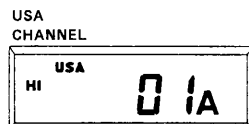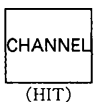




WEATHER CHANNELS

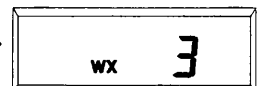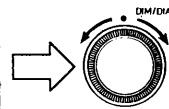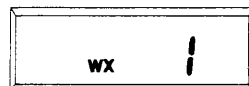

MEMORY CHANNEL

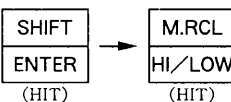

MEMORY CHANNELS

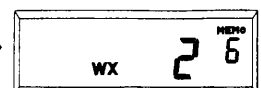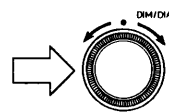
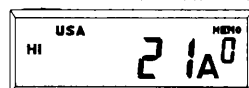


SCANNING (Adjust SQUELCH beforehand to mute unwanted noise.)


Scanning : Receives each channel in marine, weather or memory channels one by one. If no signal is present, the receiver dwells 0.15 sec. on each channel. If signal is present, it locks on the channel. Scanning will be restarted in 5 seconds after the signal has gone.

START SCANNING




MARINE CHANNELS

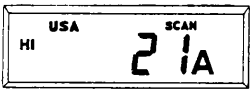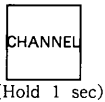




STOP SCANNING

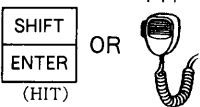

WEATHER CHANNELS

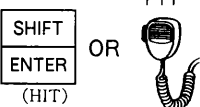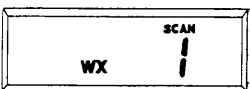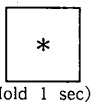

MEMORY CHANNELS

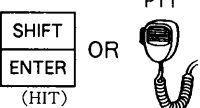
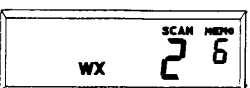
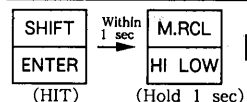


DUAL WATCHING (Adjust SQUELCH beforehand to mute unwanted noise.)

Select a channel (CH X) to watch on. (See the front side of this card.)

START DUAL WATCHING


STOP DUAL WATCHING

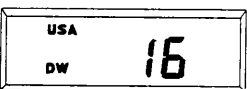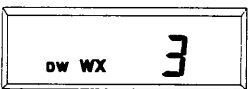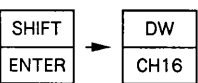



	CH X	CH16
No sig. on CH16	0.85 sec	0.15 sec
Sig. received on CH16	NEGLECTED	LOCK

..... Duty cycle

STORING MEMORY CHANNELS (USER CHANNELS)

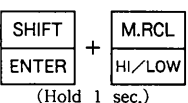

  
Holding SHIFT key, press and hold M.RCL key for more than one second.



Select a memory number.




Press SHIFT (ENTER) key to set the MEMO number.

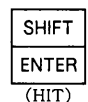


Cont.



Select the channel number to be stored into the MEMO.


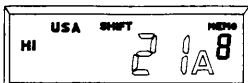


EX.
USA CH21

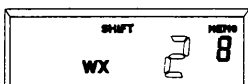

EX.
WX CH2

Press SHIFT (ENTER) key to store the channel number.

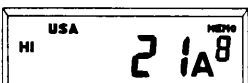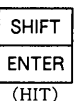

To store another channel, repeat whole sequence above.