

GPS/Plotter GP-1810

Operator's Guide

The purpose of this operator's guide is to provide the basic operating procedures for this equipment. For detailed information, refer to the operator's manual.

Selecting display

DISPLAY SEL → arrow keys Plotter Display 1, 2
Data Display 1, 2

Shifting the display

- Centering own ship:

CURSOR to turn off cursor → **CENTER**

- Centering a location:

CURSOR to turn on cursor → select location by cursor → **CENTER**

- Scrolling the display:

CURSOR to turn off cursor → Arrow keys

- Enlarging: **ZOOM IN**

- Shrinking: **ZOOM OUT**

Stopping/resuming plotting of track

PLOT  icon indicates plotting stopped.)

Erasing track

MENU → **3** → select "ERASE" and "Erasure Rng" by arrow keys → **ENT** → **ESC**

Saving event position

EVENT (max.99 positions)

- Recalling: **ENT/RECALL** → ◀ ... ▶ ...

Changing track recording interval

MENU → **2** → select "TRACK REC" and "TIME", "DIST" or "AUTO" by Arrow keys → (enter value) → **ENT** → **ESC**

Entering a mark at cursor location

CURSOR to turn on cursor → shift cursor → **MARK**

(Mark is entered at cursor location.)

Erasing marks

Place cursor on mark → **CLEAR**

Mark attributes

- Shape/ tone / line type:

MENU → **2** → select item/attribute by Arrow keys → **ENT** → **ESC**

Entering waypoints

- Through waypoint list:

WPT → ▶ to select "WPT LIST" → **ENT** → ▼ to select empty number → enter lat/long → ▶ → enter a comment → select "ENTER" → **ENT** twice → **ESC**

- By cursor:

WPT → ▼ to select "CURSOR" → **ENT** → move cursor → **ENT** → Enter waypoint number → ▼ → enter comment → **ENT** twice → **ESC**



- **At own ship's position**

WPT → ◀ to select "Own Pos" → **ENT**
 → enter waypoint no. → ▼ → enter
 comment → **ENT** twice → **ESC**

- **Event position as waypoint**

WPT → ▲ to select "EVENT Posn" →
ENT → ◀ or ▶ to recall position →
ENT → enter waypoint no. → ▼ → enter
 comment → **ENT** twice → **ESC**

Erasing waypoints

WPT → ▶ to select "WPT List" → **ENT** →
 select waypoint by arrow keys → **CLEAR** →
ENT → **ESC**

Setting destination

- **Through waypoint**

GOTO → ◀ to select WAYPOINT → enter
 waypoint number → **ENT**

- **By Cursor**

GOTO → ▼ to select "CURSOR" →
ENT → move cursor → **ENT**

- **Cancelling waypoint navigation:**

GOTO → ▲ to select "CANCEL" → **ENT**

Entering routes (max. 10 routes)

MENU → **4** → ▲ or ▼ to select empty
 route → ▶ to display list → enter waypoint
 number or enter lat/long. → ▼ → enter other
 waypoints in order → **ENT** → **ESC** twice

Following a route

- **By cursor-created route :**

GOTO → ▼ to select "CURSOR" →
ENT → place cursor → **+** → place

cursor to second waypoint → **+** →
 (repeat) → **ENT** → enter route number →
ENT

- **By route list:**

GOTO → ▶ → enter route number →
+ or **-** to select forward or
 reverse, if necessary → **ENT**

Cancelling route navigation

GOTO → ▲ to cancel → **ENT**

Setting alarms

MENU → **5** → select alarm by Arrow
 keys and set range → **ENT** → **ESC**

Changing plotter settings

MENU → **1** → ▲ or ▼ to select item → ◀
 or ▶ to select setting → set more → **ENT** →
ESC

Enabling MOB function

MENU → **1** → turn "MOB DATA" on by
 arrow keys → **ENT** → **ESC**

MEMORY CARD

- **Formatting:**

MENU → **6** → **4** → **ENT**

- **Recording:**

MENU → **6** → **1** → select items
 to record → **ENT** → enter file name →
ENT

- **Replaying:**

MENU → **6** → **2** → select item to
 replay → **ENT** → select file → **ENT**