



NAVnet

TZ2 touch

Importing Boundaries from TIMEZERO

1. Introduction
2. Importing Boundary from TIMEZERO
3. Editing Boundaries on TZTL12F/15F
4. Showing or Hiding Boundaries
5. Deleting All Boundaries
6. Capacity of Boundaries

1. Introduction

Boundary data created on a TIMEZERO PC can be imported to the TZTL12F/15F with v4.01 and later via a USB flash drive.

Below is an example case:

A mega yacht with a tender boat creates or updates boundaries on a regular basis with a TIMEZERO PC. The tender boat equipped with the TZTL12F/15F can have the latest boundaries imported from the TIMEZERO via USB flash drive.



This document describes import procedures and other details.

2. Importing Boundaries from TIMEZERO

(1) Create boundaries with a TIMEZERO PC onboard the mother vessel.




(2) Export the boundary database to a USB flash drive. Make sure to select the data format of [**TZD**] (TimeZero Data).

(3) Insert the USB to the TZTL12F/15F USB port.

(4) Access [Home] – [Settings] – [Files] – [Import Points & Routes].


(5) Select the file to be imported. In this example, the file name is [boundary test.tzd].

(6) After the import process finishes, see that the boundaries are shown on the chart screen.

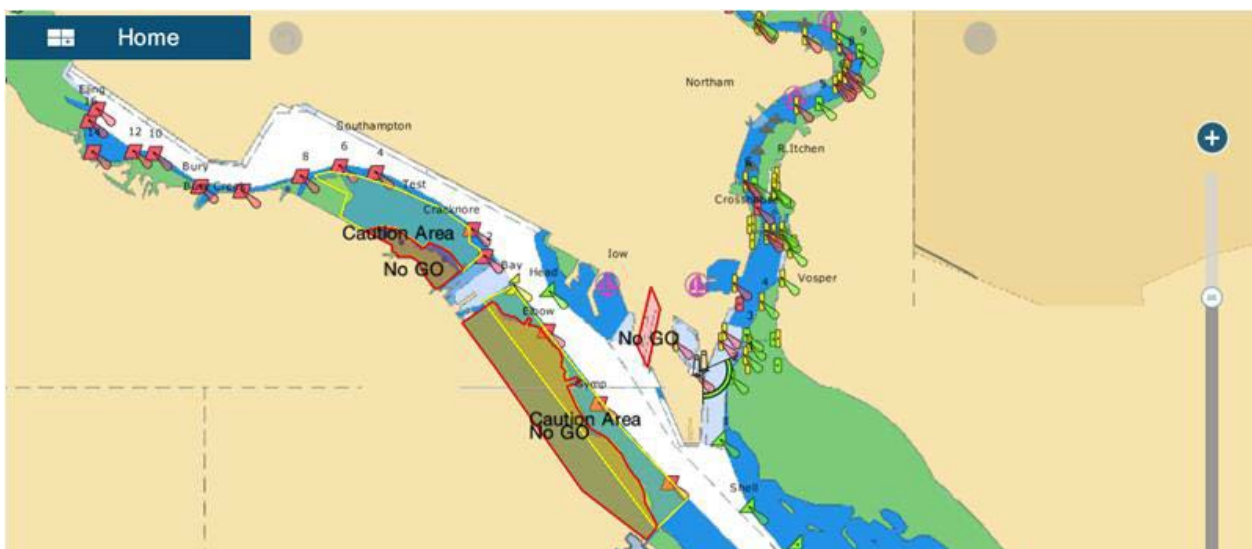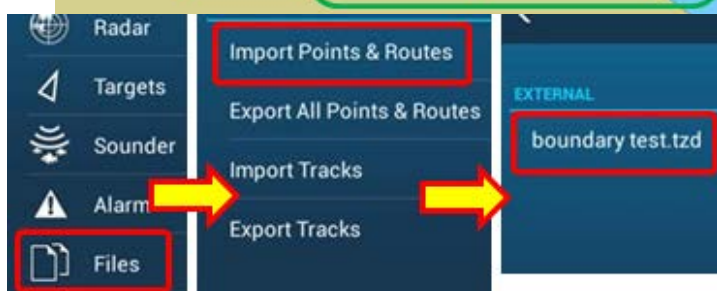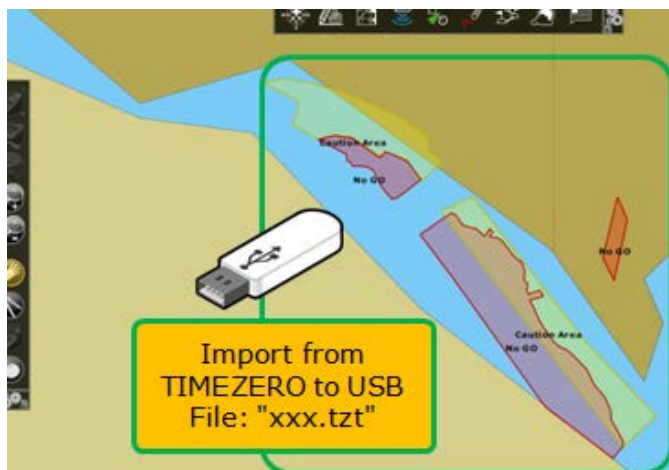


3. Editing Boundaries on TZTL12F/15F

Boundaries on the TZTL12F/15F **CANNOT** be edited for shapes or locations. However, names, colors, patterns, and comments can be edited. Tap one of the boundaries and select **[Name]**, **[Color]**, **[Pattern]**, **[Comment]**, or **[Delete]** from the contextual menu.

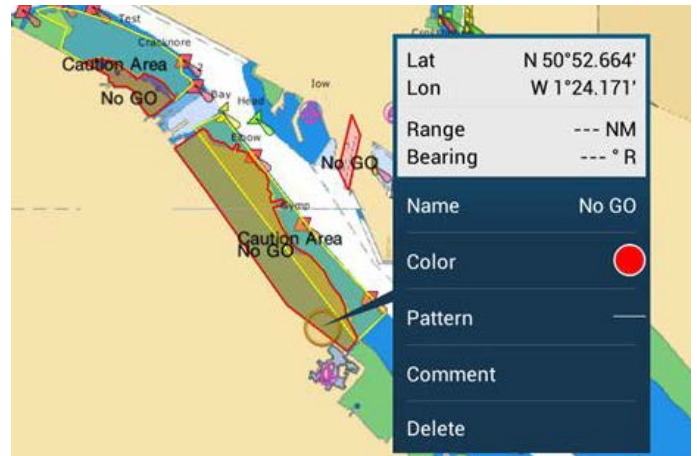

4. Showing or Hiding Boundaries

In the Layer menu on the Plotter page, boundaries can be shown or hidden.

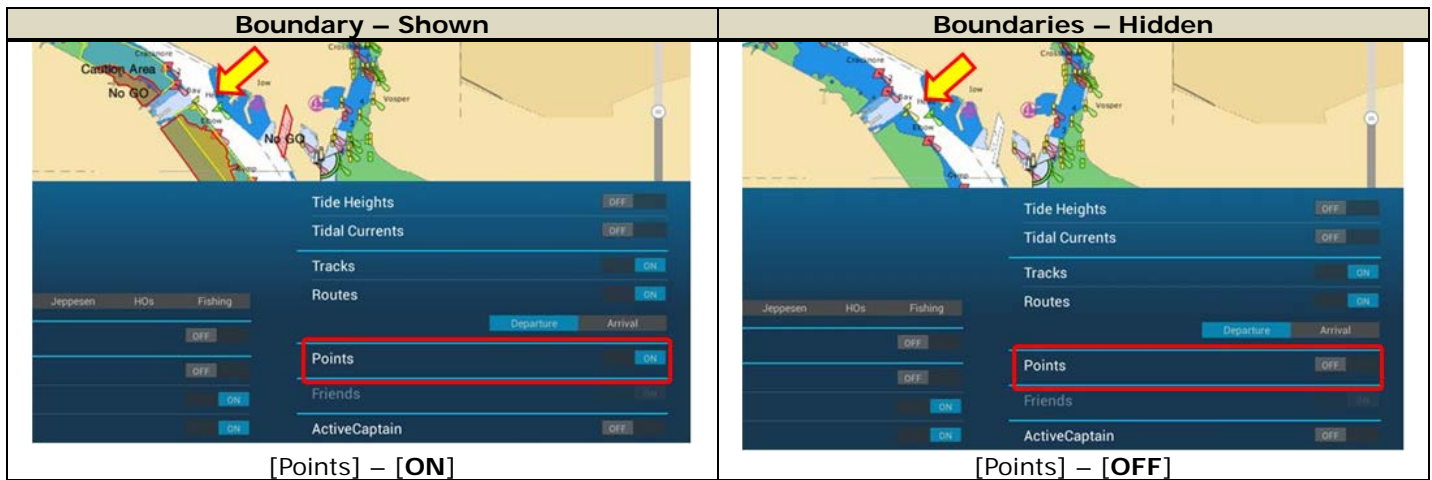


5. Deleting All Boundaries

To delete all the boundaries from the TZTL12F/15F, access **[Home] – [Settings] – [Points]** and select **[Delete All Boundaries]**.




6. Capacity of Boundaries

A maximum of **100 boundaries** can be imported to the TZTL12F/15F. When the quantity of boundaries reaches the capacity, the older data will be overwritten. To see the latest quantity of boundaries, access [Home] – [Settings] – [General] – [DATA USAGE] and see [Boundaries].

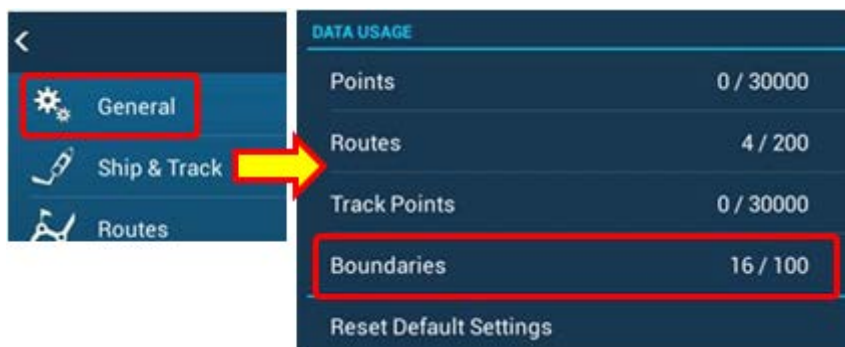

When TIMEZERO contains over 100 boundaries, only the latest 100 boundaries that have been either created or edited will be imported to the TZTL12F/15F. In the following example, 200 boundaries are available on TIMEZERO, while the latest 100 boundaries are imported to the TZTL12F/15F.

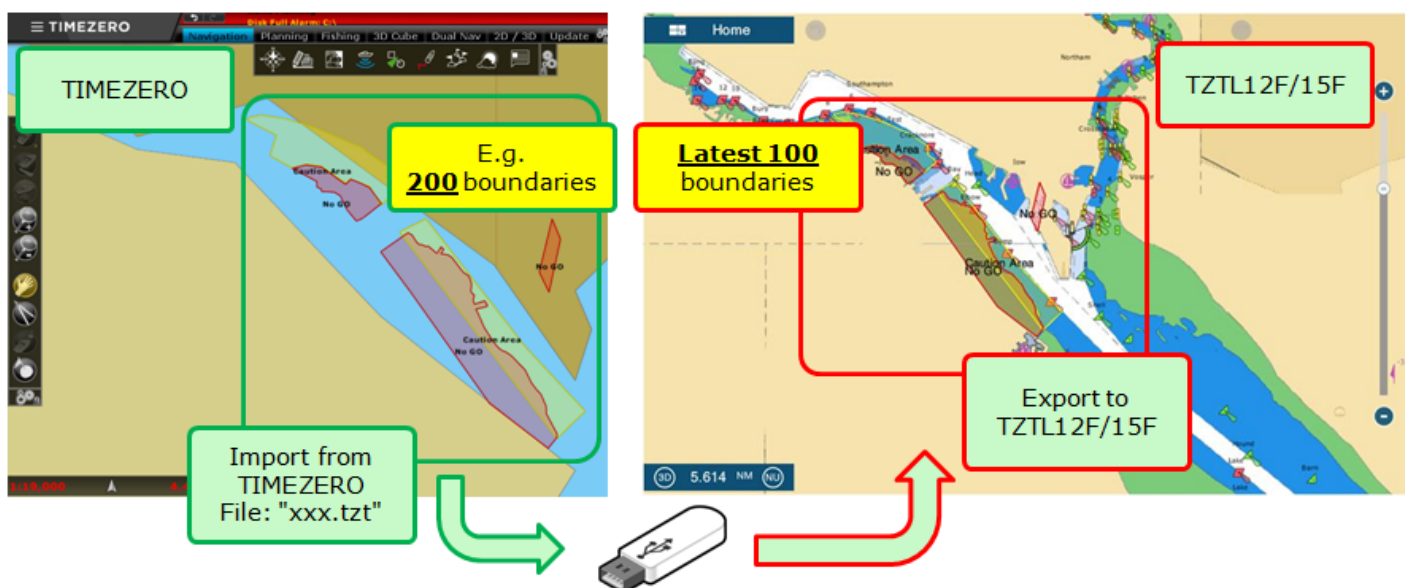

--- END ---

- All brand and product names are registered trademarks, trademarks or service marks of their respective holders.