



CSH8LMK2

Shaft Zinc

This sacrificial shaft zinc has a set screw which is marked on the drawing below. The purpose of this set screw is to help keep continuity between the zinc and the main shaft. Don't forget to tighten this set screw when you install or replace this zinc. Otherwise the hull unit may be damaged by electrical corrosion. Additionally, the shaft zinc location must be positioned in a place that allows it to be fully submerged in water when the transducer is in the retracted position.



