

# ***Installation Manual***

## ***INMARSAT-1 MES***

### ***Model FELCOM18***

---

|                                                                     |             |
|---------------------------------------------------------------------|-------------|
| <b>SAFETY INSTRUCTIONS .....</b>                                    | <b>i</b>    |
| <b>SYSTEM CONFIGURATION .....</b>                                   | <b>ii</b>   |
| <b>EQUIPMENT LISTS.....</b>                                         | <b>iii</b>  |
| <br>                                                                |             |
| <b>1. MOUNTING.....</b>                                             | <b>1-1</b>  |
| 1.1 Antenna Unit .....                                              | 1-1         |
| 1.2 Terminal Unit.....                                              | 1-3         |
| 1.3 Distress Alert/Received Call Unit IC-305/Alarm Unit IC-306..... | 1-5         |
| 1.4 Printer (option) .....                                          | 1-6         |
| 1.5 AC/DC Power Supply Unit PR-240 (option).....                    | 1-7         |
| 1.6 Junction Box IC-318.....                                        | 1-8         |
| <br>                                                                |             |
| <b>2. WIRING.....</b>                                               | <b>2-1</b>  |
| 2.1 Antenna Cable Connector at the Terminal Unit .....              | 2-2         |
| 2.2 Distress Alert/Received Call Unit IC-305 .....                  | 2-7         |
| 2.3 Alarm Unit IC-306 .....                                         | 2-7         |
| 2.4 Junction Box IC-318.....                                        | 2-8         |
| <br>                                                                |             |
| <b>3. INITIAL SETTINGS.....</b>                                     | <b>3-1</b>  |
| 3.1 How to Set the IMN (INMARSAT MOBILE NO.).....                   | 3-1         |
| 3.2 How to Set External Equipment .....                             | 3-2         |
| 3.3 How to Set the Alarm Contact.....                               | 3-3         |
| 3.4 How to Set up the AMS/BAM .....                                 | 3-3         |
| 3.5 How to Select Position-fixing Equipment .....                   | 3-6         |
| 3.6 How to Set up for 2nd DTE .....                                 | 3-6         |
| 3.7 How to Set the Russian Language .....                           | 3-7         |
| 3.8 How to Use the Paper Save Function.....                         | 3-7         |
| 3.9 How to Output EGC Messages.....                                 | 3-8         |
| <br>                                                                |             |
| <b>4. HOW TO INSTALL OPTIONAL EQUIPMENT .....</b>                   | <b>4-1</b>  |
| 4.1 GPS Board OP16-62 .....                                         | 4-1         |
| 4.2 IPX2 Kit OP16-58/OP16-59 .....                                  | 4-2         |
| 4.3 Waterproofing Kit OP16-60/OP16-67/OP16-68 .....                 | 4-7         |
| <br>                                                                |             |
| <b>5. HOW TO CHANGE POWER SUPPLY SPECIFICATIONS.....</b>            | <b>5-1</b>  |
| <br>                                                                |             |
| <b>APPENDIX 1 JIS CABLE GUIDE .....</b>                             | <b>AP-1</b> |
| <b>PACKING LISTS .....</b>                                          | <b>A-1</b>  |
| <b>OUTLINE DRAWINGS .....</b>                                       | <b>D-1</b>  |
| <b>INTERCONNECTION DIAGRAM .....</b>                                | <b>S-1</b>  |

**FURUNO ELECTRIC CO., LTD.**[www.furuno.com](http://www.furuno.com)

All brand and product names are trademarks, registered trademarks or service marks of their respective holders.



(Elemental Chlorine Free)

The paper used in this manual  
is elemental chlorine free.

## FURUNO ELECTRIC CO., LTD.

9-52 Ashihara-cho,  
Nishinomiya, 662-8580, JAPAN

• FURUNO Authorized Distributor/Dealer

All rights reserved.

Printed in Japan

Pub. No. IME-56740-K

(DAMI ) FELCOM18

A : JUN. 2012

K : APR. 02, 2019



0 0 0 1 7 6 5 1 9 1 9



# SAFETY INSTRUCTIONS



## WARNING



**ELECTRICAL  
SHOCK  
HAZARD**

Do not open the equipment unless totally familiar with electrical circuits and service manual.

Only qualified personnel should work inside the equipment.



Do not approach the radome closer than 0.5 m when it is transmitting.

Microwave radiation can cause severe injury or illness. Radiation level: 10 W/m<sup>2</sup> at 0.5 m



Turn off the power at the mains switchboard before beginning the installation. Post a sign near the switch to indicate it should not be turned on while the equipment is being installed.

Fire, electrical shock or serious injury can result if the power is left on or is applied while the equipment is being installed.



## CAUTION



Confirm that the power supply voltage is compatible with the voltage rating of the equipment.

Connection to the wrong power supply can cause fire or equipment damage. The voltage rating appears on the label at the rear of the terminal unit.



Use the correct fuse.

Use of wrong fuse can result in damage to the equipment.



Keep the following compass safe distances.

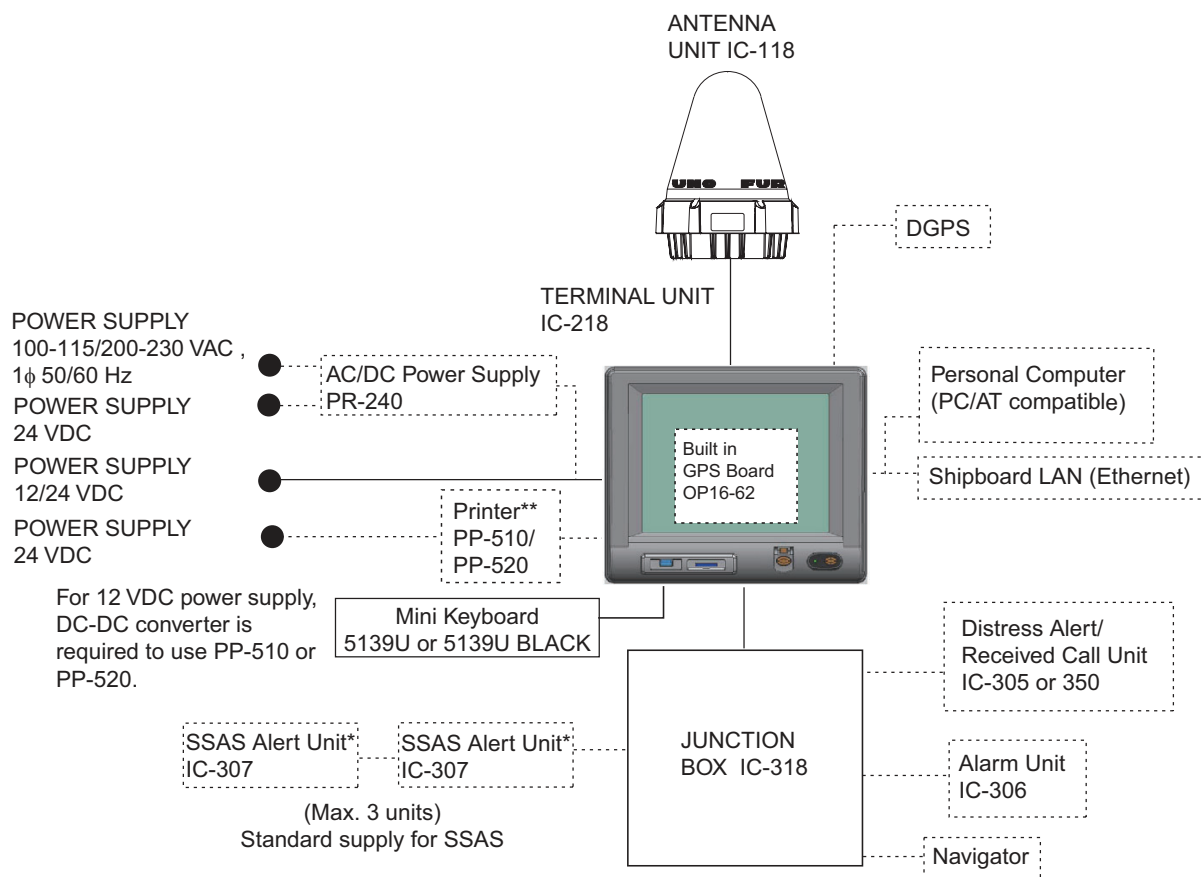
|                                              | Standard | Steering |
|----------------------------------------------|----------|----------|
| Antenna Unit IC-118                          | 0.30 m   | 0.30 m   |
| Terminal Unit IC-218                         | 0.65 m   | 0.40 m   |
| Printer PP-510 or PP-520                     | 1.00 m   | 0.80 m   |
| Junction Box IC-318                          | 0.90 m   | 0.60 m   |
| Distress Alert/<br>Received Call Unit IC-305 | 0.50 m   | 0.30 m   |
| Alarm Unit IC-306                            | 0.50 m   | 0.30 m   |
| SSAS Alert Unit IC-307                       | 0.70 m   | 0.45 m   |
| AC/DC Power Supply Unit<br>PR-240            | 0.90 m   | 0.60 m   |
| Mini keyboard                                | 0.30 m   | 0.30 m   |



Ground the equipment to prevent electrical shock and mutual interface.

# SYSTEM CONFIGURATION

Standard configuration is shown with solid line.



\*: At least two SSAS Alert Units are required.

\*\* : Mandatory for EGC operation as required by IMO RES. A.664(16).

## CATEGORY OF UNITS (required by IEC60945):

| Unit          | Category                                                   |
|---------------|------------------------------------------------------------|
| Terminal Unit | Protected from the weather (For indoor installation)       |
| Antenna Unit  | Exposed to the weather (For installation on the open deck) |
| Other Units   | Protected from the weather (For indoor installation)       |

# EQUIPMENT LISTS

## Standard supply

| Name                   | Type       | Code No.    | Qty | Remarks                              |
|------------------------|------------|-------------|-----|--------------------------------------|
| Antenna Unit           | IC-118     | -           | 1   | w/FP16-02501                         |
| Terminal Unit          | IC-218     | -           | 1   | w/CP16-05200, SP16-01301, FP16-02600 |
| Junction Box           | IC-318     | -           | 1   |                                      |
| SSAS Alert Unit        | IC-307     | -           | 2   | For SSAS only                        |
| Installation Materials | CP16-05511 | 001-189-560 | 1   | For IC-118, 30 m                     |

## Optional supply

| Name                               | Type                | Code No.       | Qty | Remarks                  |
|------------------------------------|---------------------|----------------|-----|--------------------------|
| Printer                            | PP-520              | -              | 1   |                          |
| Distress Alert/ Received Call Unit | IC-305              | -              | 1   |                          |
| Alarm Unit                         | IC-306              | -              | 1   |                          |
| AC/DC Power Supply Unit            | PR-240              | -              | 1   |                          |
| SSAS Alert Unit                    | IC-307              | -              | 1   |                          |
| PC Terminal Software               | OP16-57             | 001-180-050    | 1   |                          |
| Cable Assy.                        | COSPEVVSBC 5PX0.2LF | 000-560-452-11 | 1   | 5P, 10 m                 |
|                                    | COSPEVVSBC 5PX0.2LF | 000-103-868-11 | 1   | 5P, 20 m                 |
|                                    | COSPEVVSBC 5PX0.2LF | 000-103-869-11 | 1   | 5P, 30m                  |
|                                    | COSPEVVSBC 5PX0.2LF | 000-132-829-11 | 1   | 5P, 40 m                 |
|                                    | COSPEVVSBC 5PX0.2LF | 000-132-828-11 | 1   | 5P, 50 m                 |
| Flush Mount Kit                    | OP16-27             | 004-448-000    | 1   | For IC-305/306           |
|                                    | OP16-28             | 004-448-010    | 1   | For IC-307               |
| Antenna Unit                       | IC-118              | -              | 1   |                          |
| Antenna Bracket                    | CP16-05602          | 001-189-610    | 1   | For IC-118               |
| Antenna Base w/Hose Clamp          | OP16-72             | 001-323-420    | 1   |                          |
| Antenna Base w/ Mount Pipe         | OP16-73             | 001-323-430    | 1   |                          |
| Antenna Base 2/U Bolt              | OP16-74             | 001-313-440    | 1   |                          |
| Antenna Base                       | OP16-75             | 001-313-450    | 1   |                          |
| IPX2 Kit                           | OP16-58             | 001-180-070    | 1   | D-sub cables             |
| Water Proof Kit                    | OP16-59             | 001-180-080    | 1   | For IC-218               |
|                                    | OP16-60             | 001-180-090    | 1   | For IC-318               |
|                                    | OP16-67             | 001-189-380    | 1   | For IC-305               |
|                                    | OP16-68             | 001-189-400    | 1   | For IC-307               |
| GPS Board Kit                      | OP16-62             | 001-180-100    | 1   | For IC-218               |
| Bracket Kit                        | OP16-65             | 001-182-900    | 1   |                          |
| Key Template                       | OP05-135            | 001-184-560    | 1   | For Russian flag vessels |

## EQUIPMENT LISTS

| Name                   | Type       | Code No.    | Qty | Remarks                                                                           |
|------------------------|------------|-------------|-----|-----------------------------------------------------------------------------------|
| Installation Materials | CP16-05750 | 000-021-704 | 1   | w/o pipe, 30 m                                                                    |
|                        | CP16-05790 | 000-021-715 |     | w/o pipe, 30 m,<br>for armored cable                                              |
|                        | CP16-05760 | 000-021-713 |     | w/o pipe, 40/50 m,<br>for armored cable                                           |
|                        | CP16-05770 | 000-021-714 |     | w/o pipe, 100 m,<br>for armored cable                                             |
| Hose clamp             | OP16-76-1  | 001-443-450 | 1   | Nominal Diameter,<br>Mast Diameter<br>For 40A ( $\phi$ 48.6)                      |
|                        | OP16-76-2  | 001-443-460 | 1   | Nominal Diameter,<br>Mast Diameter<br>For 65A to 80A ( $\phi$<br>76.3 to 89.1)    |
|                        | OP16-76-3  | 001-443-470 | 1   | Nominal Diameter,<br>Mast Diameter<br>For 90A to 100A ( $\phi$<br>101.6 to 114.3) |

# 1. MOUNTING

## NOTICE

**Do not apply paint, anti-corrosive sealant or contact spray to coating or plastic parts of the equipment.**

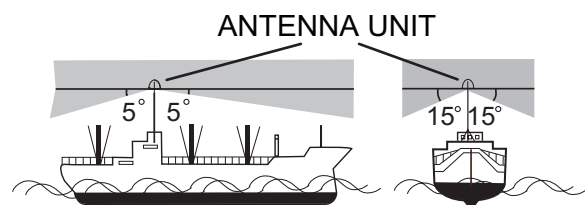
Those items contain organic solvents that can damage coating and plastic parts, especially plastic connectors.

## 1.1 Antenna Unit


### 1.1.1 Mounting location

Refer to IMO resolutions A663(16) and A.807(19), as amended.


- Mount the omnidirectional antenna unit high atop a mast clear of stays and the turning diameter of a radar antenna. The ideal mounting location would be where no obstacle appears in the fore and aft directions down to  $-5^\circ$  and down to  $15^\circ$  in the port and starboard directions. The concept is illustrated in the figure below. Shadow sector of the antenna mast, whip antenna, etc. should be within two degrees at one meter from the antenna unit.



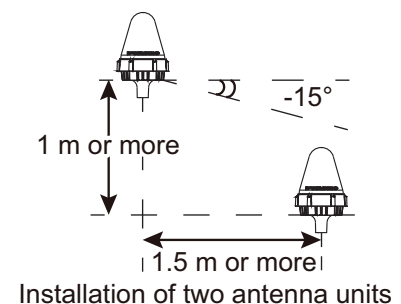- When two FELCOMs are installed, the horizontal separation shall be at least 1.5 m and the vertical separation, 1 m or more.
- If Inmarsat ship earth stations other than C are installed, separate the Inmarsat antenna at least 8 m from the Inmarsat-C antenna.



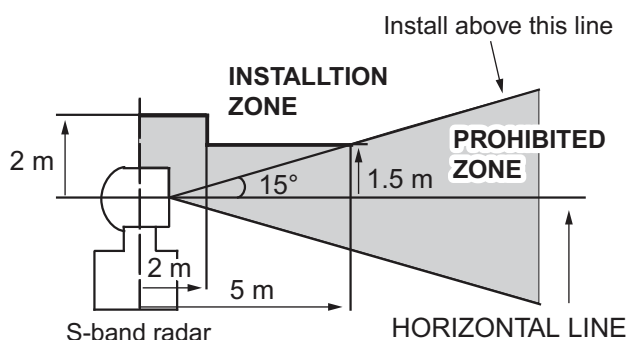- Separate the antenna unit from an S-band radar as shown in the figure to the right:



## 1. MOUNTING

- The allowable vibration level as specified by Inmarsat is as shown in the table below.

*Allowable vibration level*

| Frequency    | Level                                  |
|--------------|----------------------------------------|
| 2 to 10 Hz   | 2.54 mm Peak Amplitude                 |
| 10 to 100 Hz | 9.8 m/s <sup>2</sup> Peak Acceleration |

- Avoid the location near tunnels and stacks; smoke and soot on the radome can lower signal level (10 m or more in horizontal distance).
- Separate the antenna unit 5 m from HF, VHF or 27 MHz antenna.

### 1.1.2 Mounting

The antenna cable is available in lengths of 30 m, 50 m and 100 m (see table below).

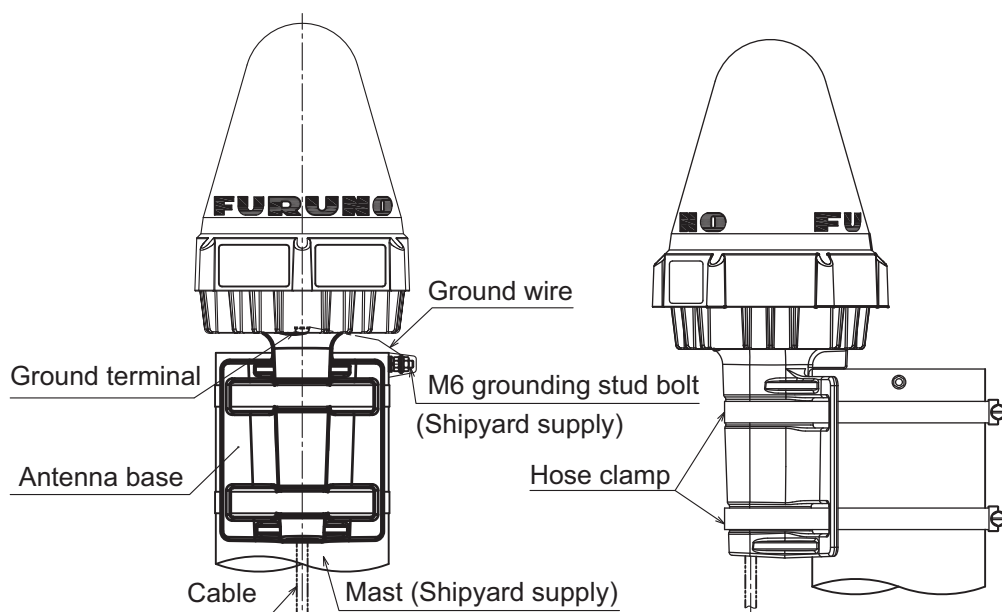
| Cable length    | Type            | Remarks                               |
|-----------------|-----------------|---------------------------------------|
| 30 m (no armor) | TP5FBAW-5DFB    | TNC connector at both ends            |
| 30 m (w/armor)  | 5D-FB-CV-NP     | N connector on one end (antenna side) |
| 50 m (w/armor)  | 8D-FB-CV        |                                       |
| 100 m (w/armor) | 12D-SFA-LITE-CV |                                       |

**Note:** When using the optional installation kit to install the antenna, refer to the outline drawings at the back of this manual.

#### Antenna installation

Select a location to weld the grounding stud bolt (M6), keeping in mind the length of the grounding cable RW-4747 (Included as installation materials) is 340 mm. The location for welding the grounding stud bolt should allow the antenna ground and mast ground to be connected with the grounding cable (to ground lightning strikes). For detailed measurements, refer to the outline drawings at the back of this manual.

For information on wiring the antenna cable, refer to the manual included with the antenna unit.



## 1.2 Terminal Unit

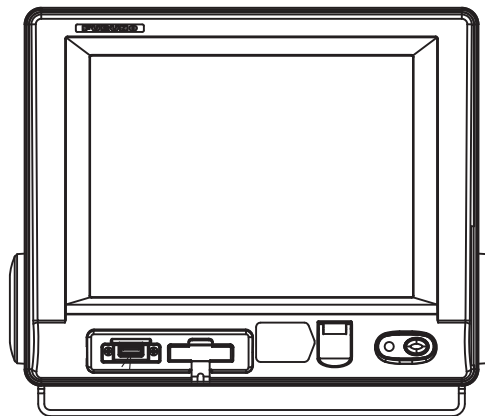
Select a mounting location, considering the following points.

- The temperature and humidity should be moderate and stable.
- For maintenance and checking purposes, leave sufficient space at the sides and rear of the unit and leave slack in cables.

### Mounting

#### Tabletop mount


- 1) Fix the hanger (option) to a table with four self-tapping screws (5x20, supplied), referring to the outline drawing at the back of this manual.
- 2) Screw knobs and washers to terminal unit loosely.
- 3) Set the terminal unit to the hanger and tighten knobs.



*Terminal unit, tabletop mounting*

#### Flush mount

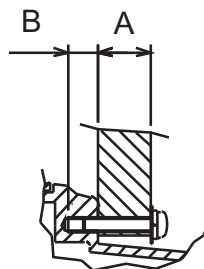Use locally supplied pan head screws (M4x20) when the thickness of the bulkhead is from 11 to 14 mm. For bulkhead which exceeds 14 mm in thickness the length of the pan head screws should be bulkhead thickness  $A + 7.8 \pm 2$  mm. Also the length of B should be max. 8 mm ( $B \leq 8$  mm).



*Bulkhead, sectional view*


1. Prepare a cutout in the mounting location whose dimensions are as shown in the outline drawing at the back of this manual.
2. Fix the display unit with six pan head screws, inserting them from the inside of the bulkhead. Refer to the outline drawing at the end of this manual.

## 1. MOUNTING


### **How to connect the LAN cable**

Connect the LAN cable using the sponge and LAN cable support (supplied). This procedure should be done even if the LAN cable is not used, to waterproof the unit.

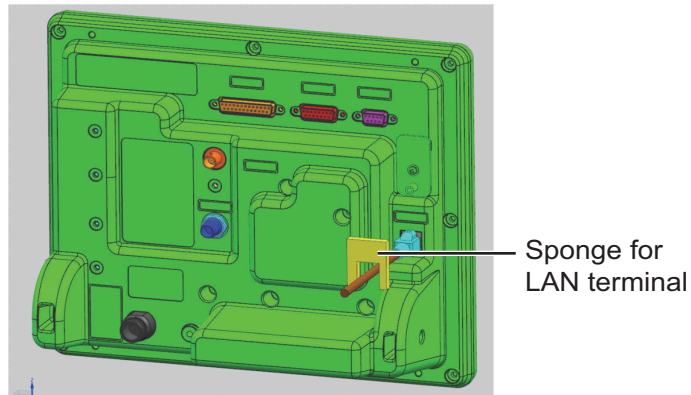
1. Attach the sponge for LAN terminal to the LAN terminal.



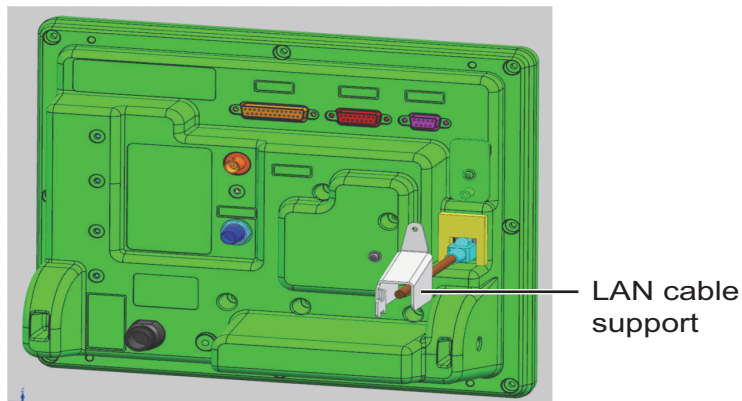2. Use the binding screw (pre-attached at the rear of the unit) to fix the LAN cable support.




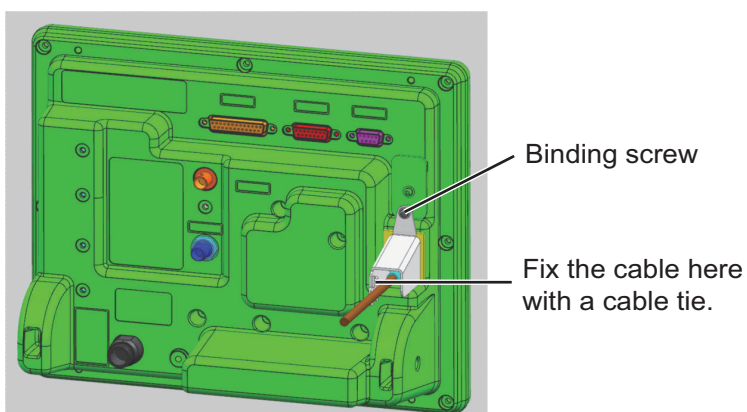3. Connect the LAN cable to the terminal unit. Fix the LAN cable to the LAN cable support with a cable tie (supplied).




## Keyboard

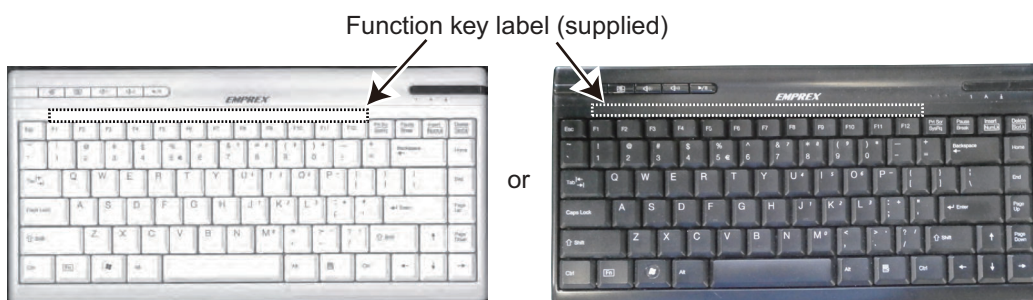
1. Attach the function key label (IMN-C<sub>18</sub>) to the keyboard as shown below.
2. Attach four fasteners (small, supplied) to the bottom of the keyboard.
3. Attach four fasteners (large, supplied) to the small fasteners attached at step 2.
4. Remove the paper from four fasteners.
5. Fasten the keyboard to the mounting place.



## 1.3 Distress Alert/Received Call Unit IC-305/Alarm Unit IC-306

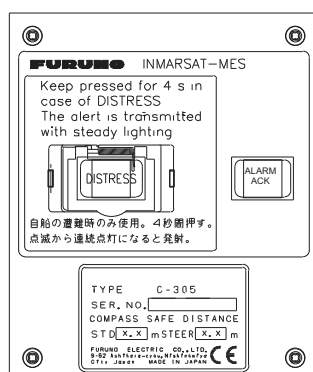

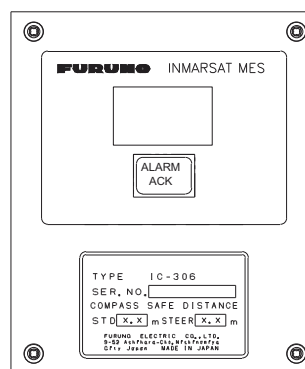Distress alert/received call unit IC-305




Alarm unit IC-306

## Bulkhead mounting

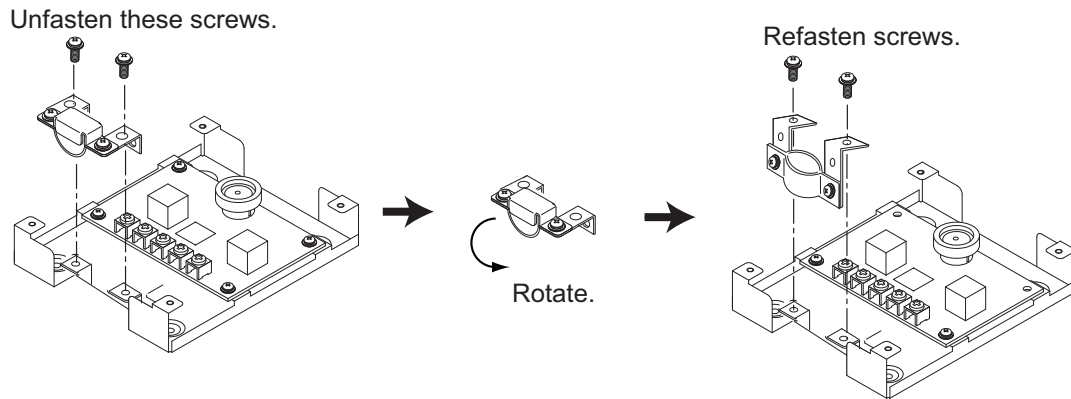1. Remove four screws from the unit to separate the bottom chassis from the top cover.
2. Fix the bottom chassis to the mounting location with four self-tapping screws (supplied).
3. Cable can be led in from the bottom or the rear panel. For rear panel entrance, change the clamp orientation as follows.
  - 1) Unfasten two screws to remove the cable clamp.
  - 2) Turn the clamp 90 degrees.

## 1. MOUNTING

- 3) Refasten two screws removed at step 1) to fix the clamp.



- 4) Run the interconnection cable through a cable entrance and connect it to terminal board.

### Flush mount

The optional flush mounting kit OP16-27 (Code No.: 004-448-000) is required.

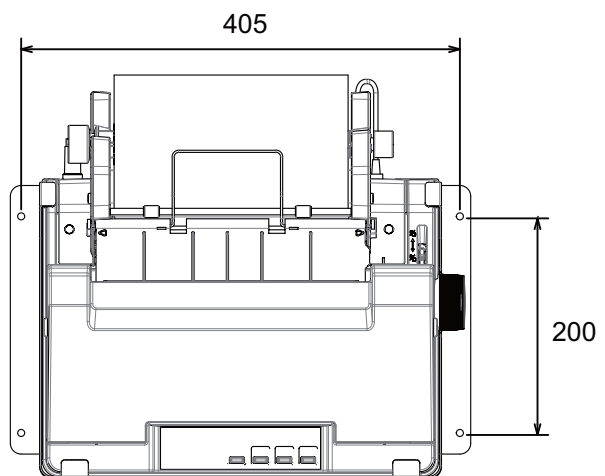
| Name               | Type          | Code No.       | Qty |
|--------------------|---------------|----------------|-----|
| Fixture            | 16-018-4201-1 | 100-317-841    | 1   |
| Pan head screw     | M3x6          | 000-800-362    | 4   |
| Self-tapping screw | 4x16          | 000-162-605-10 | 4   |

1. Make a cutout in the mounting location, referring to the outline drawings at the back of this manual.
2. Fix the unit to the fixture with four pan head screws (supplied).
3. Fasten four self-tapping screws ( $\phi 5$ , supplied) to fasten the fixture to the mounting position.

## 1.4 Printer (option)


Mount the printer (PP-510 or PP-520) on a tabletop with the fixtures supplied. Refer to the outline drawing at the end of this manual for the mounting dimensions. The right figure is for PP-520

1. Decide the location of the printer.
2. Set the ink ribbon cartridge and the roll paper to the printer.
3. Set the fixtures (left/right) onto the printer. Fasten them with four self-tapping screws ( $\phi 5 \times 20$ ).



## 1.5 AC/DC Power Supply Unit PR-240 (option)

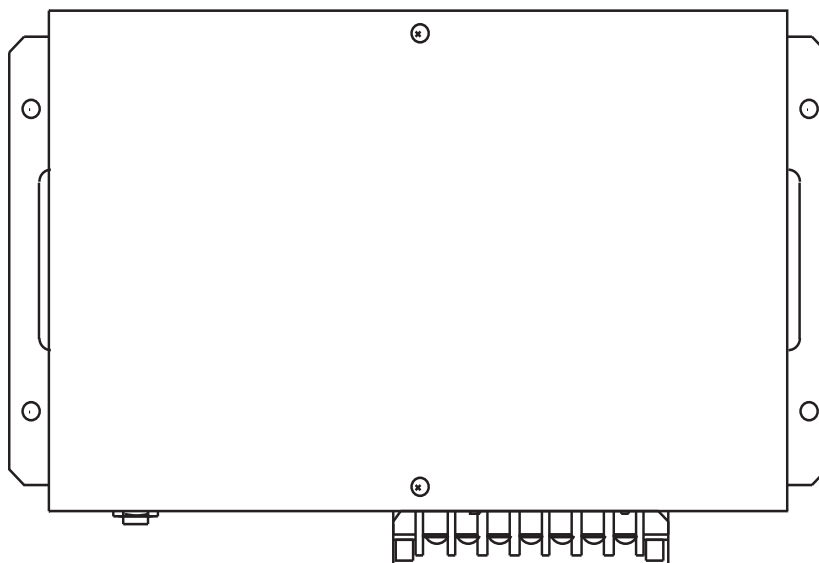Fix the unit on a table with four self-tapping screws.




*AC/DC power supply unit PR-240*

## 1.6 Junction Box IC-318

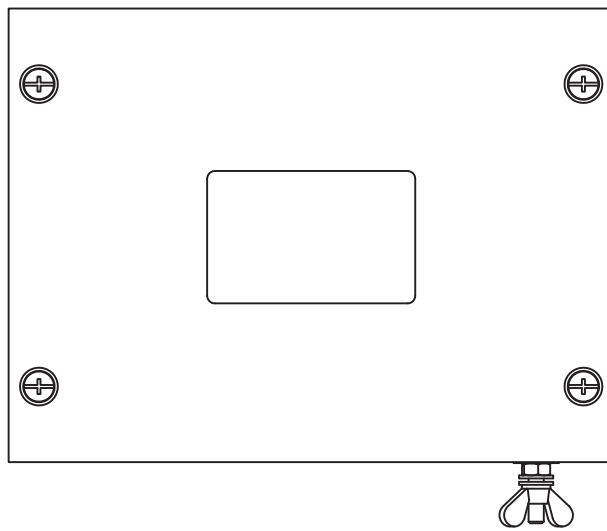
The junction box IC-318 is connected to the terminal unit by using the cable assy 16S0344 (2 m, attached to the junction box). Install the junction box within 2 m from the terminal unit.

1. Remove four screws from the unit to separate the bottom chassis from the top chassis.
2. Fix the bottom chassis to the mounting location with four self-tapping screws (4x16, supplied).
3. Connect the cables referring to Chapter 2.



*Junction box IC-318*


## 2. WIRING

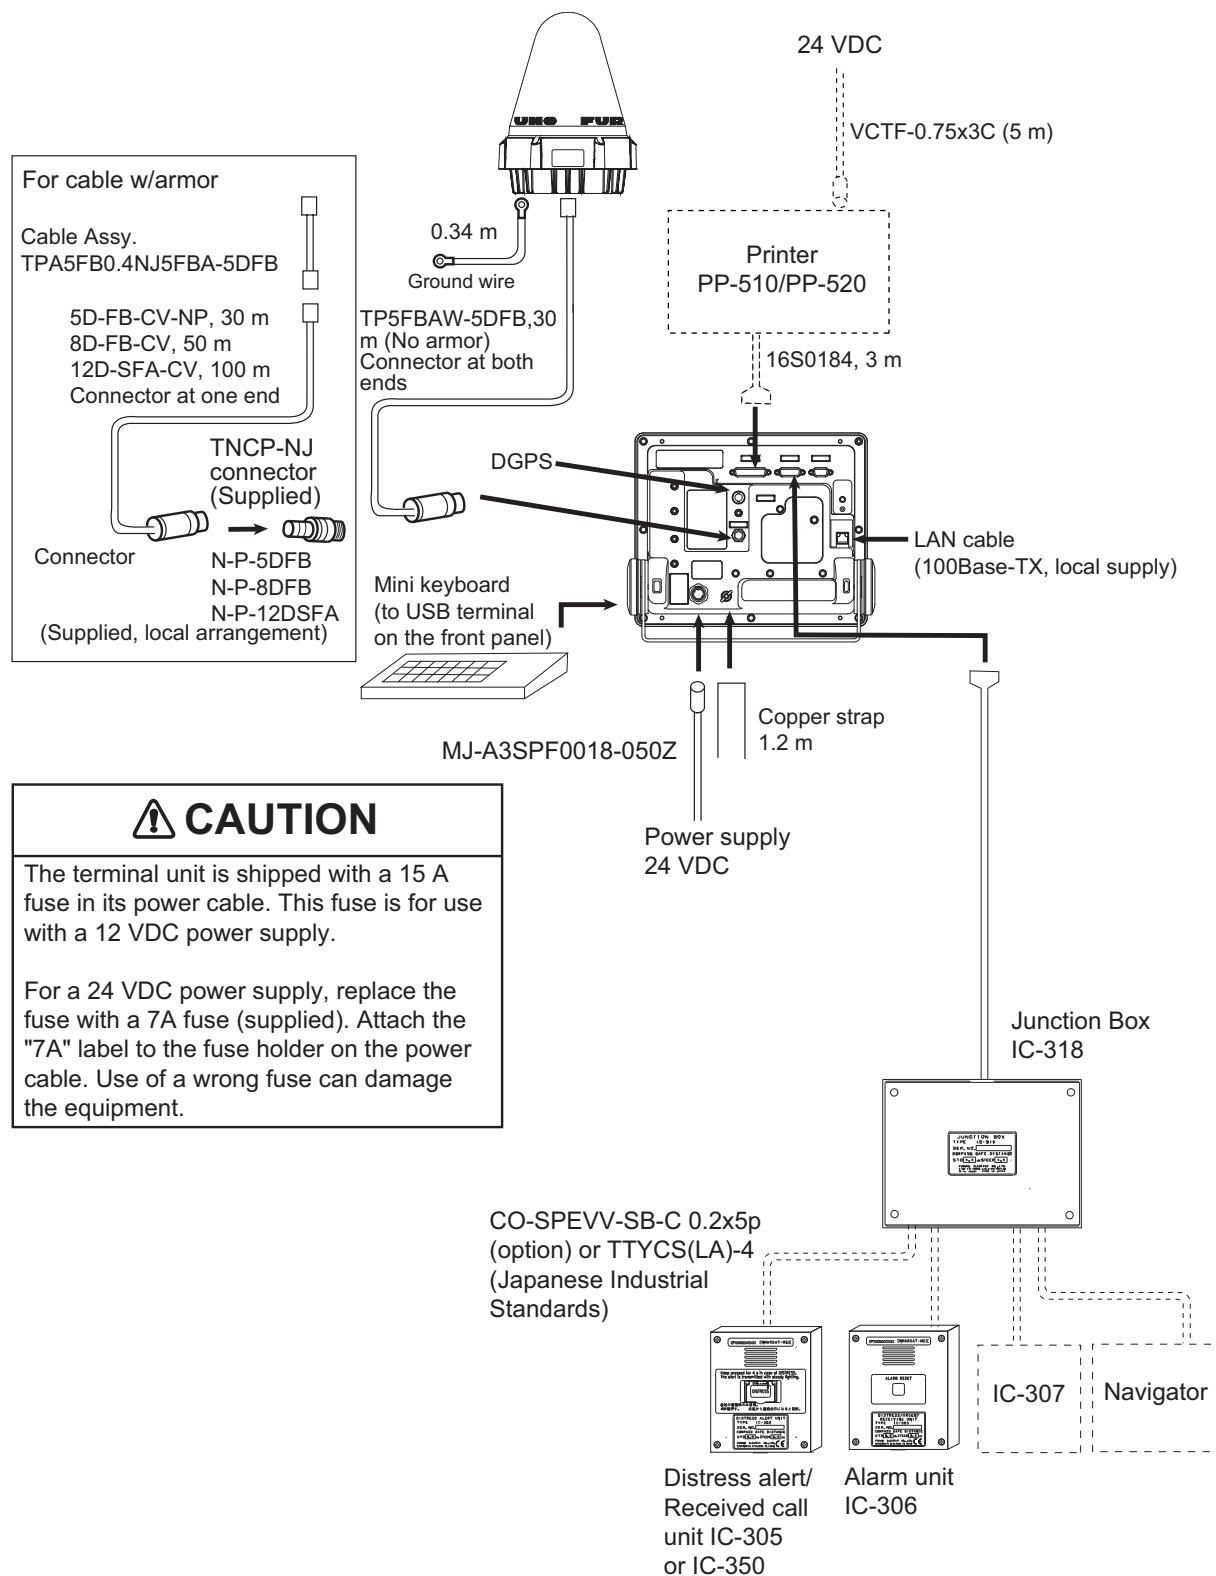

Wiring of FELCOM 18


## 2.1 Antenna Cable Connector at the Terminal Unit
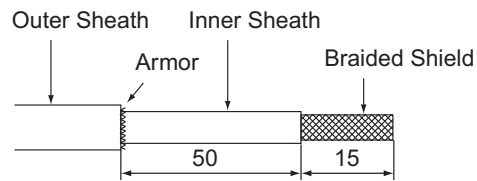
### 2.1.1 Antenna cable TP5FBAW-5DFB (30 m)



Remove the outer sheath, armor and inner-sheath by the dimensions shown.

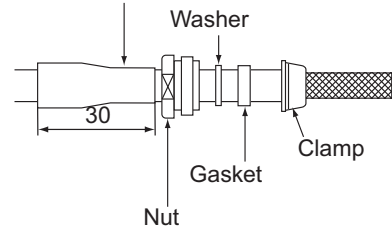Cover with heat-shrink tubing and heat.





Set the nut, washer, gasket, clamp onto cable as shown.

- Be careful not to damage the braided shield.

Fold back the braided shield onto the clamp and trim the shield as shown.

Make the length of insulator 3.5 mm and the length of the core 5 mm.

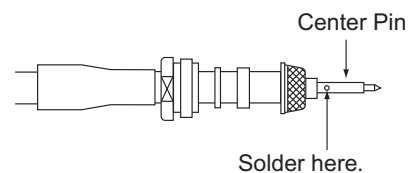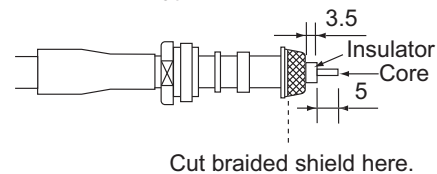- Be careful not to damage the core.




Set the center pin to the core and solder the pin from the hole in the pin.

(Pull the pin with approx. 1 kg of force to check strength of solder joint.)


- Be sure the solder is flush with surface of pin.

- Be sure there is no gap between center pin and insulator. Do not push the center pin into the insulator.

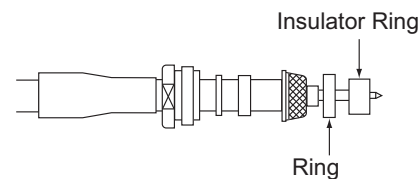- Do the soldering as quickly as possible so as not to deform the insulator.



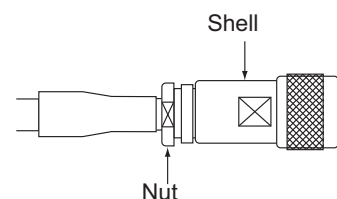Set the ring and insulator ring onto the cable.




Set the shell to the cable then turn the nut to tighten. (Do not tighten by turning shell.) - Use a wrench or the like to tighten the nut securely.


*How to fabricate antenna cable TP5FBAW-5DFB*

## 2.1.2 Antenna cable 5D/8D-FB-CV (50 m)
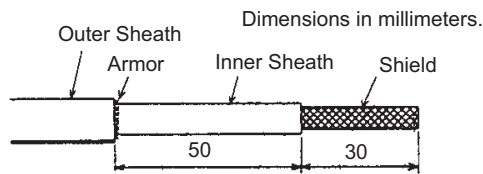
### Connector type N-P-5D-FB




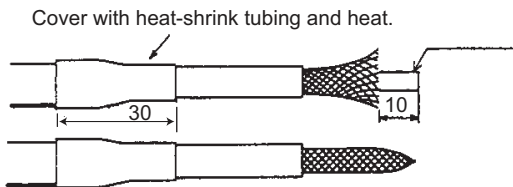Remove outer sheath and armor by the dimensions shown left.  
Expose inner sheath and shield by the dimensions shown left.




Remove insulator and core by 10 mm.

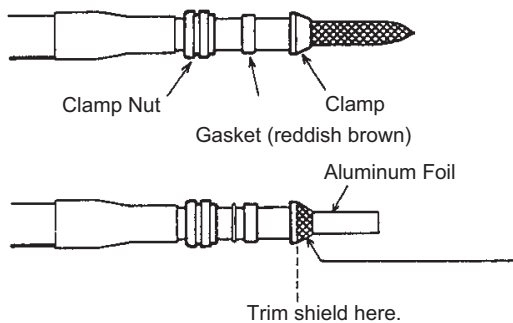Twist shield end.



Slip on clamp nut, gasket and clamp as shown left.

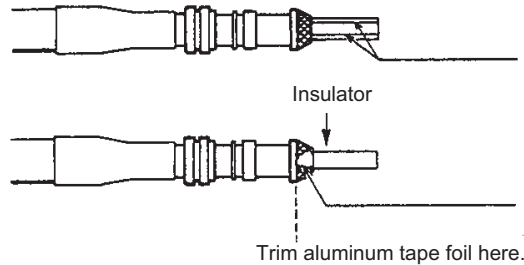Fold back shield over clamp and trim.




Cut aluminum foil at four places, 90° from one another.

Fold back aluminum tape foil onto shield and trim.



Expose the insulator by 1 mm.

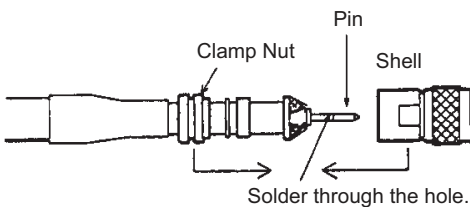Expose the insulator by 5 mm.




Slip the pin onto the conductor. Solder them together through the hole on the pin.

Insert the pin into the shell. Screw the clamp nut into the shell.  
(Tighten by turning the clamp nut. Do not tighten by turning the shell.)


*How to fabricate antenna cable 8D-FB-CV*

## 2. WIRING
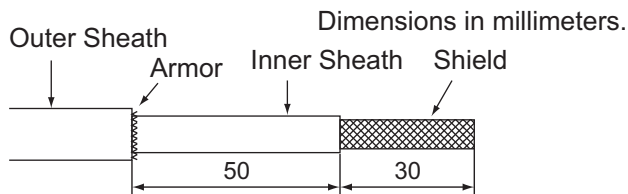
### **Connector type N-P-8D-FB**



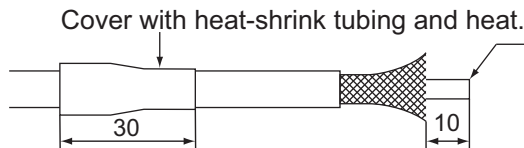
Remove outer sheath and armor by the dimensions shown left.  
Expose inner sheath and shield by the dimensions shown left.




Remove insulator and core by 10 mm.



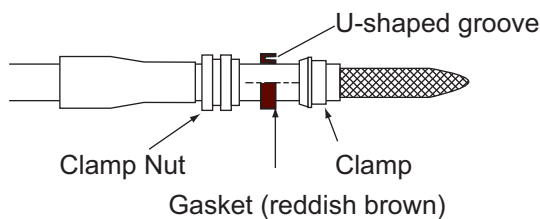
Twist shield end.



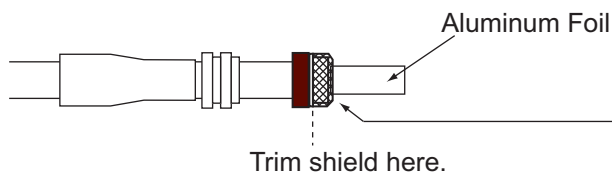
Slip on clamp nut, gasket and clamp as shown left.




Fold back shield over clamp and trim.



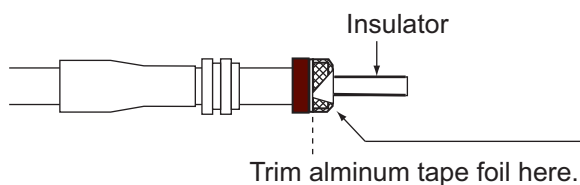Cut aluminum foil at four places, 90° from one another.




Fold back alminum tape foil onto shield and trim.




Expose the insulator by 1 mm.

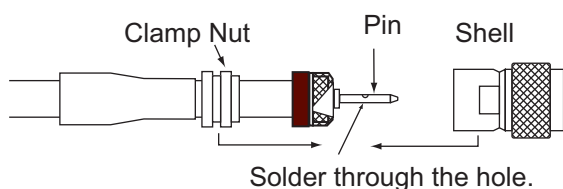Expose the core by 1 mm.




Slip the pin onto the conductor. Solder them together through the hole on the pin.

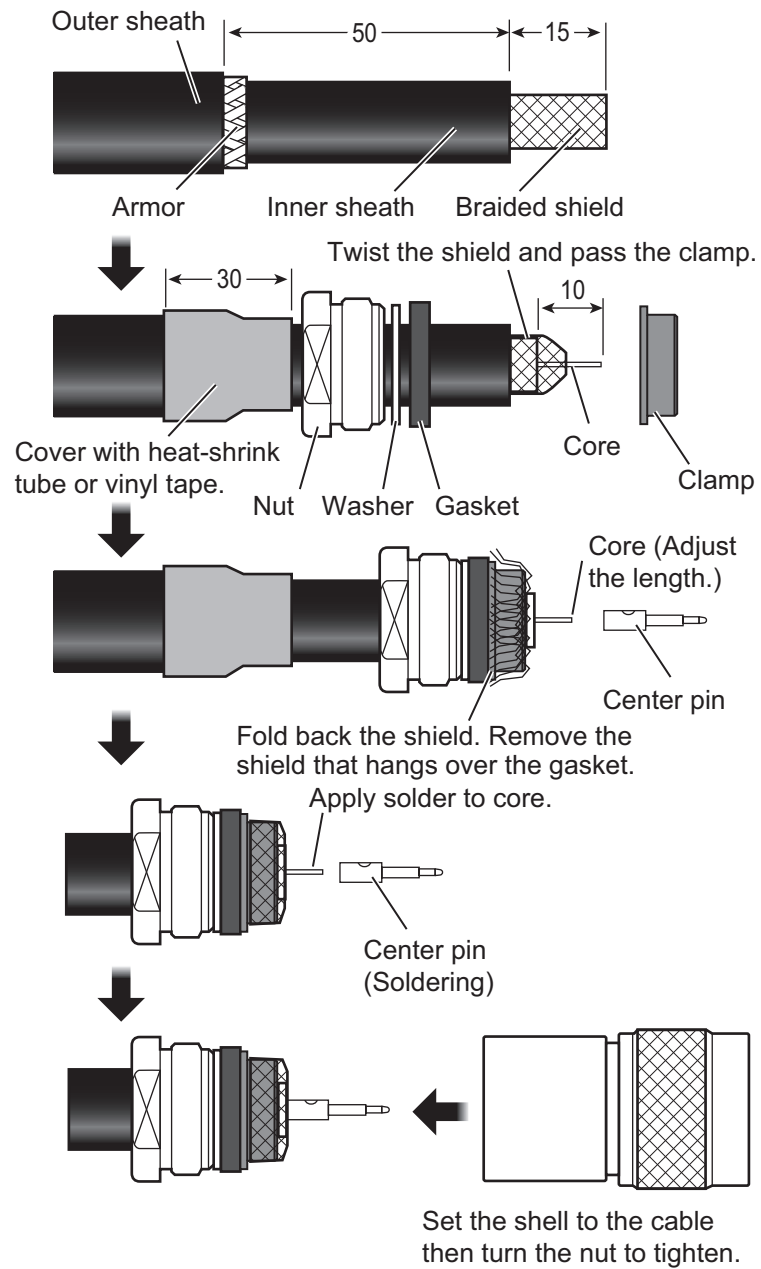Insert the pin into the shell. Screw the clamp nut into the shell.  
(Tighten by turning the clamp nut. Do not tighten by turning the shell.)

**Connector type N-P-8DSFA**


### 2.1.3 12D-SFA-LITE-CV (100 m)

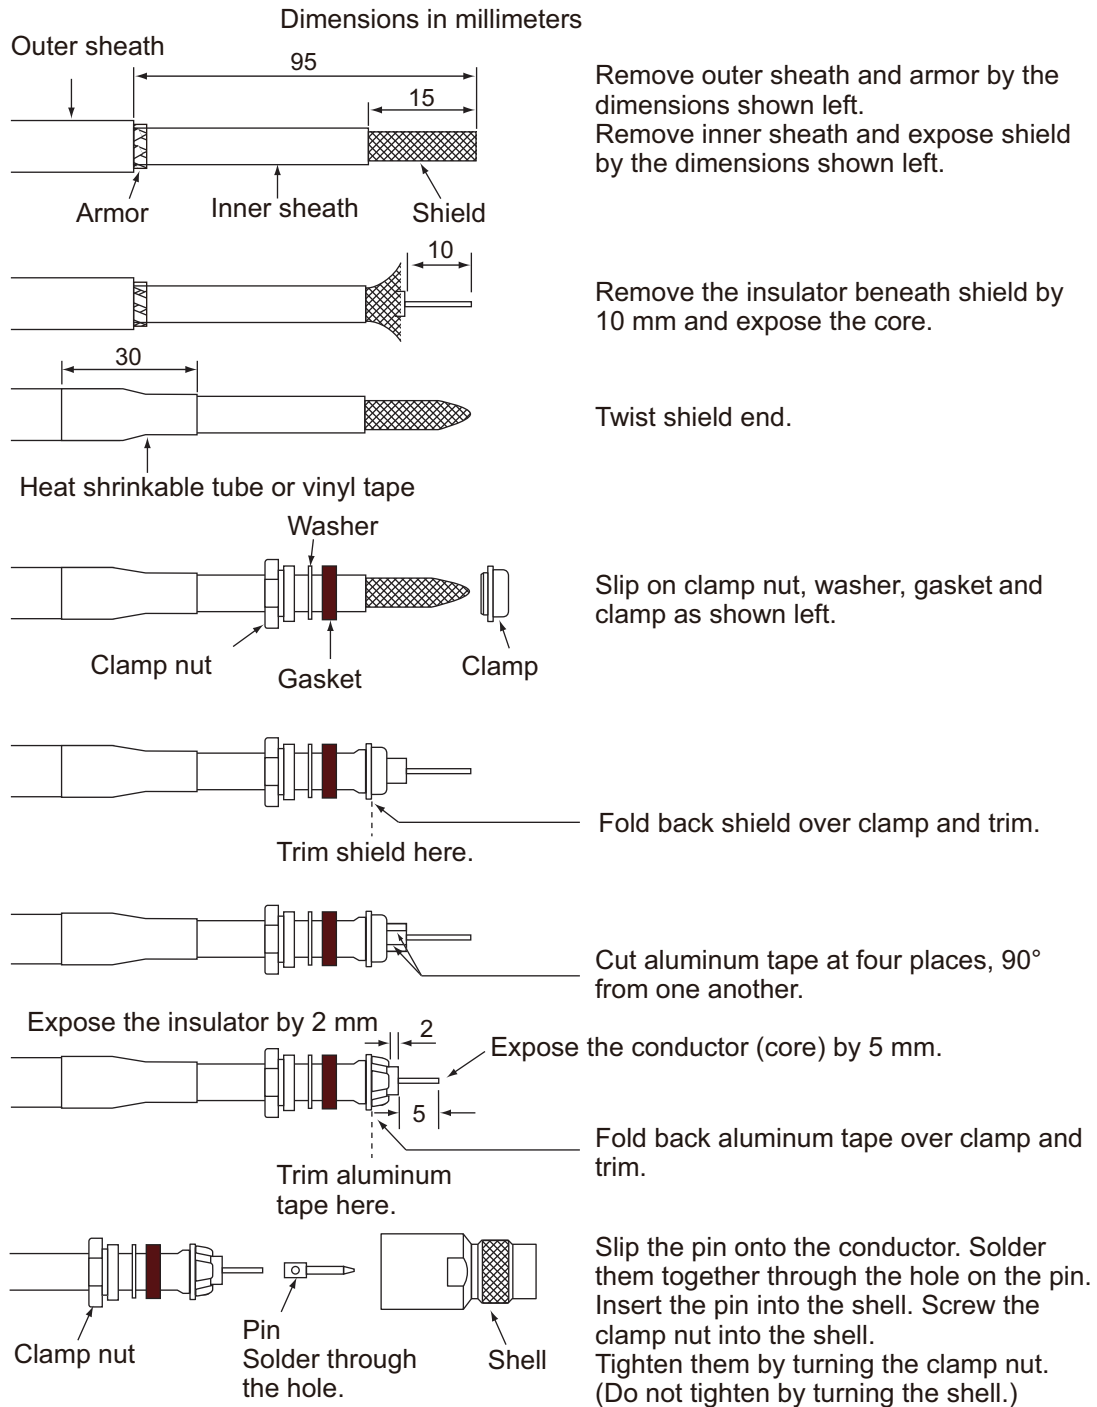

*How to fabricate antenna cable 12D-SFA-LITE-CV*

## 2.2 Distress Alert/Received Call Unit IC-305

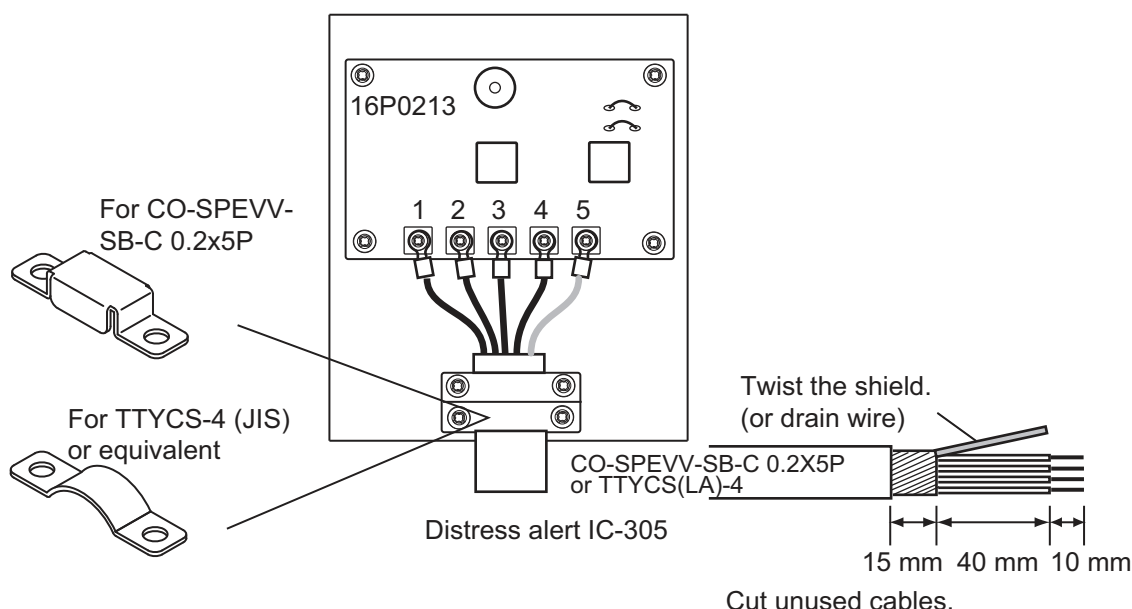
Use the installation materials CP16-02201 to connect the IC-305. The optional CO-SPEVV-SB-C 0.2x5P cable or JIS cable (Japan Industrial Standard) TTYCS(LA)-4 or equivalent are available to connect with the junction box IC-305. Select the cable clamp attached according to the diameter of cable, and fix the armor of the cable with the clamp.



Wiring of distress alert IC-305

## 2.3 Alarm Unit IC-306

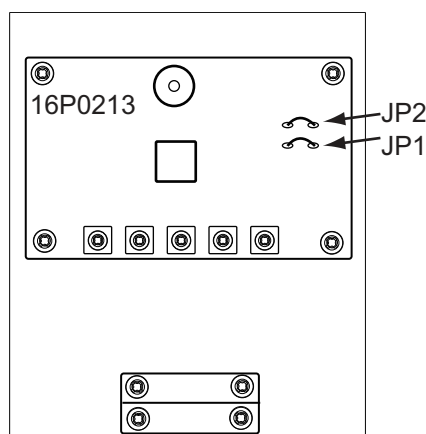A maximum of three alarm units can be connected to the junction box IC-318, in parallel. To distinguish the incoming indicators, set jumper wires for the second alarm unit as shown below. For connection, refer to 2.2 Distress Alert/Received Call Unit IC-305.”




Alarm unit IC-306

|     | No.1 (default setting) | No.2 | No.3  |
|-----|------------------------|------|-------|
| JP1 | Open                   | Open | Short |
| JP2 | Short                  | Open | Open  |

## 2.4 Junction Box IC-318

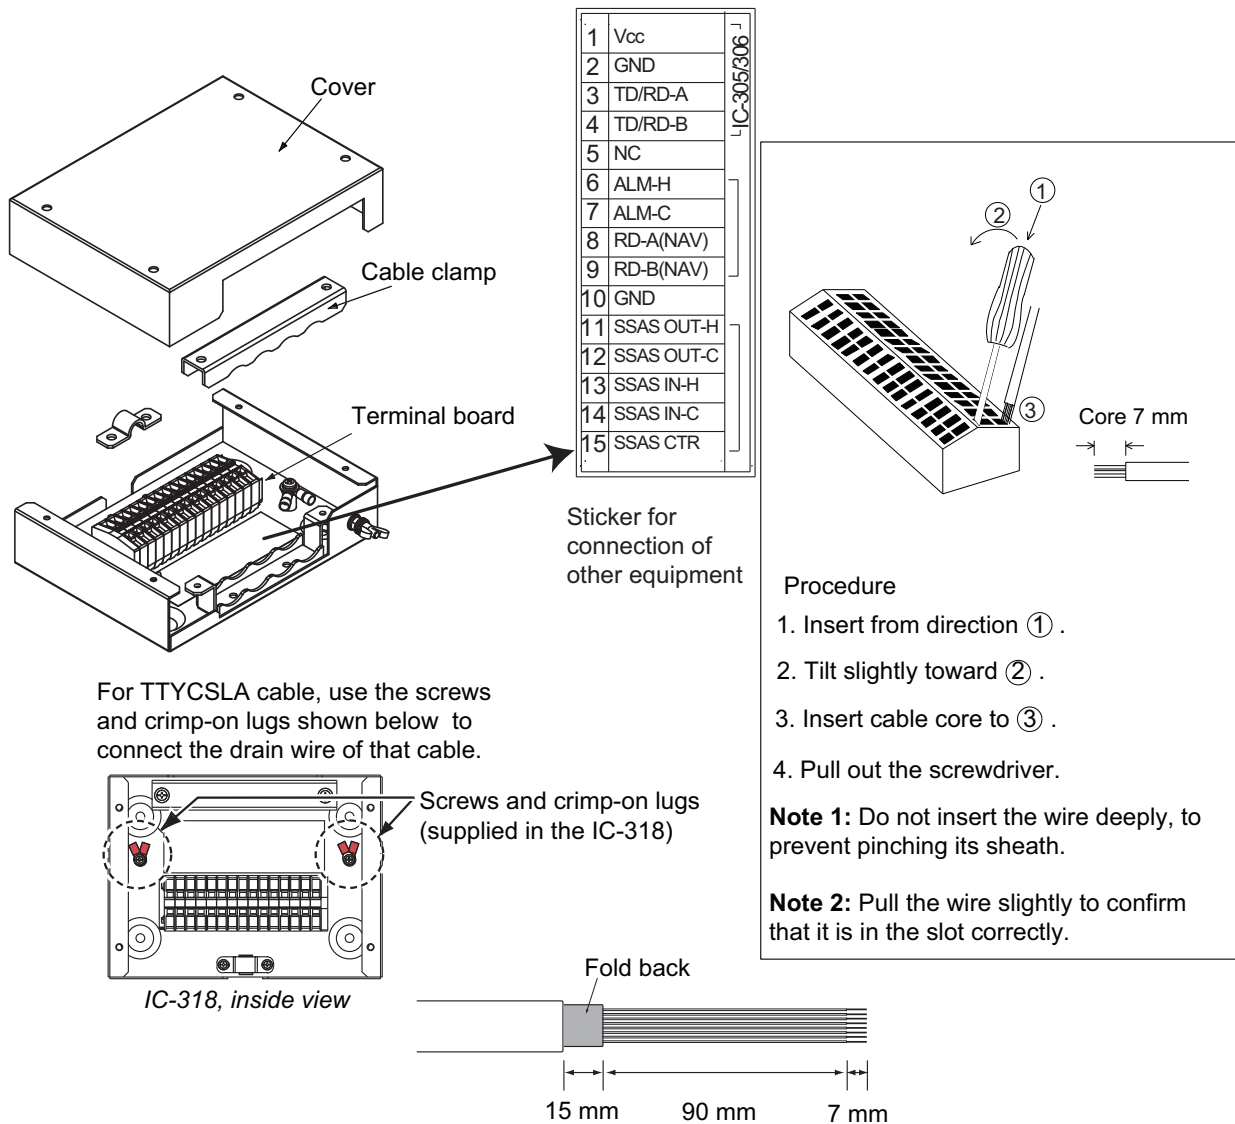Use the junction box IC-318 to connect the distress alert/received call unit IC-305 and other units (max. four units) to the terminal unit. Unfasten four screws to remove the units cover to connect cables.

For connection, use the optional 5 pair cable CO-SPEVV-SB-C 0.2x5P, JIS cable (Japan Industrial Standard) TTYCS(LA)-4 or equivalent.



Junction Box IC-318

### Input sentences

The following sentences can be input by a GPS navigator.

| Input sentences                                                                     |
|-------------------------------------------------------------------------------------|
| BWC, BWR, DBT, DTM, GGA, GLL, GNS, GSA, MTW, RMA, RMB, RMC, VDO, VDR, VTG, WPL, ZDA |

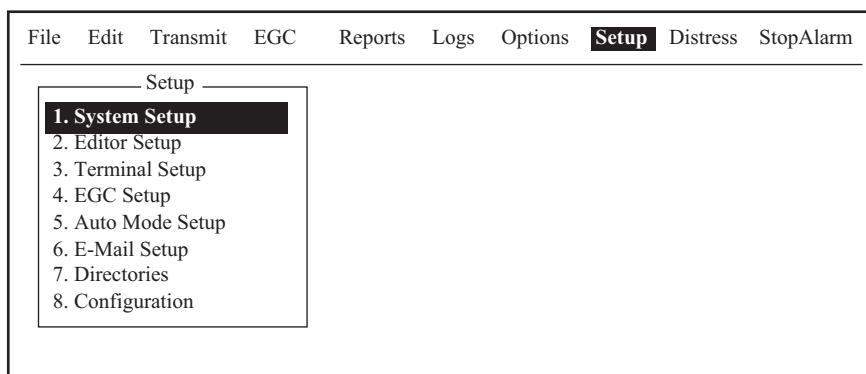
## 3. INITIAL SETTINGS

This chapter shows you how to setup the equipment. Some procedures require entry of job no. and password. Ask your dealer.


### 3.1 How to Set the IMN (INMARSAT MOBILE NO.)

Set your IMN (Inmarsat Mobile No.) as shown below.

1. Turn the power on.
2. Press the function key [F8] to show the [Setup] menu.



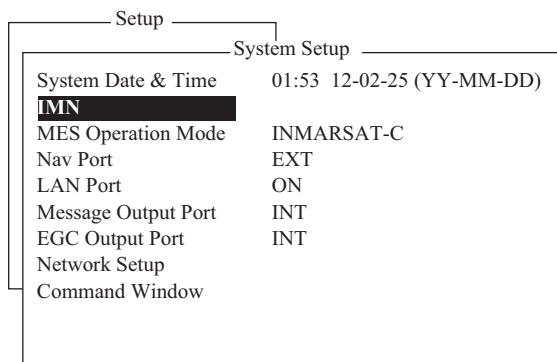3. Press 1 key to display the [System Setup] menu.




4. Confirm that [IMN] is selected, and then press the **Enter** key.  
An input box appears.
5. Key in your IMN.
6. Press the **Enter** key.  
To clear the IMN, select [IMN], then press **I**, **M**, **N** while pressing the **Alt** key. Repeat step 4 to step 6 to input the correct IMN.
7. Press the **Esc** key.
8. Press the **Enter** key.
9. Press the **Esc** key.

## 3.2 How to Set External Equipment

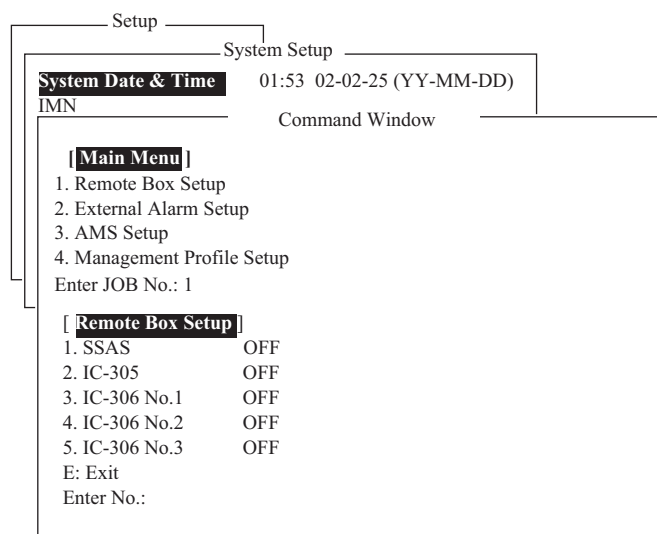The FELCOM 18 is set at the factory to accept the distress alert/received call unit IC-305, up to three alarm units IC-306 and the SSAS alert unit IC-307. If the configuration is different, change the setting to OFF as below.

1. Press the **F8** key to show the [Setup] menu.
2. Press the **1** key to show the [System Setup] menu.
3. Press the **↓** key to select [Command Window], and then press **Enter** key to show the [Command Window] screen.
4. Enter the [Enter JOB No.:], and then press the **Enter** key.
5. Enter the [PASSWORD:], and then press the **Enter** key.  
[Main Menu] is highlighted.
6. Press the **1** and **Enter** keys in order.



*Command Window screen*

7. Press the number key for unit not connected.  
For example, press the **1** and **Enter** keys when the SSAS alert unit IC-307 is not connected.



*Setting window for IC-307*

8. If the unit is not connected, press the **1** key, and the **Enter** key.  
To return to the [Remote Box Setup] menu, press the **E** key (not any numeric key).
9. Repeat step 7 to step 8 for other units not connected.
10. Press the **Esc** key several times to close the menu.

### 3.3 How to Set the Alarm Contact

1. Press the **F8** and **1** keys to show the [System Setup] menu.
2. Press ↓ to select [Command Window], and then press the **Enter** key.
3. Enter the [Enter JOB No:], then press the **Enter** key.
4. Enter the [PASSWORD:], and then press the **Enter** key.  
[Main Menu] is highlighted.
5. Press the **2** key, and the **Enter** key.

----- Command Window -----

[ **External Alarm Setup** ]

1. Distress Message : ON

2. Distress EGC : ON

3. Urgent EGC : ON

4. Unit Fault : OFF

E: Exit

Enter No.:

6. Press a numeric key (1 to 4), then press the **Enter** key.  
To detect the error on a unit, press **4** and **Enter** in order.

-----

[ **Unit Fault** ]

1. ON

2. OFF E: Exit

-----

7. Press the **1**, and **Enter** keys.  
To return to the [External Alarm Setup] menu, press the **E** key.
8. Repeat steps 6 and 7 to set other alarm contacts.
9. Press the **Esc** key several times to close the menu.

### 3.4 How to Set up the AMS/BAM

Do the following to connect the AMS (Alert Management System).

1. Press the **F8** and **1** keys to show the [System Setup] menu.
2. Press ↓ to select [Command Window], and then press the **Enter** key.
3. Enter the [Enter JOB No:], then press the **Enter** key.
4. Enter the [PASSWORD:], then press the **Enter** key.
5. Press the **3** key, and the **Enter** key.

----- Command Window -----

[ **AMS Setup Menu** ]

1. Mode Setup

2. MY SFI Setup

3. Transmission Group Setup

4. Error Log

E: Exit

Enter JOB No.:

6. Press appropriate numeric key (1 to 4), then press the **Enter** key.  
To return to the [AMS Setup Menu], press the **E** key at the setting window.

### 3. INITIAL SETTINGS

#### **1 key: [Mode Setup]**

Set the alert mode.

[Legacy]: Select when no AMS/BAM is connected.

[AlertIF1]: Select when AMS is connected.

[AlertIF2]: Select when BAM is connected.

```
Command Window
[ Mode Setup ]
1. Legacy      ON
2. AlertIF1
3. AlertIF2
E: Exit
Enter AMS Mode No.:
```

For [AlertIF1], the option window shown to the right is displayed. To return to the [AMS Setup Menu] from this window, press the **E** key twice.

```
Command Window
[ Mode Setup ]
1.
2.
E:
En [ AlertIF1 Option ]
1. Distress Alarm Stop Enable
2. Distress Alarm Stop Disable  ON
E: Exit
Enter AlertIF1 Option No.:
```

[Distress Alarm Stop Enable]: The AMS can stop the alarm sound when the Distress Priority message is received.

[Distress Alarm Stop Disable]: The AMS can not stop the alarm sound when a Distress Priority message is received.

For [AlertIF2], the option window shown to the right is displayed. To return to the [AMS Setup Menu] from this window, press the **E** key twice.

```
Command Window
[ Mode Setup ]
1.
2.
E:
En [ AlertIF2 Setup ]
1. BAM SFI1  XX9999
2. BAM SFI2  XX9999
E: Exit
Enter AlertIF2 Option No.:
```

Select the appropriate BAM unit to setup.

The [AlertIF2 Setup] option window shown to the right is displayed.

Set the SFI for the connected BAM unit.

```
Command Window
[ Mode Setup ]
1.
2.
E:
En [ AlertIF2 Option ]
1. B
2. B
E:
En [ BAM SFI Setup ]
SFI1  XX9999
E: Exit  C: Clear
Enter SFI:
```

#### **2 key: [MY SFI Setup]**

Set this FELCOM's SFI number, which is the four-digit number that follows "CS". (The setting range is 0001 to 9998.)

**Note:** Be sure to use an SFI not used by other devices in the shipboard network.

```
Command Window
[ MY SFI Setup ]
SFI      CS0001

Set SFI not used for other equipment.
0001 to 9998: SFI No.
E: Exit
Enter SFI No.:
```

**3 key: [Transmission Group Setup]**

Set the AMS Transmission Group.

Command Window

[ Transmission Group Setup ]

1. MISC        ON  
2. TGTD  
3. SATD  
4. NAVD  
5. VDRD  
6. RCOM  
7. TIME  
8. PROP  
9. USR  
E: Exit  
Enter Group No:

| Transmission Group | Multicast Address           | Destination Port |
|--------------------|-----------------------------|------------------|
| MISC               | 239.192.0.1                 | 60001            |
| TGTD               | 239.192.0.2                 | 60002            |
| SATD               | 239.192.0.3                 | 60003            |
| NAVD               | 239.192.0.4                 | 60004            |
| VDRD               | 239.192.0.5                 | 60005            |
| RCOM               | 239.192.0.6                 | 60006            |
| TIME               | 239.192.0.7                 | 60007            |
| PROP               | 239.192.0.8                 | 60008            |
| USR1 to USR8       | 239.192.0.9 to 239.192.0.16 | 60009 to 60016   |

**4 key: [Error Log]**

The [Error Log] compiles AMS related errors. To delete an error log entry, select the log then press the **1, Enter** key.

The error log holds 4294967296 entries. When that count is reached, the message "LIMIT MAX" appears.

Command Window

[ Error Log ]

Datagram header error        xxxxxxxxxx\*  
TAG block formatting error    xxxxxxxxxx  
TAG checksum error            xxxxxxxxxx  
TAG syntax error               xxxxxxxxxx  
TAG framing error              xxxxxxxxxx  
Sentence syntax error         xxxxxxxxxx  
UDP checksum error            xxxxxxxxxx  
Total                            4294967295    LIMIT MAX  
  
1. Log Clear  
E: Exit  
Enter JOB No.:

\*: xxxxxxxxxx: Error log count

7. Press the **Esc** key several times to close the menu.

## 3.5 How to Select Position-fixing Equipment

Select the position-fixing equipment that is to feed navigation data to the FELCOM.

1. Press the **F8** and **1** keys to show the [System Setup] menu.
2. Select [NAV Port] then press the **Enter** key.
3. Select the navigator to use, then press the **Enter** key.  
**OFF**: Manually input the position of own ship. Alarm is outputted when the position data is not updated every four hours.  
**Auto**: INT or EXT is automatically selected. For SSAS Russia and LRIT Russia, the setting of [NAV Port] is fixed at Auto and GLONASS is prioritized.  
**INT**: Use the navigator that is built into the terminal unit.  
**EXT**: Use an external navigator.
4. Press the **Esc** key several times to close the menu. The [Update] window appears.
5. Select [Yes] then press the **Enter** key.

## 3.6 How to Set up for 2nd DTE

For a 2nd DTE, do the procedure shown below.

1. Press the **F8** and **3** keys to show the [Terminal Setup] menu.

| Terminal Setup    |          |
|-------------------|----------|
| <b>Connection</b> |          |
| Date Disp. Form   | YY-MM-DD |
| Screen Saver      | OFF      |
| Window Color      |          |
| Window Size       | Normal   |

*Terminal Setup menu (for 2nd DTE)*

2. [Connection] shows the name of the terminals available for connection to the LAN interface. Press the **Enter** key to show the [Connect List].

| Connect List |            |           |                  |                  |
|--------------|------------|-----------|------------------|------------------|
| No.          | Name       | IMN       | IP Address       | Software Version |
| *01          | F18_123456 | 123432588 | 172.31.16.100/24 | 1650247-01       |
| 02           | F18_133234 | 456789210 | 192.168.16.11/24 | 1650247-01       |
| 03           |            |           |                  |                  |
| 04           |            |           |                  |                  |
| 05           |            |           |                  |                  |
| 06           |            |           |                  |                  |
| 07           |            |           |                  |                  |
| 08           |            |           |                  |                  |
| 09           |            |           |                  |                  |
| 10           |            |           |                  |                  |

The No., Name, IMN, IP address and software version of each terminal are shown. The asterisk marks the terminal currently selected for communication.

3. To connect to a different terminal, select it then press the **Enter** key. The [Connect] window appears and [Yes] is selected. Press the **Enter** key to connect the terminal.

## 3.7 How to Set the Russian Language

Do the following to create a message in Russian.

1. Press the **F8** and **1** keys to show the [System Setup] menu.
2. Press ↓ to select [Command Window], and then press the **Enter** key.
3. Type "RUSSIAN ON" in the [Enter JOB No.:], then press the **Enter** key.  
The language is switched to Russian and the message "Russian supported." appears at the bottom of the standby display.  
To restore the previously used language, type "RUSSIAN OFF" in the [Enter JOB No.:], then press the **Enter** key. "Russian supported." disappears from the screen.



4. Press and hold down the left **Shift** key while pressing the left **Alt** key.  
The language for the keyboard is switched from English to Russian. The Scroll Lock lamp lights when Russian is selected. To switch the language from Russian to English, press and hold down the left **Shift** key while pressing the left **Alt** key.  
**Note:** With a 2nd DTE, Russian can be input from the keyboard of your PC. See your PC's owner's manual for how to switch languages.
5. Put the key template for Russian (OP05-135) on the keyboard of your PC.

## 3.8 How to Use the Paper Save Function

The Paper Save function allows you to choose whether to print the "Successful Data Report Sending" confirmation after a data report is sent.

1. Press the **F8** and **1** keys to show the [System Setup] menu.
2. Press ↓ to select [Command Window], and then press the **Enter** key.
3. At the [Enter JOB No.:] prompt, type "Paper Save", then press the **Enter** key. A message is displayed showing the status of the Paper Save function (ON or OFF).
4. To change the setting, type "Paper Save ON" (No report is printed) or "Paper Save OFF" (Report is printed), as appropriate, then press the **Enter** key.

## 3.9 How to Output EGC Messages

The FELCOM can output EGC messages to a navigation device (via the FELCOM's LAN port) that can receive EGC messages.

The output messages, in IEC 61162 format, are SM1, SM2, SM3, SM4, and SMB.

1. Press the **F8** and **1** keys to open the [System Setup] menu.
2. Select [EGC Output Port] then press the **Enter** key.
3. Select [LAN] or [INT+LAN] as appropriate, then press the **Enter** key.  
[INT]: Output EGC messages to the main terminal.  
[LAN]: Output EGC messages to the sub terminal or other navigation device connected to the LAN Port on the main terminal.

**Note:** When [LAN] is selected, the main terminal does not print and display EGC messages with priority other than urgent or distress.

[INT+LAN]: Output EGC messages to the main terminal, sub terminal and other navigation device.

## 4. HOW TO INSTALL OPTIONAL EQUIPMENT

### 4.1 GPS Board OP16-62

This chapter provides the procedure for the installation of the GPS board (in the terminal unit), which provides GPS position information.

Name: GPS board

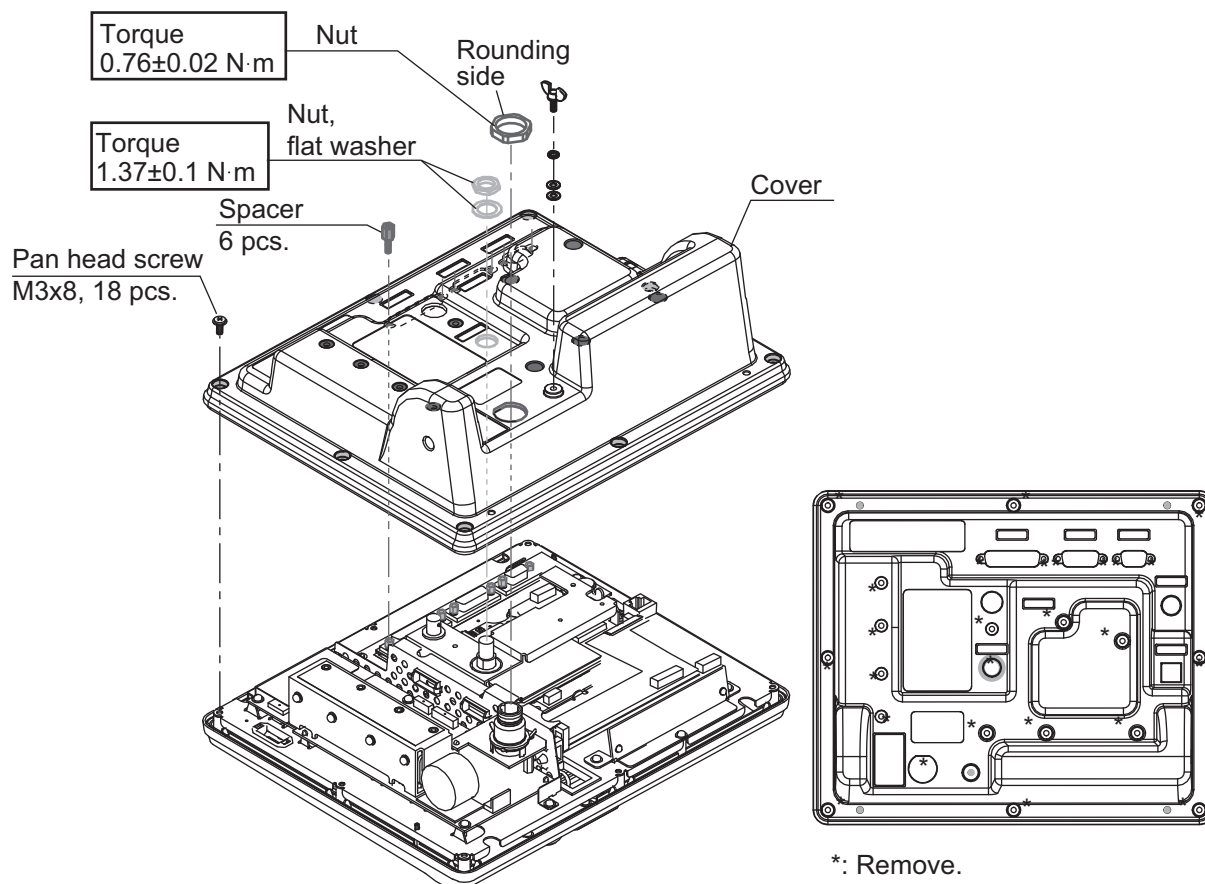
Type: OP16-62

Code No.: 001-180-100

| Name            | Type                 | Code No.       | Qty |
|-----------------|----------------------|----------------|-----|
| Binding Screw   | M3x6                 | 000-163-479-10 | 3   |
| GPS Board       | 16P0246              | 004-656-550    | 1   |
| Connector Assy. | 51065-0700-PHR7-L110 | 000-176-305-10 | 1   |

**Note:** Use anti-static gloves to handle board.


1. Unfasten 18 screws, six spacers and three nuts to remove the terminal unit cover.



2. Fasten three binding screws (M3x6, supplied with the kit) to attach the GPS Board to the RF cover.

#### 4. HOW TO INSTALL OPTIONAL EQUIPMENT

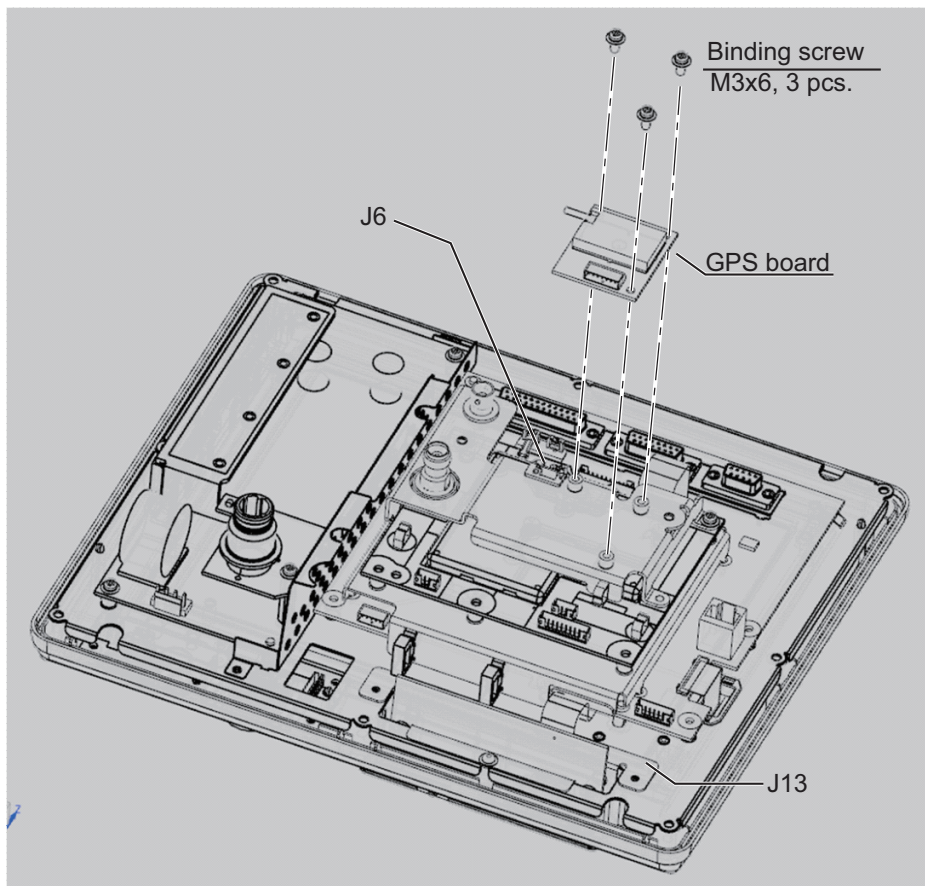3. Attach the 51065-0700-PHR7-L110 connector assy. between J13 on the TER-MCPU Board and J1 on the GPS board.



4. Attach the cable from the GPS board to J6 on the RF COMMCPU Board. Use the clamp next to the connector to fix the cable.
5. Reassemble the terminal unit.

## 4.2 IPX2 Kit OP16-58/OP16-59

The optional kits OP16-58 and OP16-59 are used to protect the connectors on the terminal unit from water splash. Note that these optional kits should be used as a pair.

### 4.2.1 OP16-58 (cables)

Connect the waterproofed D-sub cables to the rear of the terminal unit, instead of the standard supply cable. For the connection at the IC-318, see section 4.3.

OP16-58 (Code No.: 001-180-070)



| Name        | Type      | Code No.       | Qty |
|-------------|-----------|----------------|-----|
| Cable Assy. | H230817-1 | 001-176-552-10 | 1   |
|             | H230817-2 | 000-176-553-10 | 1   |
|             | XM-FD-361 | 000-176-551-10 | 1   |

### 4.2.2 OP16-59 (for connector ports)

OP16-59 (001-180-080)

| Name            | Type          | Code No.       | Qty |
|-----------------|---------------|----------------|-----|
| Sponge for Dsub | 16-023-3531   | 100-369-600-10 | 1   |
| Cover for BNC   | 16-023-3534   | 100-369-630-10 | 1   |
| Cover for USB   | 16-023-3535   | 100-369-641-10 | 1   |
| USB Support     | 16-023-3536   | 100-369-650-10 | 1   |
| Sponge for BNCR | 16-023-3541   | 100-369-690-10 | 1   |
| Dummy Plate 9P  | 16-023-3542   | 100-368-190-10 | 1   |
| Dummy Plate 15P | 16-023-3543   | 100-369-700-10 | 1   |
| Dummy Plate 25P | 16-023-3544   | 100-369-710-10 | 1   |
| Binding Screw   | #4-40UNCX3/16 | 000-176-619-10 | 6   |
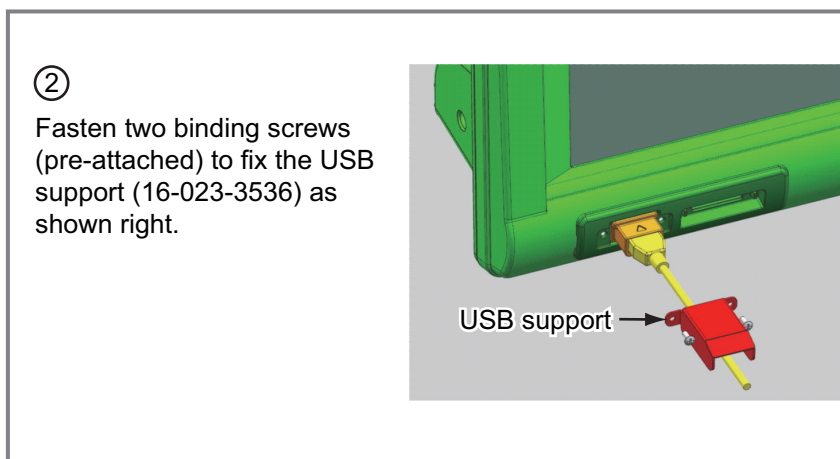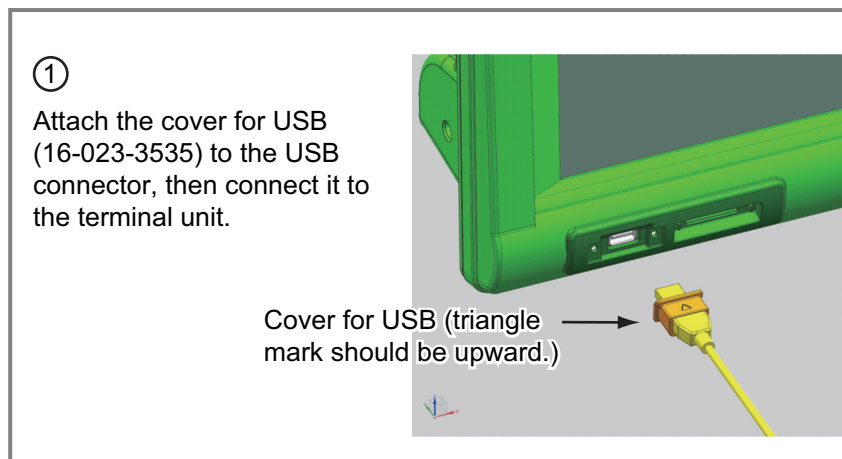
#### USB port




#### 4. HOW TO INSTALL OPTIONAL EQUIPMENT

##### D-sub ports


①

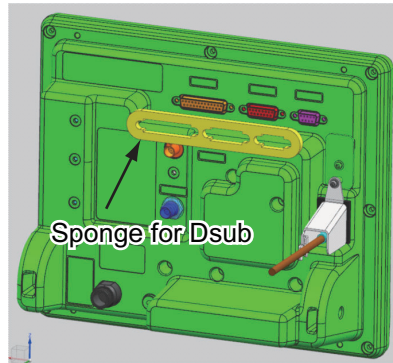Peel the paper from the sponge for Dsub (16-023-3531), then attach the sponge to the D-sub connectors at the rear of the terminal unit.




② (Cables connected)

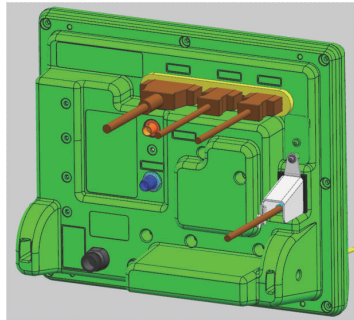Connect the cables supplied with OP16-58 to the appropriate ports.



(No cables connected)

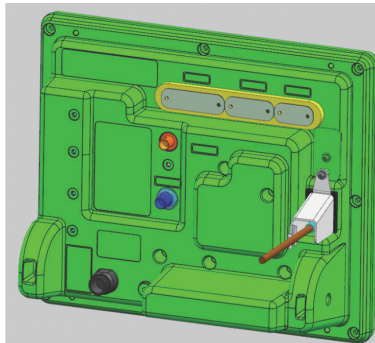Use the binding screws (#4-40UNCx3/16) to fix the dummy plates (for 9P, 15P and 25P) to the appropriate ports.




**DGPS port**

(Coaxial cable connected)

①

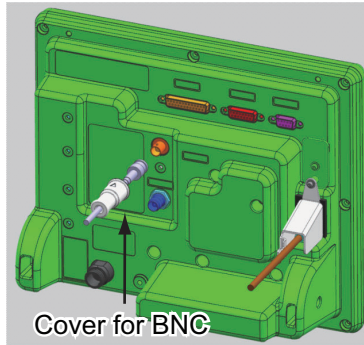
Pass the coaxial cable through the slit on the cover for BNC (16-023-3534).



②


Attach the connector\* of the coaxial cable to the DGPS port.

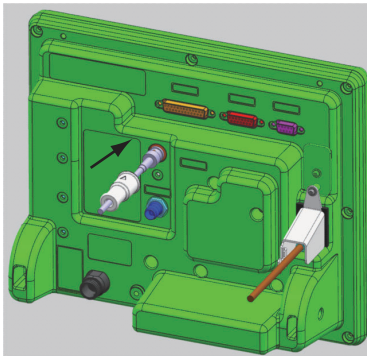\*For waterproofing, use the connector assy. shown below:  
-BNCP-58U-BNCP L-200  
(000-161-953-11)  
-BNCP-58U-BNCP L-290  
(000-175-274-11)



③

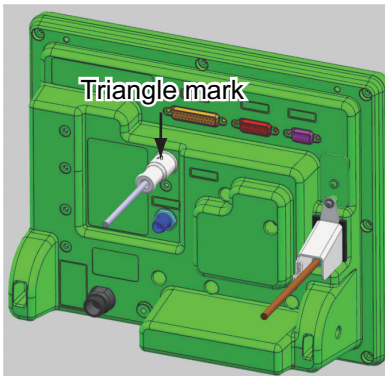Slide the cover for BNC on the connector to cover the connector. Confirm that the triangle mark on the cover is upward.




#### 4. HOW TO INSTALL OPTIONAL EQUIPMENT

(Coaxial cable not connected)


①

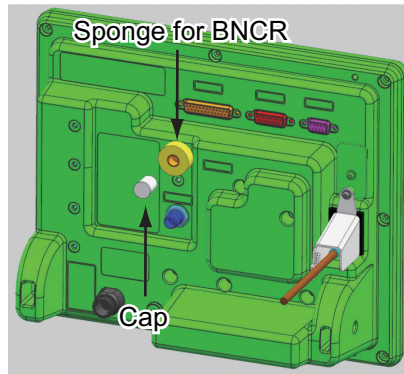Remove the cap from the DGPS port, then attach the sponge for BNCR (16-023-3541) around the port.



②

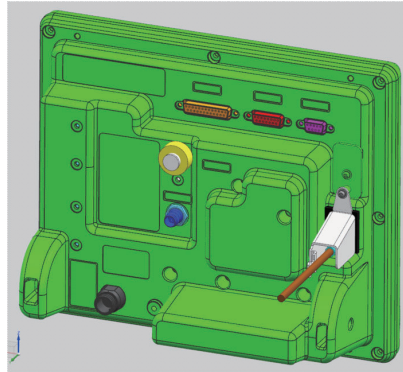Re-attach the cap to the DGPS port.



### 4.3      Waterproofing Kit OP16-60/OP16-67/OP16-68

You can use the optional waterproof kits to keep water splash out of the unit. Note that each kit is specifically designed for each unit.


**OP16-60 (for IC-318)**

The IC-318 should be installed on a desktop. To ensure the waterproof rating is maintained, use the optional waterproofing kit OP16-60. If a floor installation is required, make sure the area is not subject to water splash, rain or other water ingress.

*OP16-60 (Code No.: 001-180-090)*

| Name         | Type        | Code No.       | Qty |
|--------------|-------------|----------------|-----|
| Cover gasket | 16-023-5502 | 100-373-530-10 | 1   |
| Grommet      | 16-023-5503 | 100-373-541-10 | 1   |

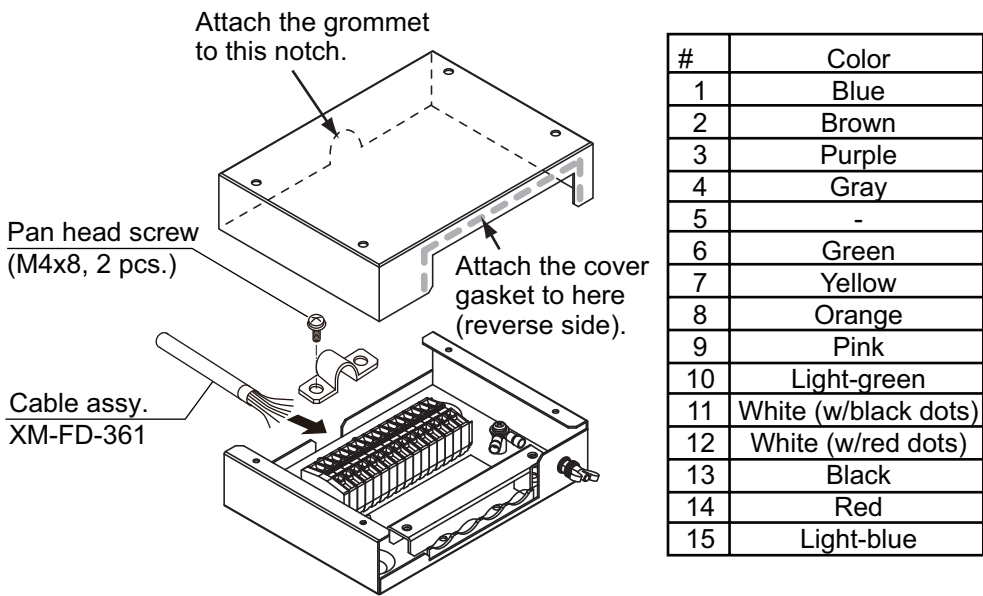When the OP16-58 (described in paragraph 4.2.1) is used, replace the cable from the IC-318 with the XM-FD-361 as shown below.



#### 4. HOW TO INSTALL OPTIONAL EQUIPMENT

##### **OP16-67 (for IC-305), OP16-68 (for IC-307)**

**Note:** To maintain the waterproofing, these units must be installed on a bulkhead or wall, with the cable entry facing downwards. Further, the optional kits do not provide waterproofing if the unit is installed with the cable entry facing upwards.

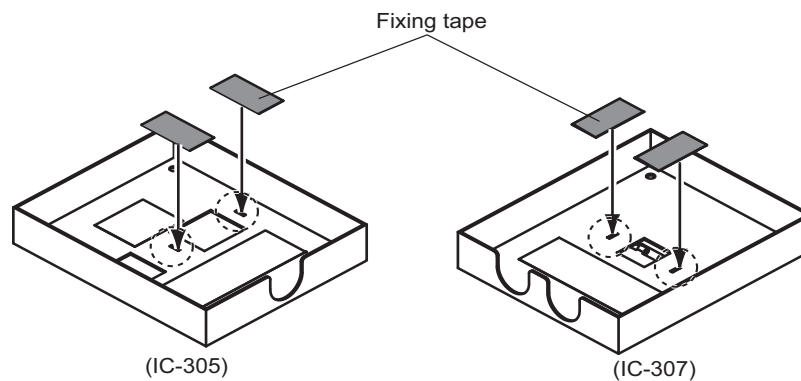
##### OP16-67 (Code No.: 001-189-380)

| Name        | Type        | Code No.       | Qty |
|-------------|-------------|----------------|-----|
| Fixing Tape | 24-009-1225 | 100-366-200-10 | 2   |


##### OP16-68 (Code No.: 001-189-400)

| Name                | Type        | Code No.       | Qty |
|---------------------|-------------|----------------|-----|
| Waterproofing Cover | 16-023-5501 | 100-374-950-10 | 1   |
| Fixing Tape         | 24-009-1225 | 100-366-200-10 | 2   |

1. Unfasten four screws to remove cover of IC-305/IC-307.
2. Attach supplied fixing tape to the underside of the cover as shown in the illustration below.






3. Attach the cover.
4. For IC-307, remove the seal from the waterproofing cover and attach the cover as shown in the illustration below.

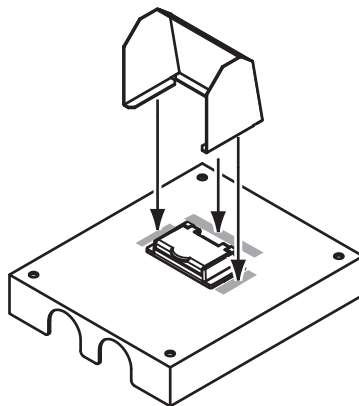

## 5. HOW TO CHANGE POWER SUPPLY SPECIFICATIONS

The AC-DC power supply PR-240 is shipped ready for connection to a 200-230 VAC ship's mains. If the ship's mains is 100 VAC, change the tap connection and terminal board connection as below. Attach a label supplied as accessories to the front panel according to the ship's mains.
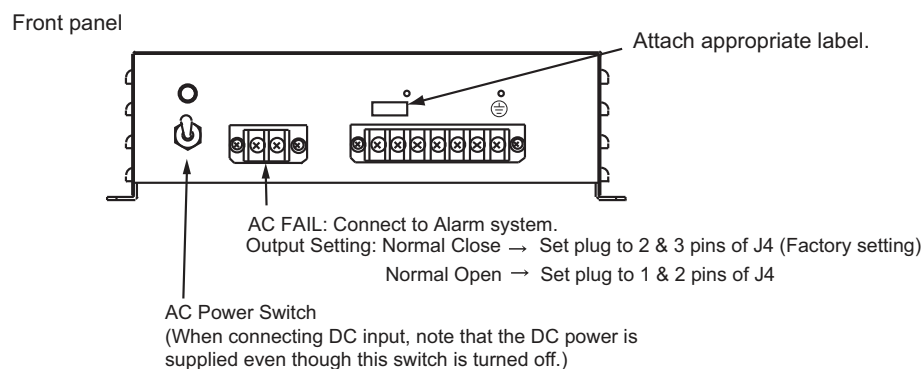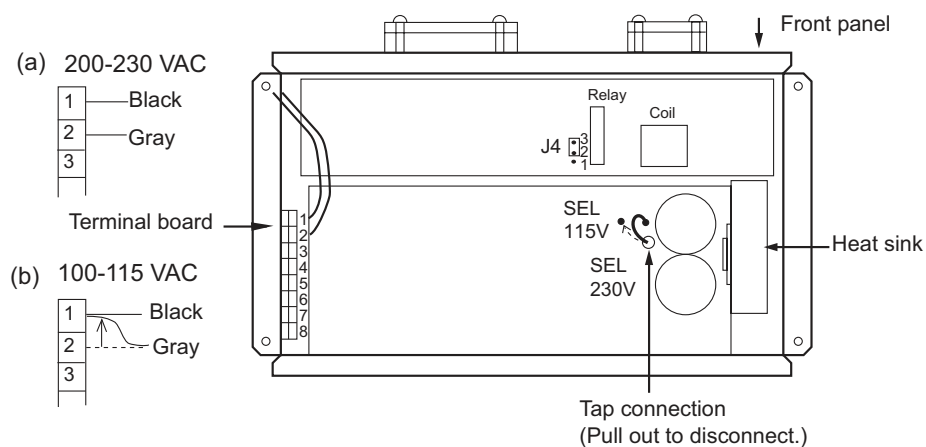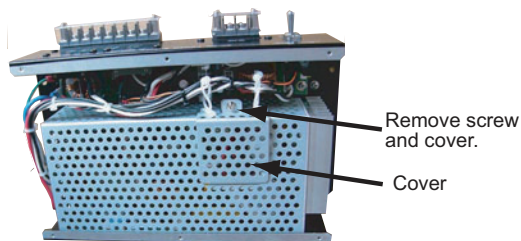
| Ship's mains   | Tap connection | Terminal board | Label                                     |
|----------------|----------------|----------------|-------------------------------------------|
| 200 to 230 VAC | SEL 230 V      | Below (a)      | 200-230 VAC, 2.2-1.7 A, 1 $\phi$ 50/60 Hz |
| 100 to 115 VAC | SEL 115 V      | Below (b)      | 100-115 VAC, 3.2-2.6 A, 1 $\phi$ 50/60 Hz |



**Note:** The DC output load must be less than 8 A.

## 5. HOW TO CHANGE POWER SUPPLY SPECIFICATIONS

This page is intentionally left blank.

# APPENDIX 1 JIS CABLE GUIDE

Cables listed in the manual are usually shown as Japanese Industrial Standard (JIS). Use the following guide to locate an equivalent cable locally.

JIS cable names may have up to 6 alphabetical characters, followed by a dash and a numerical value (example: DPYC-2.5).

For core types D and T, the numerical designation indicates the *cross-sectional Area (mm<sup>2</sup>)* of the core wire(s) in the cable.

For core types M and TT, the numerical designation indicates the *number of core wires* in the cable.

## 1. Core Type

D: Double core power line  
T: Triple core power line  
M: Multi core  
TT: Twisted pair communications  
(1Q=quad cable)

## 2. Insulation Type

P: Ethylene Propylene  
R: Rubber

## 3. Sheath Type

Y: PVC (Vinyl)

## 4. Armor Type

C: Steel

## 5. Sheath Type

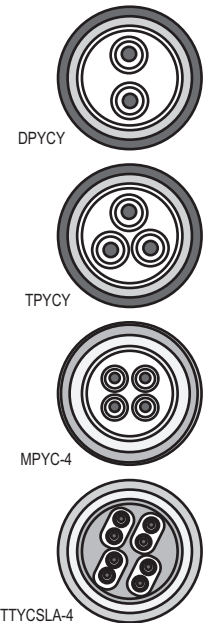
Y: Anticorrosive vinyl  
sheath

## 6. Shielding Type

S: All cores in one sheath  
-S: Individually sheathed cores  
SLA: All cores in one shield, plastic  
tape w/aluminum tape  
-SLA: Individually shielded cores,  
plastic tape w/aluminum tape

EX: <sup>1 2 3 4 5 6</sup>  
TT<sup>1</sup>Y<sup>2</sup>C<sup>3</sup>Y<sup>4</sup>S<sup>5</sup>L<sup>6</sup>A - 4  
Designation type Core Area (mm<sup>2</sup>)

<sup>1 2 3 4</sup>  
M<sup>1</sup>P<sup>2</sup>Y<sup>3</sup>C<sup>4</sup> - 4  
Designation type # of cores






The following reference table lists gives the measurements of JIS cables commonly used with Furuno products:

| Type      | Core Area           | Core Diameter | Cable Diameter | Type       | Core Area           | Core Diameter | Cable Diameter |
|-----------|---------------------|---------------|----------------|------------|---------------------|---------------|----------------|
| DPYC-1.5  | 1.5mm <sup>2</sup>  | 1.56mm        | 11.7mm         | TTYCS-1    | 0.75mm <sup>2</sup> | 1.11mm        | 10.1mm         |
| DPYC-2.5  | 2.5mm <sup>2</sup>  | 2.01mm        | 12.8mm         | TTYCS-1T   | 0.75mm <sup>2</sup> | 1.11mm        | 10.6mm         |
| DPYC-4    | 4.0mm <sup>2</sup>  | 2.55mm        | 13.9mm         | TTYCS-1Q   | 0.75mm <sup>2</sup> | 1.11mm        | 11.3mm         |
| DPYC-6    | 6.0mm <sup>2</sup>  | 3.12mm        | 15.2mm         | TTYCS-4    | 0.75mm <sup>2</sup> | 1.11mm        | 16.3mm         |
| DPYC-10   | 10.0mm <sup>2</sup> | 4.05mm        | 17.1mm         | TTYCSLA-1  | 0.75mm <sup>2</sup> | 1.11mm        | 9.4mm          |
| DPYCY-1.5 | 1.5mm <sup>2</sup>  | 1.56mm        | 13.7mm         | TTYCSLA-1T | 0.75mm <sup>2</sup> | 1.11mm        | 10.1mm         |
| DPYCY-2.5 | 2.5mm <sup>2</sup>  | 2.01mm        | 14.8mm         | TTYCSLA-1Q | 0.75mm <sup>2</sup> | 1.11mm        | 10.8mm         |
| DPYCY-4   | 4.0mm <sup>2</sup>  | 2.55mm        | 15.9mm         | TTYCSLA-4  | 0.75mm <sup>2</sup> | 1.11mm        | 15.7mm         |
| MPYC-2    | 1.0mm <sup>2</sup>  | 1.29mm        | 10.0mm         | TTYCY-1    | 0.75mm <sup>2</sup> | 1.11mm        | 11.0mm         |
| MPYC-4    | 1.0mm <sup>2</sup>  | 1.29mm        | 11.2mm         | TTYCY-1T   | 0.75mm <sup>2</sup> | 1.11mm        | 11.7mm         |
| MPYC-7    | 1.0mm <sup>2</sup>  | 1.29mm        | 13.2mm         | TTYCY-1Q   | 0.75mm <sup>2</sup> | 1.11mm        | 12.6mm         |
| MPYC-12   | 1.0mm <sup>2</sup>  | 1.29mm        | 16.8mm         | TTYCY-4    | 0.75mm <sup>2</sup> | 1.11mm        | 17.7mm         |
| TPYC-1.5  | 1.5mm <sup>2</sup>  | 1.56mm        | 12.5mm         | TTYCY-4S   | 0.75mm <sup>2</sup> | 1.11mm        | 21.1mm         |
| TPYC-2.5  | 2.5mm <sup>2</sup>  | 2.01mm        | 13.5mm         | TTYCY-4SLA | 0.75mm <sup>2</sup> | 1.11mm        | 19.5mm         |
| TPYC-4    | 4.0mm <sup>2</sup>  | 2.55mm        | 14.7mm         | TTYCYS-1   | 0.75mm <sup>2</sup> | 1.11mm        | 12.1mm         |
| TPYCY-1.5 | 1.5mm <sup>2</sup>  | 1.56mm        | 14.5mm         | TTYCYS-4   | 0.75mm <sup>2</sup> | 1.11mm        | 18.5mm         |
| TPYCY-2.5 | 2.5mm <sup>2</sup>  | 2.01mm        | 15.5mm         | TTYCYSLA-1 | 0.75mm <sup>2</sup> | 1.11mm        | 11.2mm         |
| TPYCY-4   | 4.0mm <sup>2</sup>  | 2.55mm        | 16.9mm         | TTYCYSLA-4 | 0.75mm <sup>2</sup> | 1.11mm        | 17.9mm         |

PACKING LIST IC-218-A-\*, IC-218-A-G-\*, IC-218-A-\*--HK







16AV-X-9852-5

1/1

| NAME                                                     | OUTLINE                                                                               | DESCRIPTION/CODE No. | Q' TY |
|----------------------------------------------------------|---------------------------------------------------------------------------------------|----------------------|-------|
| ユニット                                                     |                                                                                       |                      |       |
| ターミナルユニット<br>TERMINAL UNIT                               |    | IC-218-A*            | 1     |
|                                                          |                                                                                       | 000-020-961-00<br>** |       |
| 予備品                                                      |                                                                                       |                      |       |
| 予備品<br>SPARE PARTS                                       |    | SP16-01301           | 1     |
|                                                          |                                                                                       | 004-439-370-00       |       |
| 付属品                                                      |                                                                                       |                      |       |
| ACCESSORIES                                              |                                                                                       |                      |       |
| ミニキーボード<br>KEYBOARD                                      |    | 5139U BLACK          | 1     |
|                                                          |                                                                                       | 000-178-800-11       |       |
| 工事材料                                                     |                                                                                       |                      |       |
| INSTALLATION MATERIALS                                   |                                                                                       |                      |       |
| ケーブル組品MJ<br>CABLE ASSY.                                  |    | MJ-A3SPF0018-0507C   | 1     |
|                                                          |                                                                                       | 000-154-025-10       |       |
| 工事材料<br>INSTALLATION MATERIALS                           |    | CP16-05201           | 1     |
|                                                          |                                                                                       | 001-179-830-00       |       |
| 工事材料<br>INSTALLATION MATERIALS                           |   | CP16-05202           | 1     |
|                                                          |                                                                                       | 001-184-540-00       |       |
| 図書                                                       |                                                                                       |                      |       |
| DOCUMENT                                                 |                                                                                       |                      |       |
| 77° リケーションフォーム<br>REGISTRATION FOR SERVICE<br>ACTIVATION |  | J59-50010-* 7/14     | 1     |
|                                                          |                                                                                       | 000-807-330-1*       |       |

コード番号末尾の[\*\*]は、選択品の代表コードを表します。  
CODE NUMBER ENDING WITH “\*\*” INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERIAL  
(\*1)の書類は、英文仕様専用です。  
(\*1) MARKED DOCUMENTS ARE FOR ENGLISH SET ONLY.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

| NAME                                        | OUTLINE                                                                            | DESCRIPTION/CODE No. | Q'TY |
|---------------------------------------------|------------------------------------------------------------------------------------|----------------------|------|
| テストモード 操作手順<br>SSAS TEST MODE HANDBOOK      |   | C52-01502-*          | 1    |
|                                             |                                                                                    | 000-191-063-1*       |      |
| ヒューズ 変更のお願い<br>NOTIFICATION DOCUMENT        |   | C52-00206-* 7/14     | 1    |
|                                             |                                                                                    | 000-147-004-1*       |      |
| 機器引渡し前の注意<br>BEFORE DELIVERING TO OWNER     |   | C52-00201-* 7/14     | 1    |
|                                             |                                                                                    | 000-809-353-1*       |      |
| 取扱説明書<br>OPERATOR'S MANUAL                  |   | 01*-56740-*          | 1    |
|                                             |                                                                                    | 000-176-508-1*       | **   |
| 取扱説明書 (英)<br>OPERATOR'S MANUAL (EN)         |   | 01*-56351-*          | 1    |
|                                             |                                                                                    | 000-150-359-1*       | **   |
| 操作要領書 (英)<br>OPERATOR'S GUIDE (EN)          |   | 03E-56740-*          | 1    |
|                                             |                                                                                    | 000-176-510-1*       | (*1) |
| 装備要領書<br>INSTALLATION MANUAL                |   | 11*-56740-*          | 1    |
|                                             |                                                                                    | 000-176-511-1*       | **   |
| 運搬通信要領<br>DISTRESS COMMUNICATION            |   | T1C-56350-* 7/14     | 1    |
|                                             |                                                                                    | 000-809-352-1*       |      |
| インマルC14エリアガイド<br>INMARSAT 14 COVERAGE GUIDE |  | *52-01802-*          | 1    |
|                                             |                                                                                    | 000-195-412-1*       | **   |

| N A M E                    | O U T L I N E                                                                                | D E S C R I P T I O N / C O D E N o. | Q ' T Y |
|----------------------------|----------------------------------------------------------------------------------------------|--------------------------------------|---------|
| ユ ニ ャ ッ ト                  |                                                                                              |                                      |         |
| アンテナユニット箱詰品                |           | IC-118*                              | 1       |
| ANTENNA UNIT COMPLETE SET  |                                                                                              | 000-021-012-00 **                    |         |
| ターミナルユニット箱詰品               |                                                                                              | IC-218-A-*                           | 1       |
| TERMINAL UNIT COMPLETE SET |           | 000-020-955-00 **                    |         |
| 接続箱箱詰品                     |                                                                                              | IC-318                               | 1       |
| JUNCTION BOX COMPLETE SET  |                                                                                              | 000-021-003-00                       |         |
| 工 事 材 料                    |                                                                                              |                                      |         |
| ケーブル組品                     | <br>L=30M | TP5FBW-5DFB 30M                      | 1       |
| CABLE ASSY.                |                                                                                              | 000-159-523-11                       |         |
| 工事材料                       |                                                                                              | CP16-05511                           | 1       |
| INSTALLATION MATERIALS     |           | 001-189-560-00                       |         |

コード番号末尾の[\*\*]は、選択品の代表コードを表します。  
CODE NUMBER ENDING WITH “\*\*” INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERIAL.

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.  
(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

C5674-707-E

| N A M E                    | O U T L I N E                                                                       | D E S C R I P T I O N / C O D E N o. | Q ' T Y |
|----------------------------|-------------------------------------------------------------------------------------|--------------------------------------|---------|
| ユニット                       |                                                                                     |                                      |         |
| アンテナユニット箱詰品                |    | IC-118*                              | 1       |
| ANTENNA UNIT COMPLETE SET  |                                                                                     | 000-021-012-00 **                    |         |
| ターミナルユニット箱詰品               |                                                                                     | IC-218-A-*                           | 1       |
| TERMINAL UNIT COMPLETE SET |    | 000-020-955-00 **                    |         |
| 接続箱箱詰品                     |                                                                                     | IC-318                               | 1       |
| JUNCTION BOX COMPLETE SET  |                                                                                     | 000-021-003-00                       |         |
| 保安警報発呼器                    |    | IC-307                               | 2       |
| SSAS ALERT UNIT            |                                                                                     | 000-043-474-00                       |         |
| 付属品                        |                                                                                     |                                      |         |
| 付属品                        |    | FP16-00901                           | 2       |
| ACCESSORIES                |                                                                                     | 004-448-050-00                       |         |
| 工事材料                       |                                                                                     |                                      |         |
| ケーブル組品                     |    | TP5FBW-5DFB 30M                      | 1       |
| CABLE ASSY.                |                                                                                     | 000-159-523-11                       |         |
| 工事材料                       |                                                                                     | CP16-03101                           | 2       |
| INSTALLATION MATERIALS     |    | 004-448-040-00                       |         |
| 工事材料                       |                                                                                     | CP16-05511                           | 1       |
| INSTALLATION MATERIALS     |                                                                                     | 001-189-560-00                       |         |
| 図書                         |                                                                                     |                                      |         |
| IC-30X引き渡し前の注意             |  | C52-00202-*                          | 1       |
| BEFORE DELIVERING TO OWNER |                                                                                     | 000-809-354-1*                       |         |
| カバー貼付要領書                   |                                                                                     | C52-00403-*                          | 1       |
| ATTACHMENT OF SWITCH COVER |  | 000-150-849-1*                       |         |

コード番号末尾の[\*\*]は、選択品の代表コードを表します。  
CODE NUMBER ENDING WITH “\*\*” INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERIAL.

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.  
(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

C5674-Z11-E



PACKING LIST

IC-118/-HK

16AV-X-9851 -1

1/1

A-4

| N A M E                 | O U T L I N E                                                                       | D E S C R I P T I O N / C O D E N o. | Q ' T Y |
|-------------------------|-------------------------------------------------------------------------------------|--------------------------------------|---------|
| ユ ニ ャ イ ト               |                                                                                     |                                      |         |
| 7フチユニット<br>ANTENNA UNIT |  | IC-118*                              | 1       |
|                         |                                                                                     | 000-020-943-00 **                    |         |
|                         |                                                                                     |                                      |         |
| 付 属 品                   |                                                                                     |                                      |         |
| ACCESSORIES             |                                                                                     |                                      |         |
| 付 属 品                   |  | FP16-02501                           | 1       |
| ACCESSORIES             |                                                                                     | 001-175-970-00                       |         |
|                         |                                                                                     |                                      |         |
| 図 書                     |                                                                                     |                                      |         |
| 7フチ交換方法                 |  | TIC-56351-*                          | 1       |
| ANTENNA INSTALL/REPLACE |                                                                                     | 000-173-370-1*                       |         |
|                         |                                                                                     |                                      |         |

コード番号末尾の[\*\*]は、選用品の代表コードを表します。  
CODE NUMBER ENDING WITH “\*\*” INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERIAL.

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.  
(略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

C5674-Z02-B

PACKING LIST

IC-318

16AV-X-9854 -0

1/1

A-5

| N A M E                | O U T L I N E                                                                     | D E S C R I P T I O N / C O D E N o. | Q ' T Y |
|------------------------|-----------------------------------------------------------------------------------|--------------------------------------|---------|
| ユ ニ ッ ト                |                                                                                   |                                      |         |
| 接続箱<br>JUNCTION BOX    |  | IC-318                               | 1       |
|                        |                                                                                   | 000-020-971-00                       |         |
|                        |                                                                                   |                                      |         |
| 工 事 材 料                |                                                                                   |                                      |         |
| INSTALLATION MATERIALS |  | CP16-05101                           | 1       |
|                        |                                                                                   | 001-180-020-00                       |         |
|                        |                                                                                   |                                      |         |



型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.  
(略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

C5674-Z05-A

PACKING LIST

IC-306

16AK-X-9856 -3 1/1  
A-6

| N A M E                             | O U T L I N E                                                                       | DESCRIPTION/CODE № | Q ' T Y |
|-------------------------------------|-------------------------------------------------------------------------------------|--------------------|---------|
| ユニット UNIT                           |                                                                                     |                    |         |
| 着信指示器<br>ALARM UNIT                 |  | 1C-306             | 1       |
|                                     |                                                                                     | 000-043-429-00     |         |
|                                     |                                                                                     | CP16-02201         |         |
| 工事材料 INSTALLATION MATERIALS         |                                                                                     |                    |         |
| +トラタギ'ネジ' 1ｼﾅ<br>SELF-TAPPING SCREW |  | 3X10 SUS304        | 4       |
|                                     |                                                                                     | 000-162-604-10     | 4       |
|                                     |                                                                                     | FV1.25-3(LF)       |         |
|                                     |                                                                                     | 000-166-756-10     |         |
| 圧着端子<br>CRIMP-ON LUG                |  | FV2-3              | 1       |
|                                     |                                                                                     | 000-157-246-10     |         |

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.



略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

C5635-Z05-C

PACKING LIST

IC-305

16AK-X-9855 -3 1/1  
A-7

| N A M E                                          | O U T L I N E                                                                     | DESCRIPTION/CODE № | Q ' T Y |
|--------------------------------------------------|-----------------------------------------------------------------------------------|--------------------|---------|
| ユニット UNIT                                        |                                                                                   |                    |         |
| 避難警報器<br>DISTRESS ALERT UNIT                     |  | IC-305             | 1       |
|                                                  |                                                                                   | 000-043-427-00     | **      |
|                                                  |                                                                                   | CP16-02201         |         |
| 工事材料 INSTALLATION MATERIALS                      |                                                                                   |                    |         |
| +15ﾀﾞｲﾔﾙ'ﾈｼﾞ' 1ｼﾅ<br>SELF-TAPPING SCREW          |  | 3X10 SUS304        | 4       |
|                                                  |                                                                                   | 000-162-604-10     |         |
| 圧着端子<br>CRIMP-ON LUG                             |  | FV1.25-3(LF)       | 4       |
|                                                  |                                                                                   | 000-166-756-10     |         |
| 圧着端子<br>CRIMP-ON LUG                             |  | FV2-3              | 1       |
|                                                  |                                                                                   | 000-157-246-10     |         |
| 図書 DOCUMENT                                      |                                                                                   |                    |         |
| IC-305/307引き渡し前の注意<br>BEFORE DELIVERING TO OWNER |                                                                                   |                    | 1       |
|                                                  |                                                                                   | C52-00202-*        |         |
|                                                  |                                                                                   | 000-809-354-1*     | (*1)    |

1ｼﾅ1ｼﾅ\*\*\*は、有り無しの仕様が有ります。  
AVAILABLE WITH OR WITHOUT \*\*\*\*\* UNIT.

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)


C5635-Z04-C



|          |                |                |
|----------|----------------|----------------|
| CODE NO. | 001-189-560-00 | 16AV-X-9404 -3 |
| TYPE     | CP16-05511     |                |

1/1

工事材料表

| INSTALLATION MATERIALS |                                |                                                                                     |                                    |            |                                               |  |  |
|------------------------|--------------------------------|-------------------------------------------------------------------------------------|------------------------------------|------------|-----------------------------------------------|--|--|
| 番号<br>NO.              | 名称<br>NAME                     | 略図<br>OUTLINE                                                                       | 型名／規格<br>DESCRIPTIONS              | 数量<br>Q'TY | 用途／備考<br>REMARKS                              |  |  |
| 1                      | ケーブル<br>CABLE TIE              |  | CF-4506<br>CODE NO. 000-173-109-10 | 5          | アンテナケーブル固定用<br>For securing the antenna cable |  |  |
| 2                      | ケーブル束縛テープ<br>SELF-BONDING TAPE |  | NO.15<br>CODE NO. 000-174-046-10   | 1          |                                               |  |  |
| 3                      | ケーブル組品<br>CABLE ASSY.          |  | RF-4747<br>CODE NO. 000-566-000-12 | 1          |                                               |  |  |

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)


FURUNO ELECTRIC CO., LTD.

CS674-M04-D

|          |                |                |
|----------|----------------|----------------|
| CODE NO. | 001-180-020-00 | 16AV-X-9401 -0 |
| TYPE     | CP16-05101     |                |

1/1

工事材料表

| INSTALLATION MATERIALS |                                  |                                                                                   |                                        |            |                  |  |  |
|------------------------|----------------------------------|-----------------------------------------------------------------------------------|----------------------------------------|------------|------------------|--|--|
| 番号<br>NO.              | 名称<br>NAME                       | 略図<br>OUTLINE                                                                     | 型名／規格<br>DESCRIPTIONS                  | 数量<br>Q'TY | 用途／備考<br>REMARKS |  |  |
| 1                      | セルフタッピングネジ<br>SELF TAPPING SCREW |  | 4X16 SUS304<br>CODE NO. 000-102-609-10 | 4          |                  |  |  |

型式/コード番号が2段の場合、下段より上段に代わる通線製品であり、どちらかが入っています。 なお、品質は変わりません。

TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

FURUNO ELECTRIC CO., LTD.

CS674-M03-A



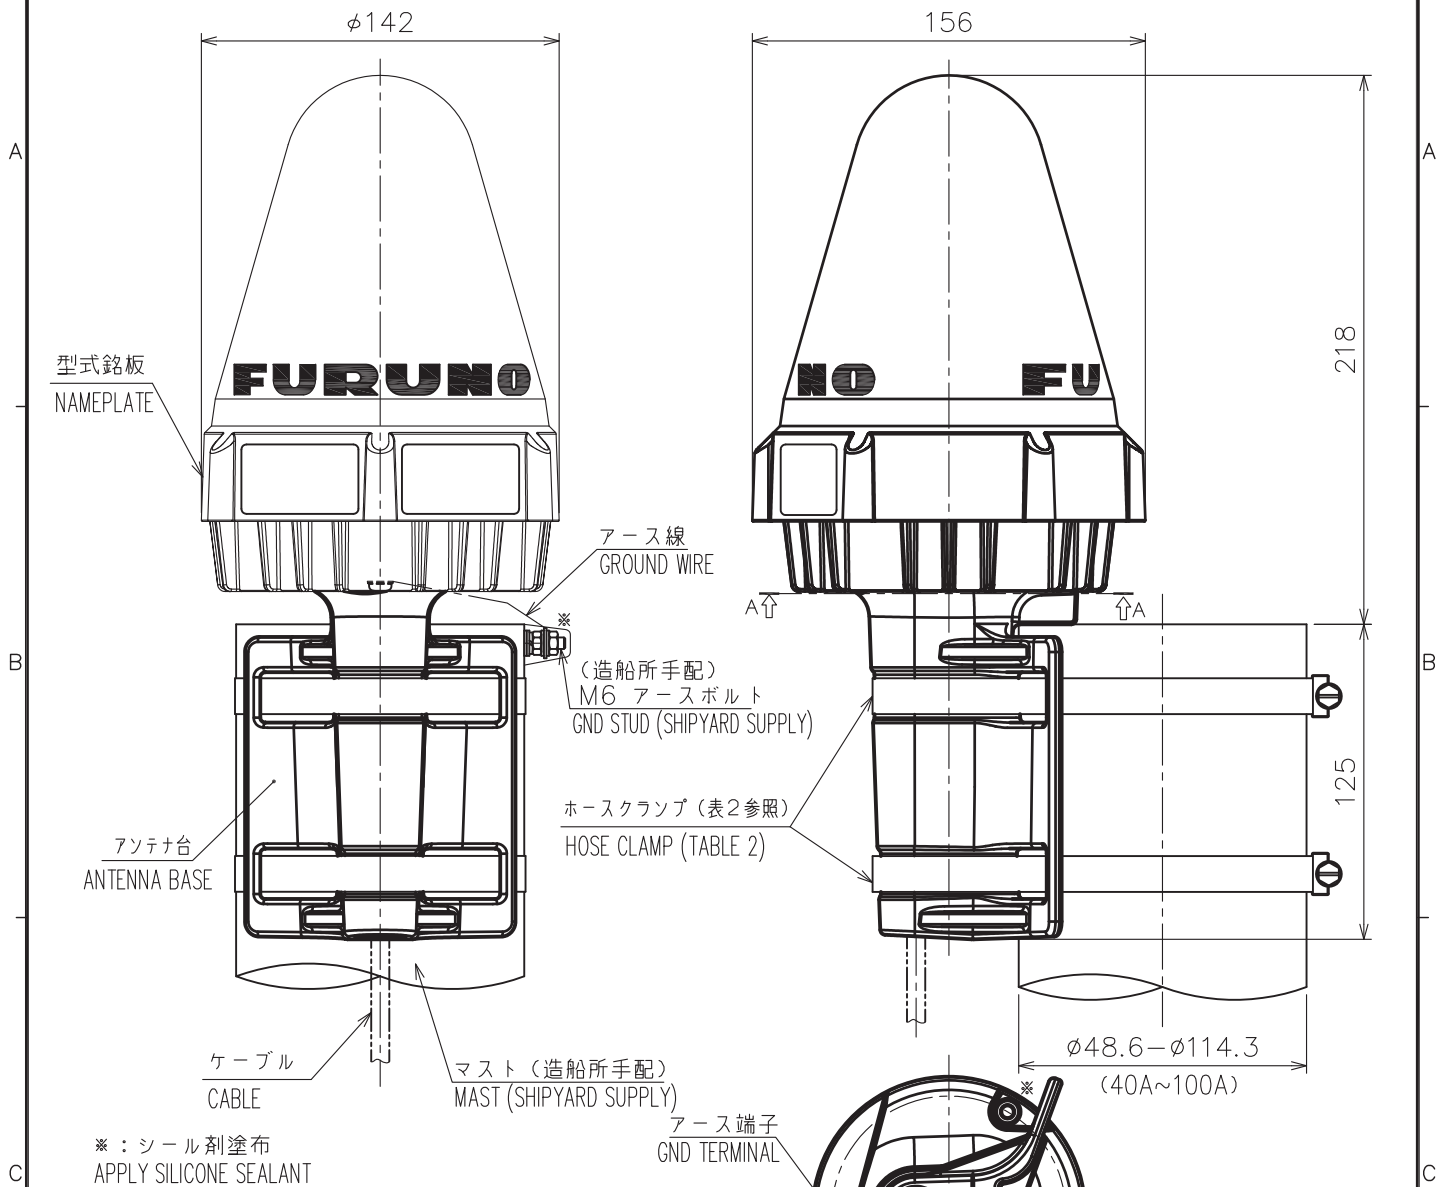


表2 ホースクランプ (オプション)  
TABLE 2 HOSE CLAMP (OPTION)

| TYPE    | MODEL     | CODE No.  | DIA. OF MAST                  |
|---------|-----------|-----------|-------------------------------|
| 77-95   | OP16-76-1 | 001443450 | $\phi 48.6$ (40A)             |
| 104-138 | OP16-76-2 | 001443460 | $\phi 76.3-89.1$ (65A-80A)    |
| 130-165 | OP16-76-3 | 001443470 | $\phi 101.6-114.3$ (90A-100A) |

- 注 記 1) 指定外の寸法公差は表1による。  
2) 対応マスト径は40A ( $\phi 48.6$ ) ~100A ( $\phi 114.3$ )

- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
2. MAST DIAMETER: 40A ( $\phi 48.6$ ) TO 100A ( $\phi 114.3$ )





表1 TABLE 1

| 寸法区分 (mm)<br>DIMENSION | 公差 (mm)<br>TOLERANCE |
|------------------------|----------------------|
| $L \leq 50$            | $\pm 1.5$            |
| $50 < L \leq 100$      | $\pm 2.5$            |
| $100 < L \leq 500$     | $\pm 3$              |

|          |                        |                                                  |                    |
|----------|------------------------|--------------------------------------------------|--------------------|
| DRAWN    | 15/Feb/2016 T.YAMASAKI | TITLE                                            | IC-115/116/118/119 |
| CHECKED  | 16/Feb/2016 H.MAKI     | 名称                                               | アンテナユニット           |
| APPROVED | 22/Feb/2016 H.MAKI     | 外寸図                                              |                    |
| SCALE    | 1/3                    | MASS                                             | 1.9 $\pm 10\%$ kg  |
| DWG.No.  | C5674-G05-E            | REF.No.                                          | 16-023-254G-1      |
|          |                        | 質量は工材を含む<br>MASS INCLUDES INSTALLATION MATERIALS | NAME               |
|          |                        |                                                  | ANTENNA UNIT       |
|          |                        |                                                  | OUTLINE DRAWING    |

表 1 TABLE 1

| 寸法区分 (mm)<br>DIMENSION | 公差 (mm)<br>TOLERANCE |
|------------------------|----------------------|
| $L \leq 50$            | $\pm 1.5$            |
| $50 < L \leq 100$      | $\pm 2.5$            |
| $100 < L \leq 500$     | $\pm 3$              |

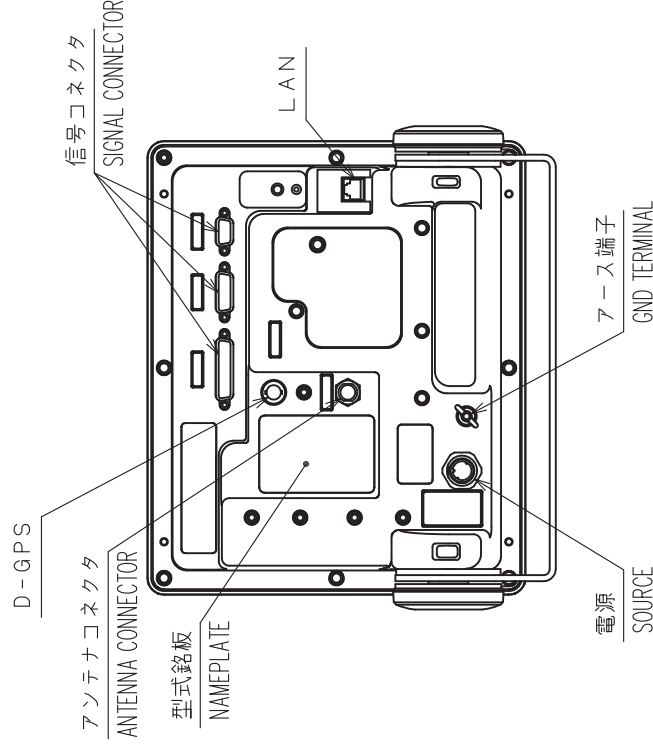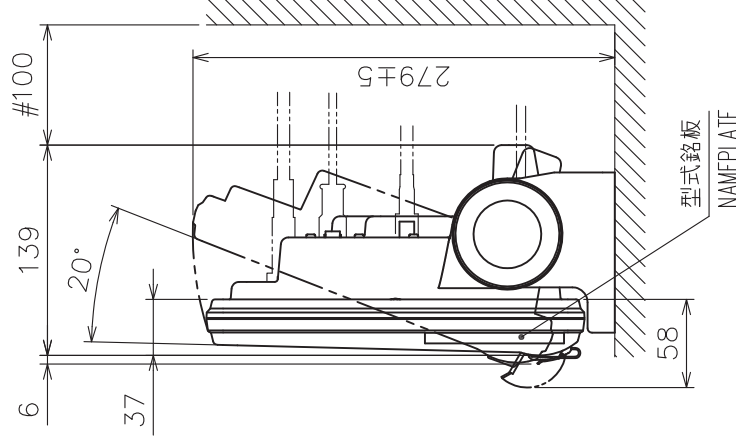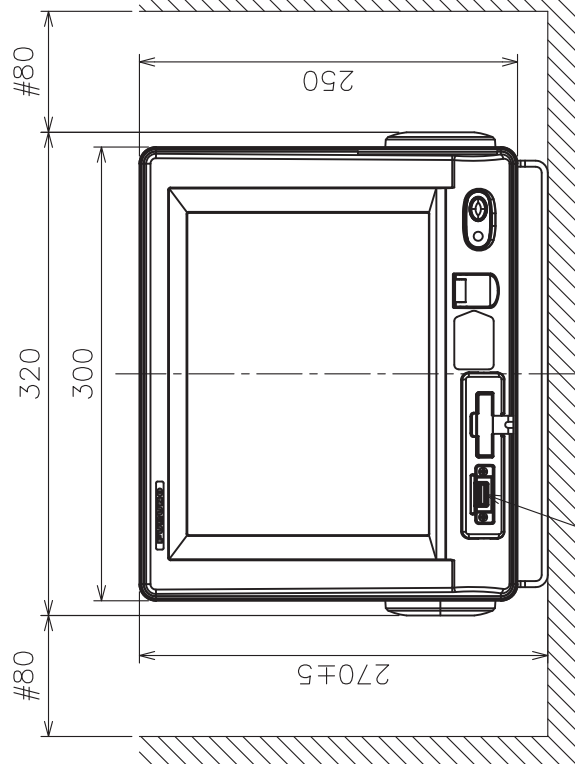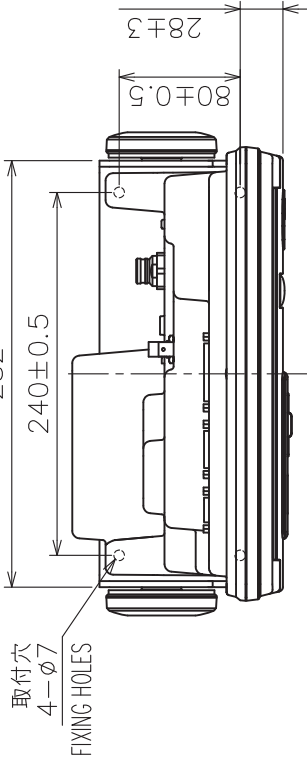




- 注 記 1) 指定外の寸法公差は表 1 による。  
 2) # 印寸法は最小サービスクリアランスとする。  
 3) 取付用ネジはトラスタッピンネジ呼び径 5 × 2.0 を使用のこと。
- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
 2. #: MINIMUM SERVICE CLEARANCE.  
 3. USE TAPPING SCREWS  $\phi 5 \times 2.0$  FOR FIXING THE UNIT.

| DRAWN    | 20/Jan/2012 | T. YAMASAKI  | TITLE         | IC-218                         |
|----------|-------------|--------------|---------------|--------------------------------|
| CHECKED  | 20/Jan/2012 | H. MAKI      | 名称            | ターミナルユニット (卓上装備)               |
| APPROVED | 24/Jan/2012 | Y. NISHIYAMA | 外寸図           |                                |
| SCALE    | 1/5         | WASS 4.0     | NAME          | TERMINAL UNIT (TABLETOP MOUNT) |
| DMC No.  | C5674-G01-A | REF. No.     | 16-023-351G-0 | OUTLINE DRAWING                |

表 1 TABLE 1

| 寸法区分 (mm)<br>DIMENSION | 公差 (mm)<br>TOLERANCE |
|------------------------|----------------------|
| $L \leq 50$            | $\pm 1.5$            |
| $50 < L \leq 100$      | $\pm 2.5$            |
| $100 < L \leq 500$     | $\pm 3$              |

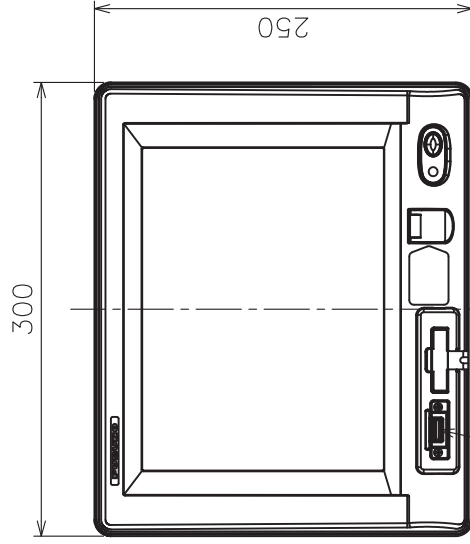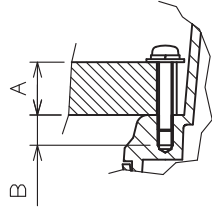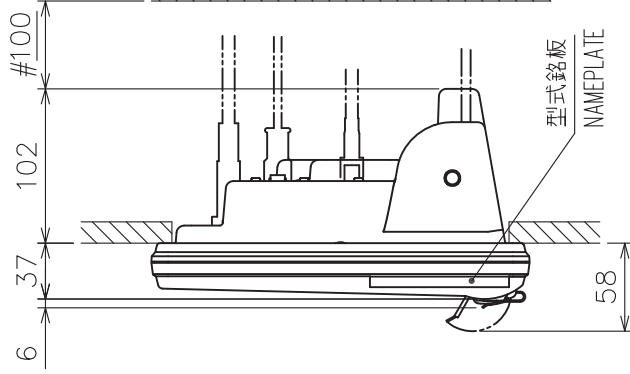
取付部詳細 (尺度: 1/2)  
DETAIL FOR FIXING (SCALE: 1/2)



キーボードコネクタ  
KEYBOARD CONNECTOR

- 注 記 1) 指定外の寸法公差は表 1 による。  
2) # 印寸法は最小サービスクリアランスとする。  
3) 取付用ネジは、セムスネジ B M4×2.0 を使用のこと。  
壁厚さ (A) は  $1.1 \leq A \leq 1.4$  とする。  
または、ネジ長さを  $(A + 7.8) \pm 2$  とする。  
筐体にはネジ部を 8 mm 以上入れないこと。 ( $B \leq 8$ )

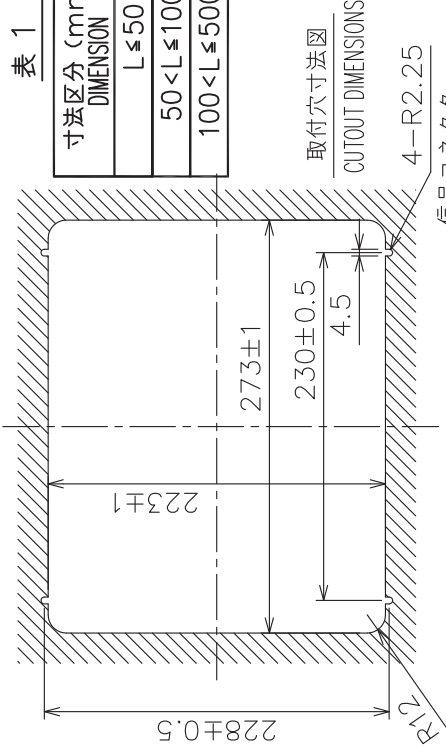- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
2. #: MINIMUM SERVICE CLEARANCE.  
3. USE SEMS B SCREWS M4×2.0 FOR FIXING THE UNIT.  
THICKNESS (A):  $1.1 \leq A \leq 1.4$  OR SCREW LENGTH:  $(A + 7.8) \pm 2$ .  
DO NOT FASTEN SCREWS INTO UNIT MORE THAN 8 mm ( $B \leq 8$ ).



取付穴寸法図  
CUTOOUT DIMENSIONS

4-R2.25

信号コネクタ  
SIGNAL CONNECTOR

LAN

電源  
SOURCE

アース端子  
GND TERMINAL

アンテナコネクタ  
ANTENNA CONNECTOR

D-GPS

型式銘板  
NAMEPLATE

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源

アース端子

GND TERMINAL

アンテナコネクタ

D-GPS

型式銘板

電源


アース端子

GND TERMINAL

アンテナコネクタ

表1 TABLE 1

| 寸法区分 (mm)<br>DIMENSION | 公差 (mm)<br>TOLERANCE |
|------------------------|----------------------|
| $L \leq 50$            | $\pm 1.5$            |
| $50 < L \leq 100$      | $\pm 2.5$            |
| $100 < L \leq 500$     | $\pm 3$              |

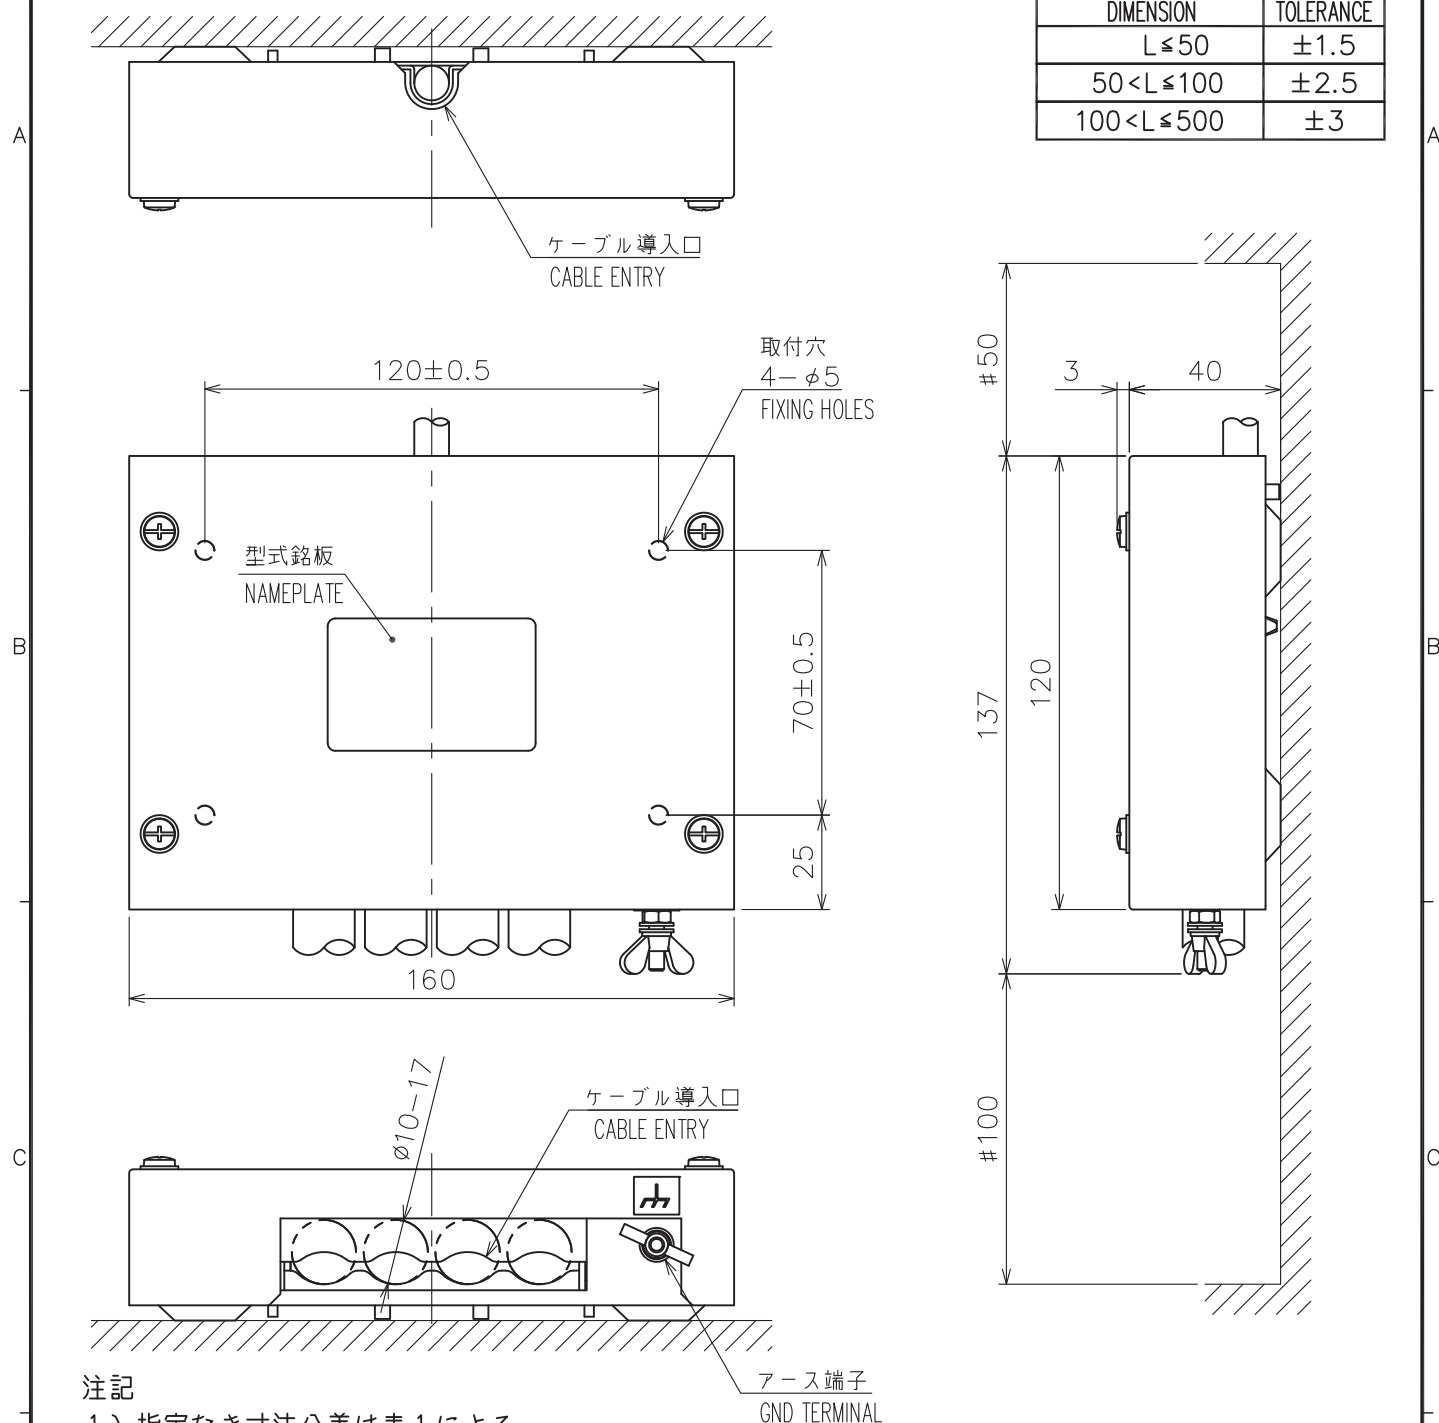

注記

- 1) 指定なき寸法公差は表 1 による。  
2) #印寸法は、最小サービス空間寸法とする。  
3) 取付にはトラスタッピンネジ呼び径 4×16 を使用のこと。

NOTE

1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
2. #: MINIMUM SERVICE CLEARANCE.
3. USE TAPPING SCREWS  $\phi 4 \times 16$  FOR FIXING THE UNIT.

|                                  |                  |                                              |                   |
|----------------------------------|------------------|----------------------------------------------|-------------------|
| DRAWN 17/May/2012 T.YAMASAKI     |                  | TITLE IC-318                                 |                   |
| CHECKED 17/May/2012 H.MAKI       |                  | 名称 接続箱                                       |                   |
| APPROVED 17/May/2012 Y.NISHIYAMA |                  | 外寸図                                          |                   |
| SCALE 1/2                        | MASS 0.7 ±10% kg | 質量はケーブルを含まず。<br>MASS DOES NOT INCLUDE CABLE. | NAME JUNCTION BOX |
| DWG. No. C5674-G03- B            |                  | REF. No. 16-023-550G-1                       | OUTLINE DRAWING   |


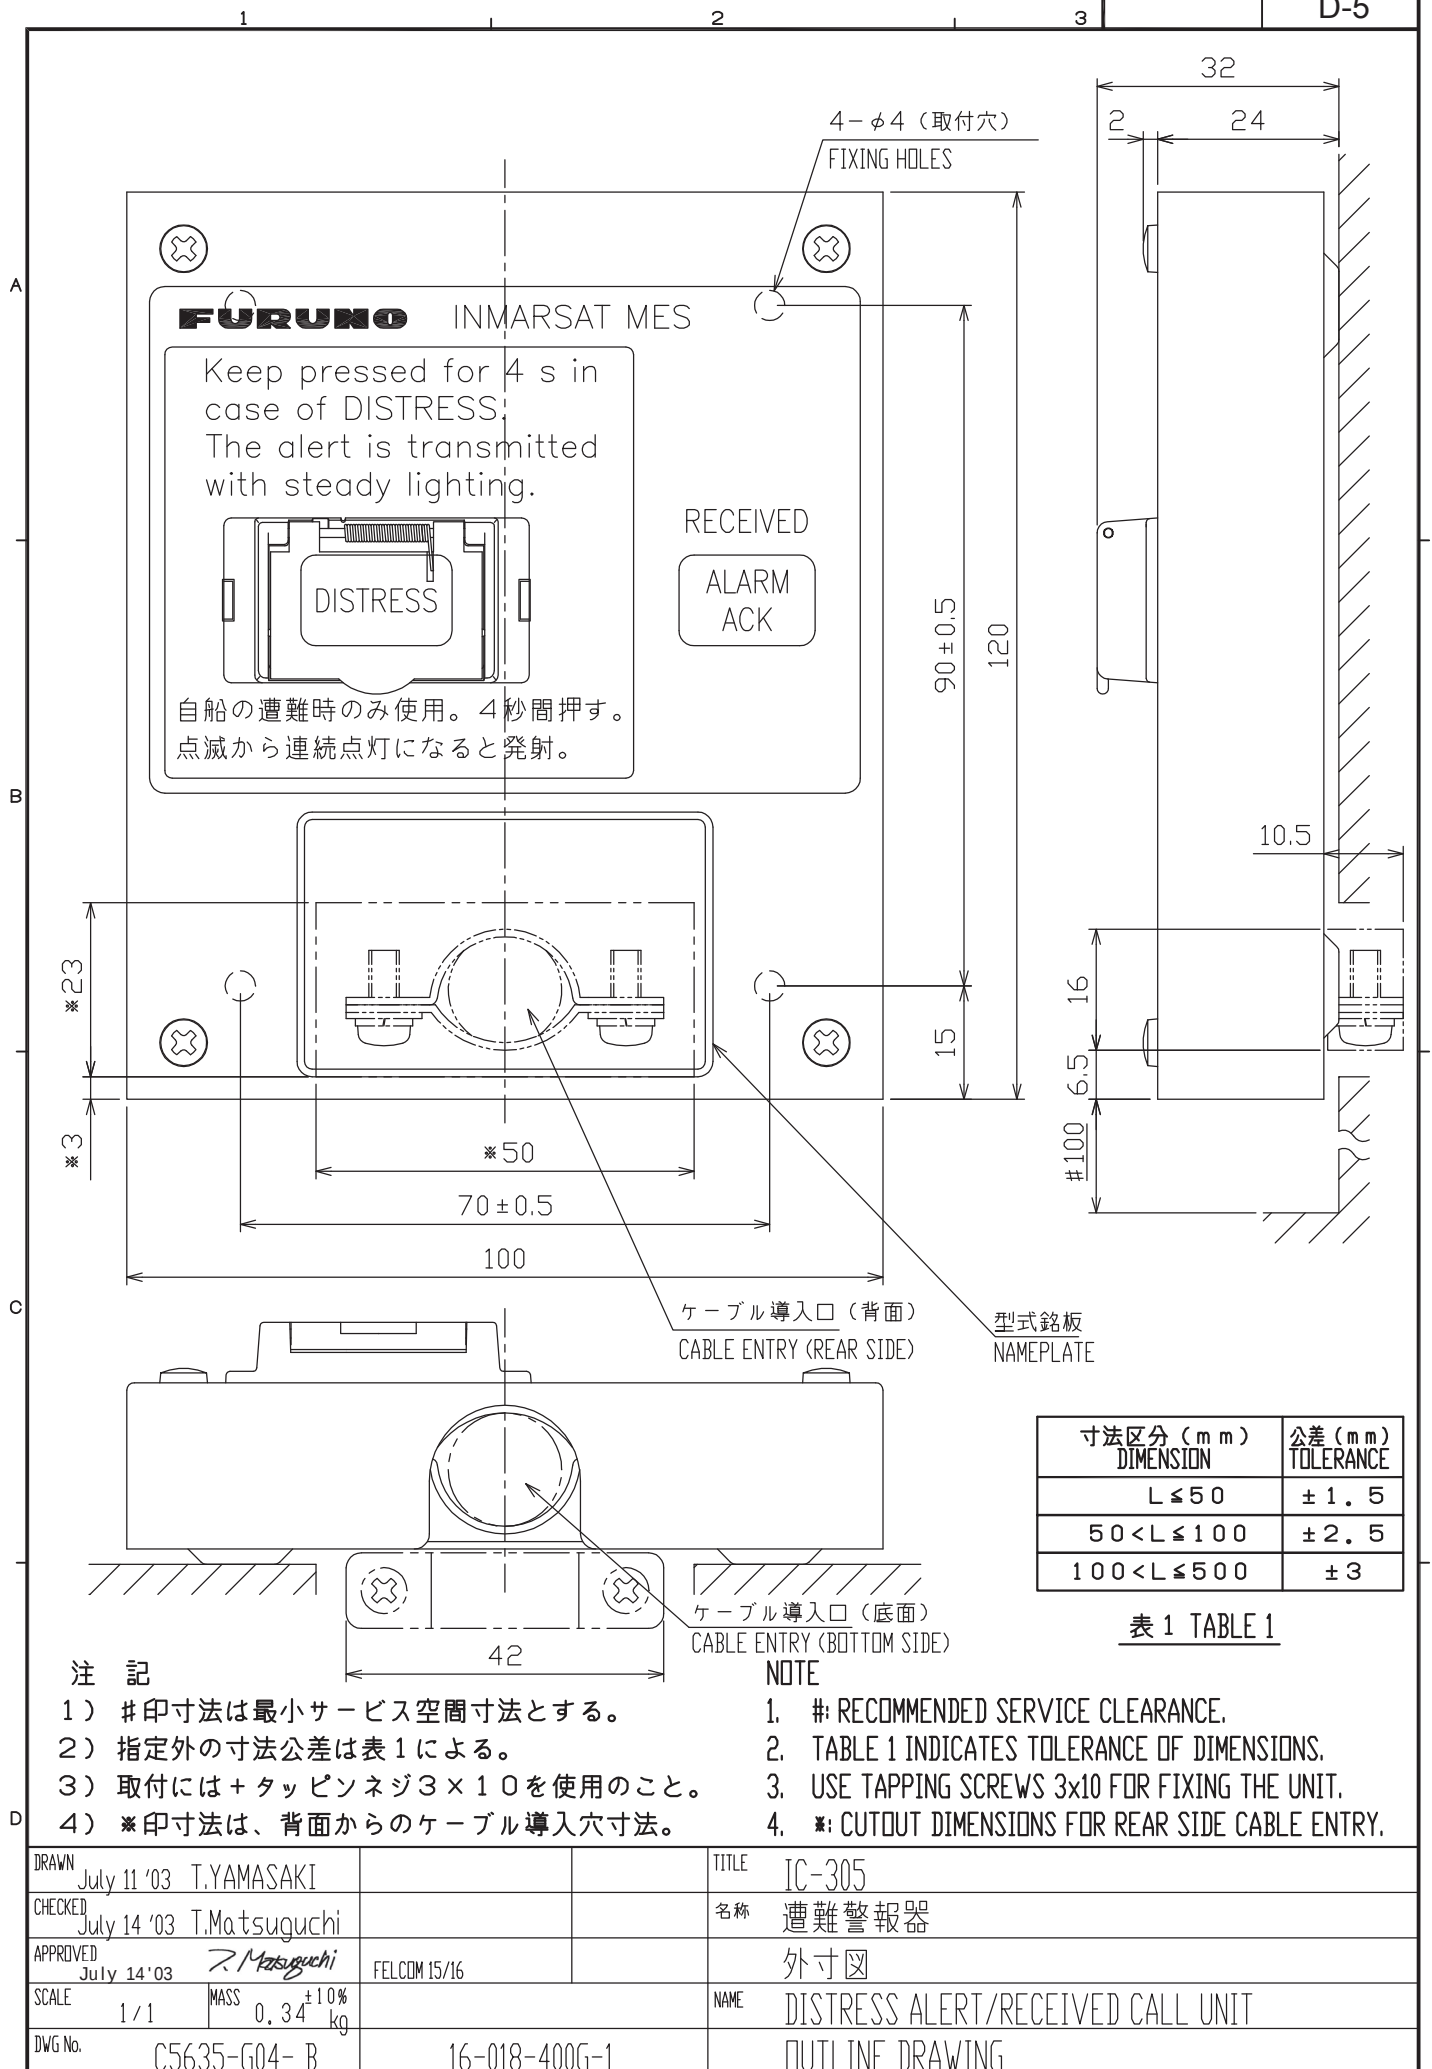
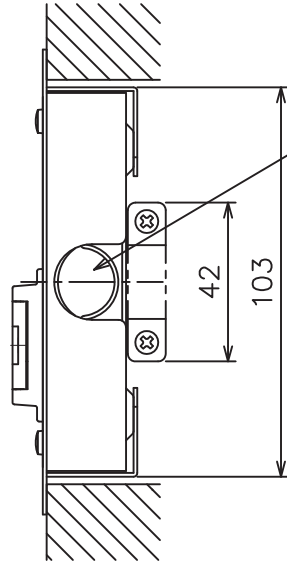
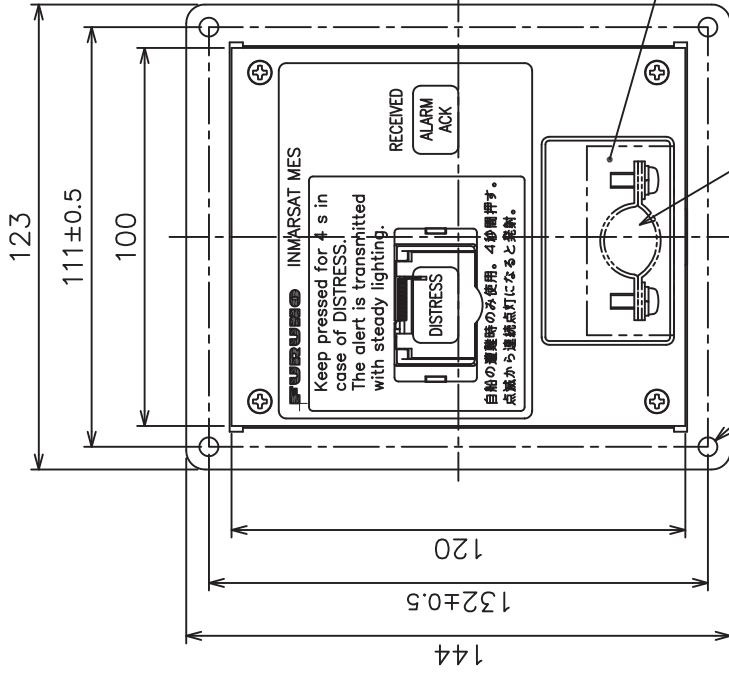


表 1 TABLE 1

| 寸法区分 (mm)          | 公差 (mm)   |
|--------------------|-----------|
| DIMENSION          | TOLERANCE |
| $L \leq 50$        | $\pm 1.5$ |
| $50 < L \leq 100$  | $\pm 2.5$ |
| $100 < L \leq 500$ | $\pm 3$   |

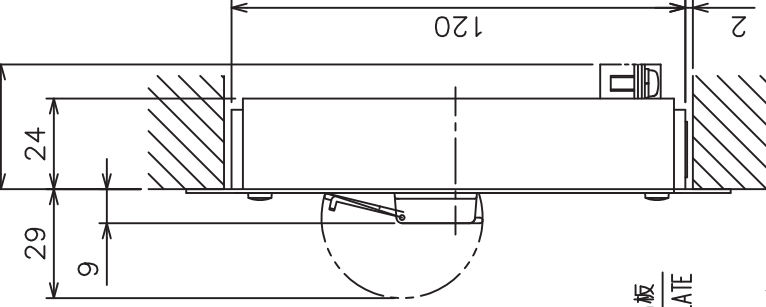(FOR REAR ENTRY)  
33 (背面時)



- 注 記 1) 指定外の寸法公差は表 1 による。  
2) 取付用ネジは+トラスタップピンネジ呼び径 4×1.6 を使用のこと。
- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
2. USE TAPPING SCREWS  $\phi 4 \times 1.6$  FOR FIXING THE UNIT.

|          |             |             |               |                                                 |
|----------|-------------|-------------|---------------|-------------------------------------------------|
| DRAWN    | 17/May/2012 | T.YAMASAKI  | TITLE         | IC-305                                          |
| CHECKED  | 17/May/2012 | H.MAKI      | 名称            | 遭難警報器 (埋込装備)                                    |
| APPROVED | 17/May/2012 | Y.NISHIYAMA | 外寸図           |                                                 |
| SCALE    | 1/2         | WSS 0.45    | NAME          | DISTRESS ALERT/RECEIVED CALL UNIT (FLUSH MOUNT) |
| DWG.No.  | C5635-C12-C | REF.No.     | 16-018-4100-3 | OUTLINE DRAWING                                 |

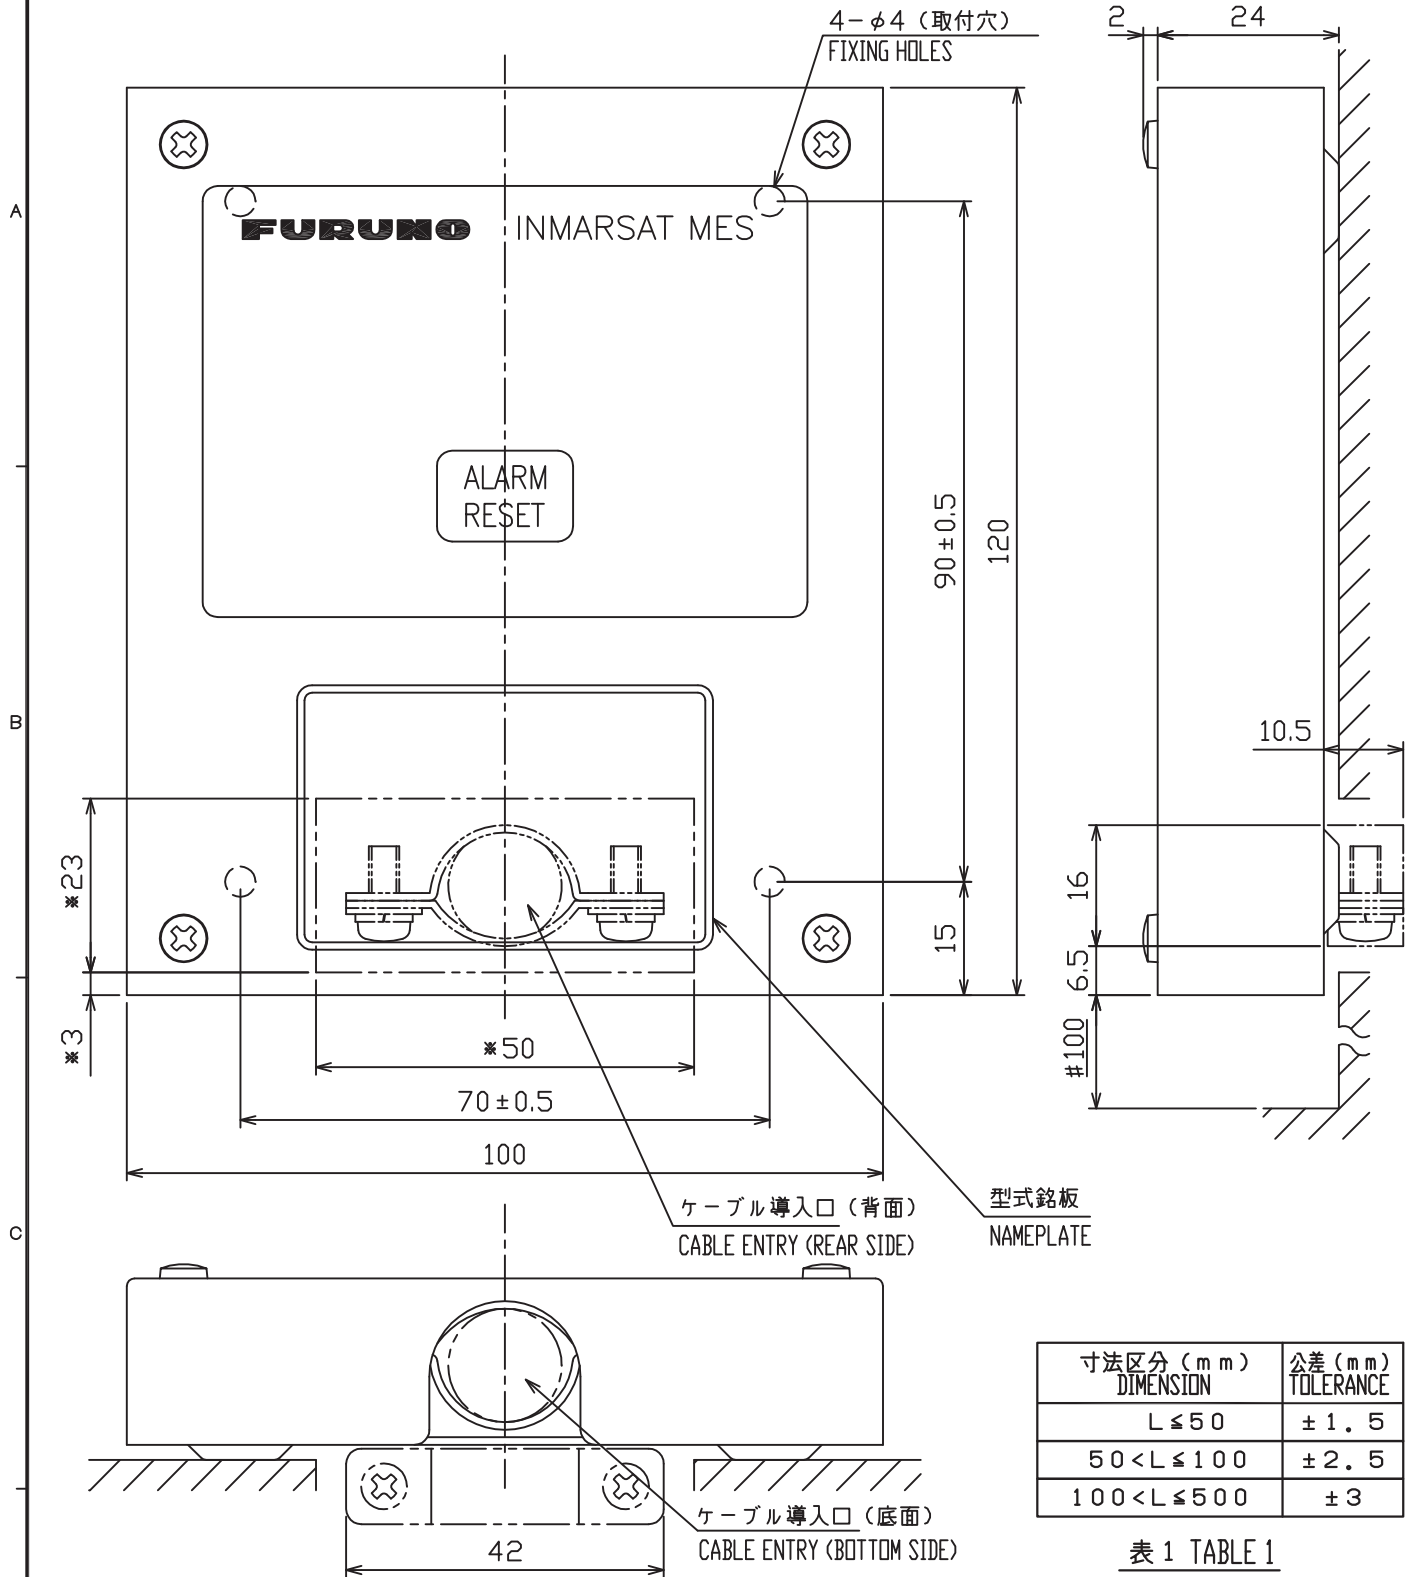


表 1 TABLE 1

## 注 記

- 1) #印寸法は最小サービス空間寸法とする。
- 2) 指定外の寸法公差は表 1 による。
- 3) 取付には+タッピンネジ 3×10 を使用のこと。
- 4) \*印寸法は、背面からのケーブル導入穴寸法。



## NOTE

1. #: RECOMMENDED SERVICE CLEARANCE.
2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
3. USE TAPPING SCREWS 3x10 FOR FIXING THE UNIT.
4. \*: CUTOUT DIMENSIONS FOR REAR SIDE CABLE ENTRY.

|          |                               |               |                         |       |                 |
|----------|-------------------------------|---------------|-------------------------|-------|-----------------|
| DRAWN    | Dec. 19 '02 T.YAMASAKI        |               |                         | TITLE | IC-306          |
| CHECKED  | Dec. 19 '02 Y.KIMURA          |               |                         | 名称    | アラームユニット        |
| APPROVED | Dec. 20, '02 <i>Y. Kimura</i> | FELCOM 15/16  |                         |       | 外寸図             |
| SCALE    | 1/1                           | MASS          | 0.33 <sup>±10%</sup> kg | NAME  | ALARM UNIT      |
| DWG No.  | C5635-G05- B                  | 16-018-500G-1 |                         |       | OUTLINE DRAWING |


表 1 TABLE 1
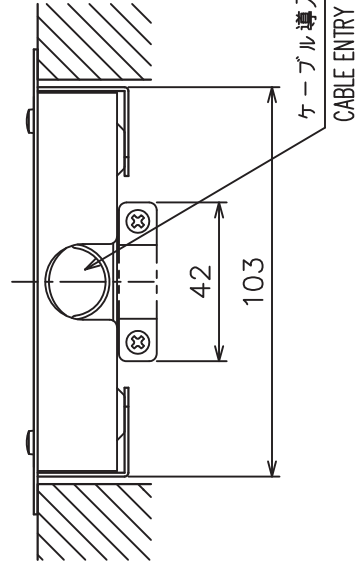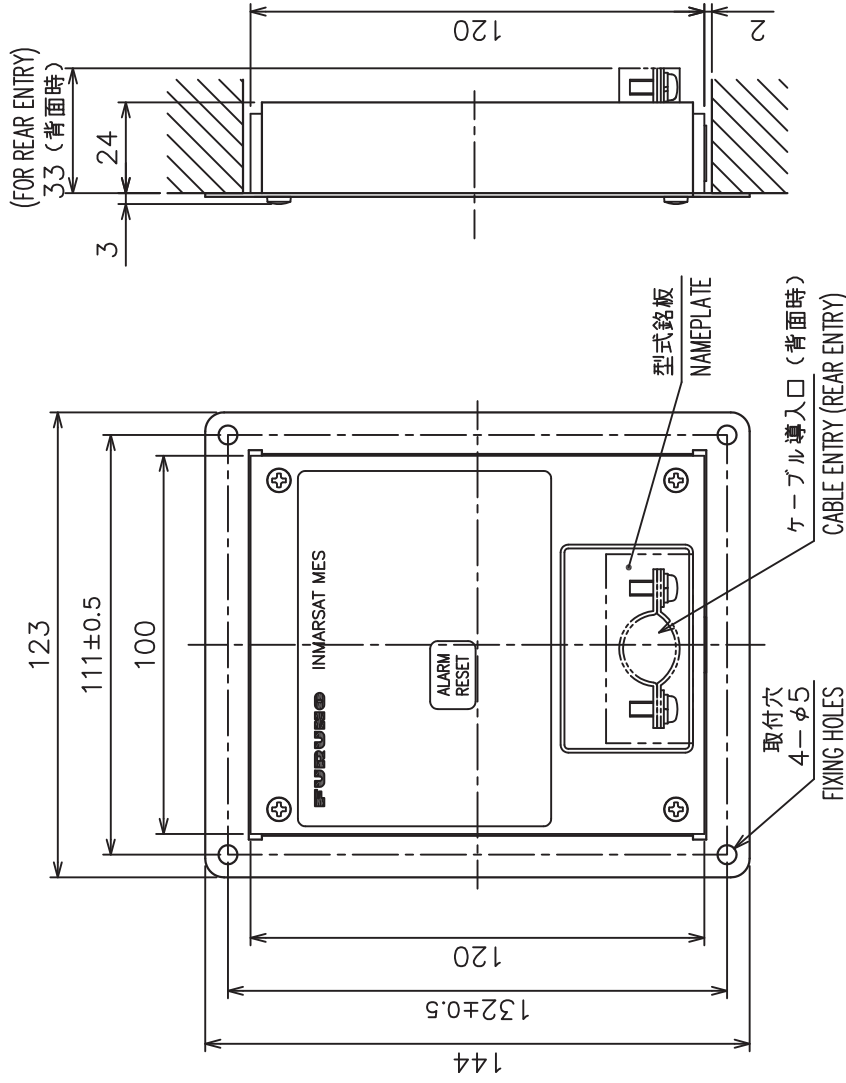
| 寸法区分 (mm)<br>DIMENSION | 公差 (mm)<br>TOLERANCE |
|------------------------|----------------------|
| $L \leq 50$            | $\pm 1.5$            |
| $50 < L \leq 100$      | $\pm 2.5$            |
| $100 < L \leq 500$     | $\pm 3$              |



- 注 記 1) 指定外の寸法公差は表 1 による。  
 2) 取付用ネジは+トラスタップピンネジ呼び径 4×16 を使用のこと。
- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
 2. USE TAPPING SCREWS  $\phi 4 \times 16$  FOR FIXING THE UNIT.

|          |             |             |               |                          |
|----------|-------------|-------------|---------------|--------------------------|
| DRAWN    | 17/May/2012 | T.YAMASAKI  | TITLE         | IC-306                   |
| CHECKED  | 17/May/2012 | H.MAKI      | 名 称           | アラームユニット (埋込装備)          |
| APPROVED | 17/May/2012 | Y.NISHIYAMA | 外寸図           |                          |
| SCALE    | 1/2         | WSS 0.44 kg | NAME          | ALARM UNIT (FLUSH MOUNT) |
| DWG.No.  | C5635-G09-C | REF.No.     | 16-018-510G-2 | OUTLINE DRAWING          |

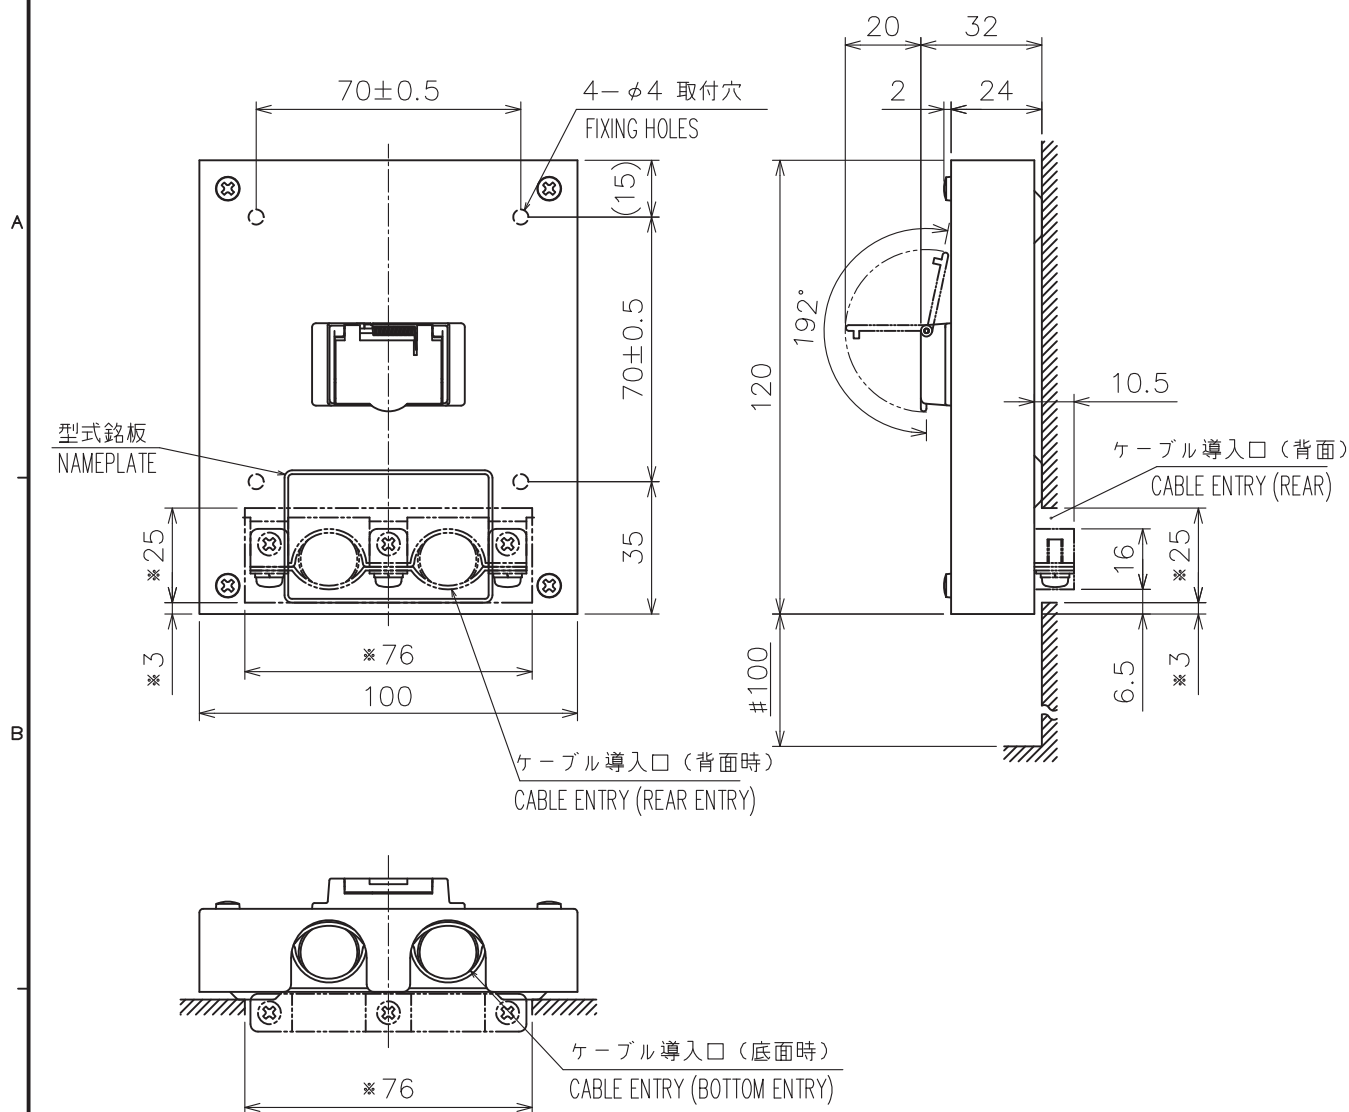

注 記

- 1) 指定外の寸法公差は表1による。
- 2) #印寸法は最小サービス空間寸法とする。
- 3) 取付用ネジはタップインネジ呼び径3×10を使用のこと。
- 4) \*印寸法は、ケーブルを背面から導入時に設ける穴の寸法

NOTE

1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
2. #: MINIMUM SERVICE CLEARANCE.
3. USE TAPPING SCREWS  $\phi 3 \times 10$  FOR FIXING THE UNIT.
4. \*: CUTOUT DIMENSIONS FOR REAR CABLE ENTRY.


表 1 TABLE 1

| 寸法区分 (mm)<br>DIMENSION | 公差 (mm)<br>TOLERANCE |
|------------------------|----------------------|
| $L \leq 50$            | $\pm 1.5$            |
| $50 < L \leq 100$      | $\pm 2.5$            |
| $100 < L \leq 500$     | $\pm 3$              |

|          |              |                      |                 |               |       |                                  |
|----------|--------------|----------------------|-----------------|---------------|-------|----------------------------------|
| DRAWN    | 5/0ct/2010   | T.YAMASAKI           |                 |               | TITLE | IC-307                           |
| CHECKED  | 5/0ct/2010   | T.TAKAHASHI          |                 |               | 名称    | 保安警報発呼器（壁掛装備）                    |
| APPROVED | 6/0ct/2010   | Y. NISHIYAMA         | FELCOM 12/15/16 |               |       | 外寸図                              |
| SCALE    | 1/2          | MASS 0.35 ±10%<br>kg |                 |               | NAME  | SSAS ALERT UNIT (BULKHEAD MOUNT) |
| DWG.No.  | C5635-G10- C |                      | REF.No.         | 16-018-700G-3 |       | OUTLINE DRAWING                  |

表 1 TABLE 1

| 寸法区分 (mm)<br>DIMENSION | 公差 (mm)<br>TOLERANCE |
|------------------------|----------------------|
| $L \leq 50$            | $\pm 1.5$            |
| $50 < L \leq 100$      | $\pm 2.5$            |
| $100 < L \leq 500$     | $\pm 3$              |

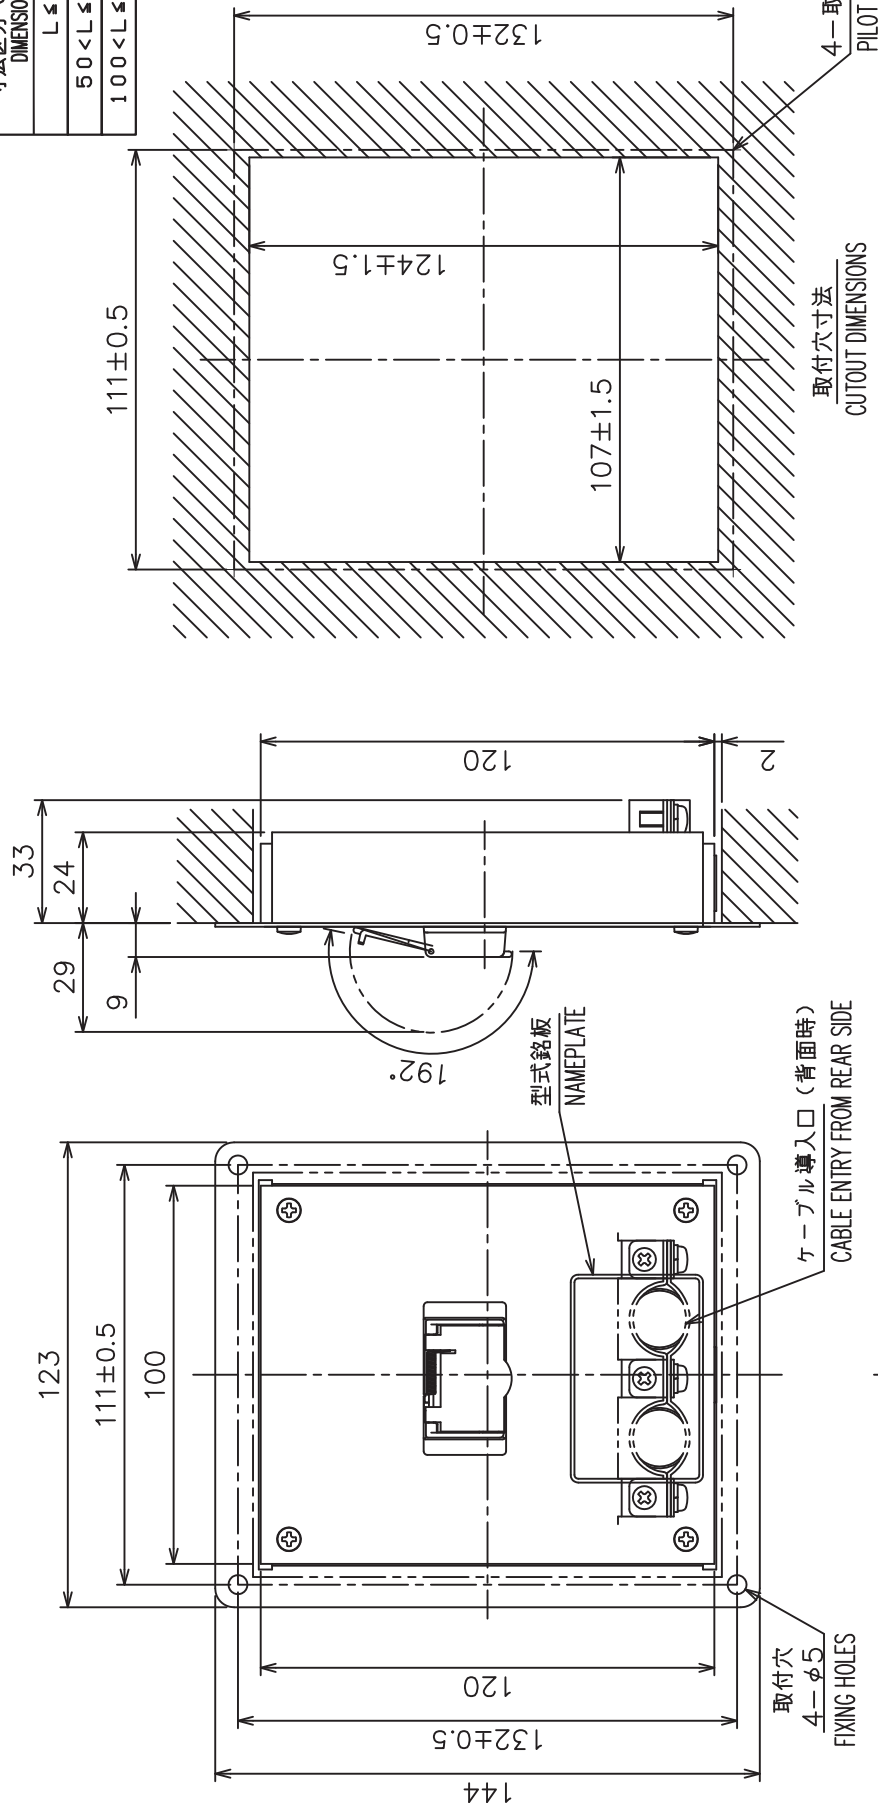

注 記 1) 指定外の寸法公差は表 1 による。

2) 取付用ネジは+トラスネジ呼び径 4×16 を使用のこと。




NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.

2. USE TAPPING SCREWS  $\phi 4 \times 16$  FOR FIXING THE UNIT.

|          |             |                           |               |                               |
|----------|-------------|---------------------------|---------------|-------------------------------|
| DRAWN    | 13/Jun/2014 | I. YAMASAKI               | TITLE         | IC-307                        |
| CHECKED  | 13/Jun/2014 | H. MAKI                   | 名称            | 保安警報発呼器 (埋込装備)                |
| APPROVED | 16/Jun/2014 | H. MAKI                   | 外寸図           |                               |
| SCALE    | 1/2         | MASS $\pm 10\%$<br>0.5 kg | NAME          | SSAS ALERT UNIT (FLUSH MOUNT) |
| DWG. No. | C5635-G11-B | REF. No.                  | 16-018-710G-1 | OUTLINE DRAWING               |

表 1 TABLE 1

| 寸法区分 (mm)<br>DIMENSION | 公差 (mm)<br>TOLERANCE |
|------------------------|----------------------|
| L ≤ 50                 | ± 1.5                |
| 50 < L ≤ 100           | ± 2.5                |
| 100 < L ≤ 500          | ± 3                  |

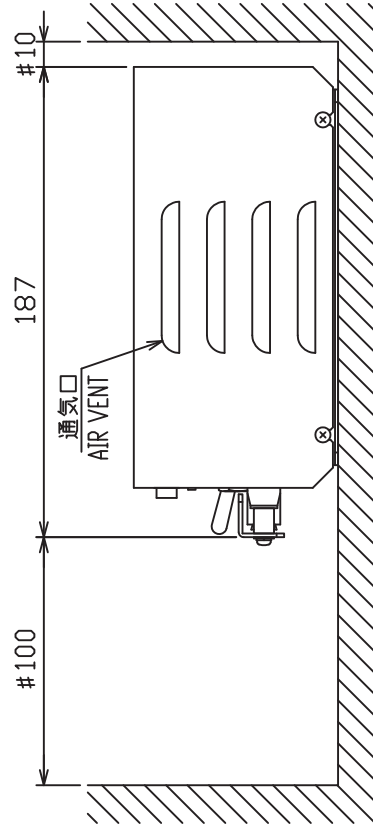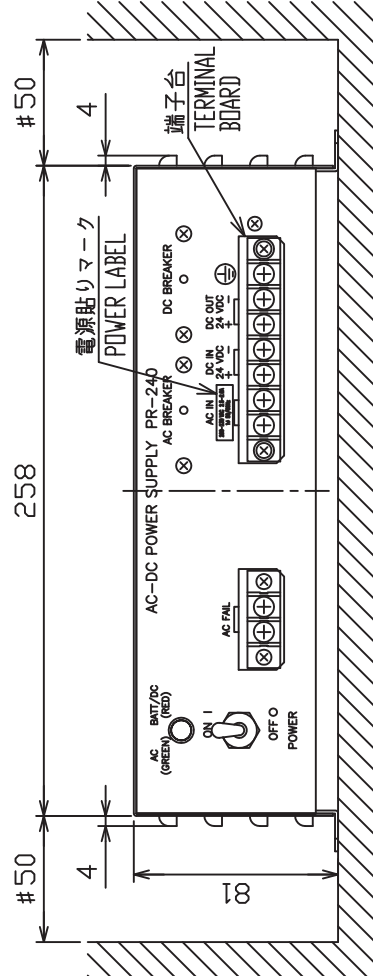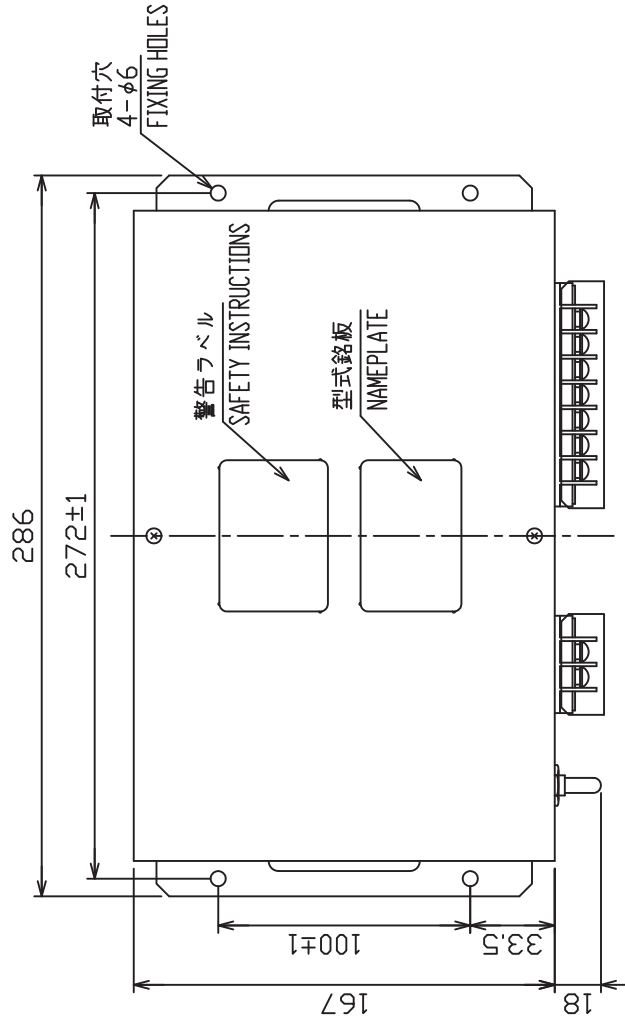

- 注 記 1) 指定なき寸法公差は表 1 による。  
 2) #印寸法は最小サービス空間寸法とする。  
 3) 取付用ネジは+トラスタッピンネジ 呼び径 4 × 1.6 を使用のこと。
- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
 2. # MINIMUM SERVICE CLEARANCE.  
 3. USE TAPPING SCREWS Ø4x1.6 FOR FIXING THE UNIT.


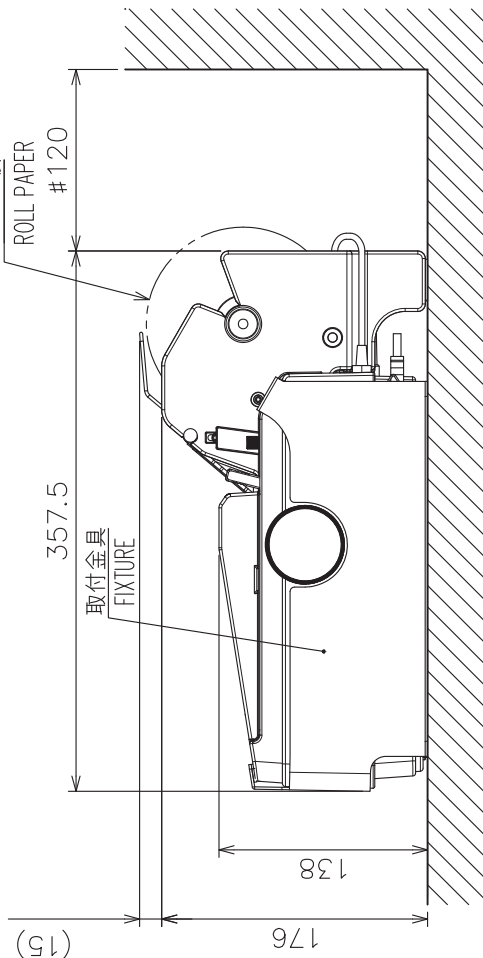
|          |                      |         |                         |
|----------|----------------------|---------|-------------------------|
| DRAWN    | 25/Sep/09 T.YAMASAKI | TITLE   | PR-240                  |
| CHECKED  | 25/Sep/09 T.TAKENO   | 名*      | AC/DC 電源ユニット            |
| APPROVED | 26/Oct/09 R.Esumi    | 外寸図     |                         |
| SCALE    | 1/3                  | NAME    | AC/DC POWER SUPPLY UNIT |
| FIG.No.  | C5003-603-J          | REF.No. | 24-003-500G-4           |
|          |                      |         | OUTLINE DRAWING         |

表1 TABLE 1

| 寸法区分 (mm)<br>DIMENSION | 公差 (mm)<br>TOLERANCE |
|------------------------|----------------------|
| L ≤ 50                 | ±1.5                 |
| 50 < L ≤ 100           | ±2.5                 |
| 100 < L ≤ 500          | ±3                   |

- 注記 1) 指定外の寸法公差は表1による。  
 2) #印寸法は最小サービスペース寸法とする。  
 3) 取付用ネジはトラスタツピンネジ呼び径5×20を使用のこと。

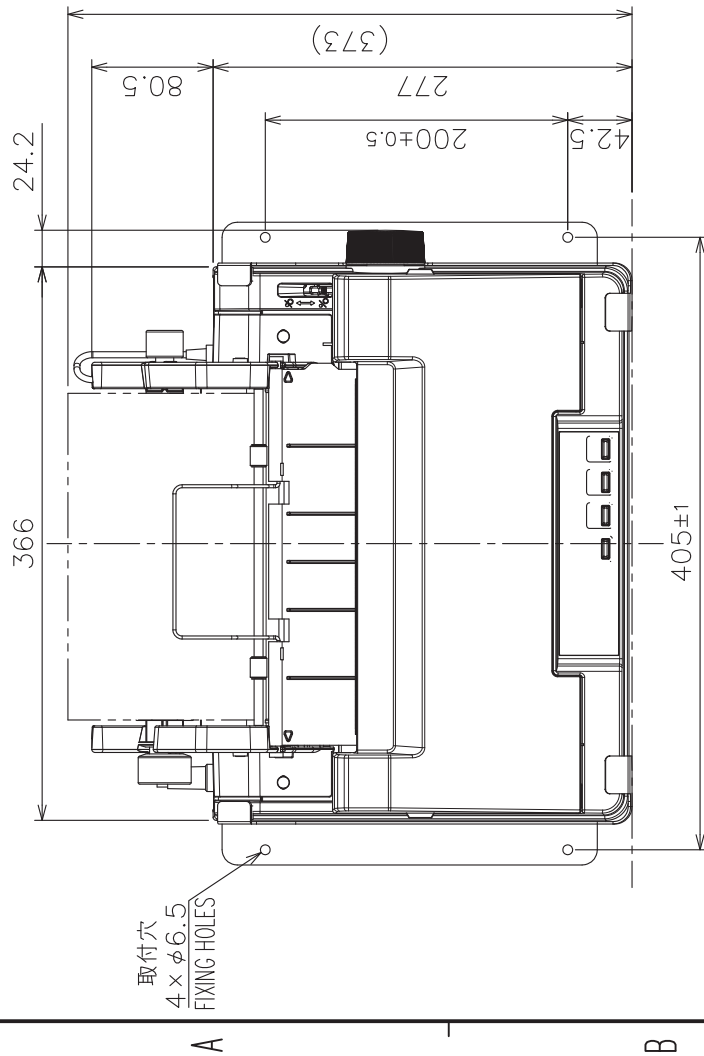- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
 2. #: MINIMUM SERVICE CLEARANCE.  
 3. USE TAPPING SCREWS  $\phi 5 \times 20$  FOR FIXING THE UNIT.



|          |                        |                                                 |                 |
|----------|------------------------|-------------------------------------------------|-----------------|
| DRAWN    | 6/Jul/2012 I.YAMASAKI  | TITLE                                           | PP-520          |
| CHECKED  | 6/Jul/2012 H.MAKI      | 名義                                              | プリンタ            |
| APPROVED | 6/Jul/2012 Y.NISHIYAMA | 外寸図                                             |                 |
| SCALE    | 1/5 MASS 5.5 kg        | 質量はロール紙を含みず<br>MASS DOES NOT INCLUDE ROLL PAPER | NAME PRINTER    |
| DWG.No.  | C5080-G02-A            | REF.No.                                         | 16-023-551G-1   |
|          |                        |                                                 | OUTLINE DRAWING |

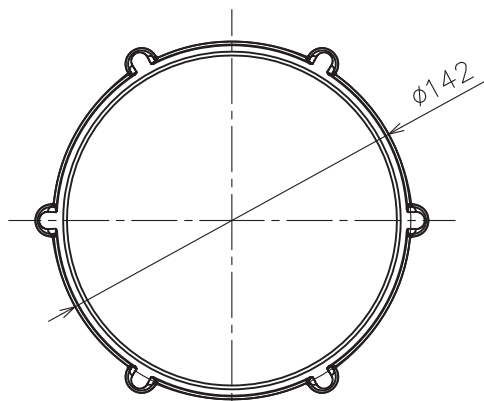


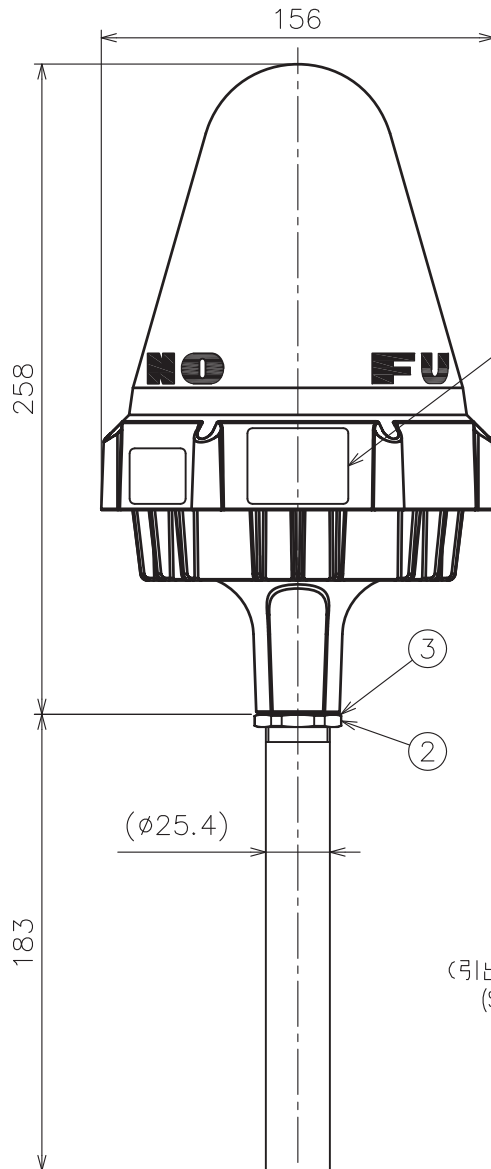
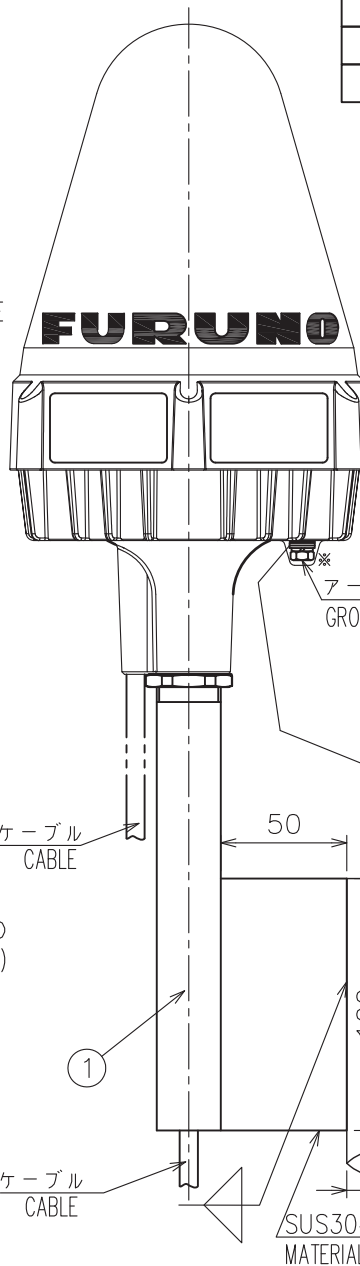
表2 工事材料

TABLE 2 INSTALLATION MATERIAL

| 品番<br>ITEM | 品名<br>NAME                         | 図番<br>DWG. No. | 摘要<br>REMARK   |
|------------|------------------------------------|----------------|----------------|
| 1          | アンテナ取付パイプ<br>ANTENNA MOUNTING PIPE | 16-018-1301    | 0.3 kg APPROX. |
| 2          | ロックナット<br>LOCK NUT                 | 16-023-2518    |                |
| 3          | ナットシート<br>NUT SHEET                | 16-023-2519    |                |

表1 TABLE 1

| 寸法区分 (mm)<br>DIMENSION | 公差 (mm)<br>TOLERANCE |
|------------------------|----------------------|
| $L \leq 50$            | $\pm 1.5$            |
| $50 < L \leq 100$      | $\pm 2.5$            |
| $100 < L \leq 500$     | $\pm 3$              |


型式銘板  
NAMEPLATE

※: シール剤塗布  
APPLY SILICONE SEALANT

(引出場所は選択)  
(SELECT EITHER ONE)

注 記 1) 指定外の寸法公差は表1による。

NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.

|          |                         |          |                    |
|----------|-------------------------|----------|--------------------|
| DRAWN    | 17/May/2012 T.YAMASAKI  | TITLE    | IC-115/116/118/119 |
| CHECKED  | 17/May/2012 H.MAKI      | 名称       | アンテナユニット           |
| APPROVED | 17/May/2012 Y.NISHIYAMA | 外寸図      |                    |
| SCALE    | 1/3                     | MASS     | 1.4 ±10% kg        |
| DWG. No. | C5635-G01-H             | REF. No. | 16-023-250G-1      |
|          |                         | NAME     | ANTENNA UNIT       |
|          |                         |          | OUTLINE DRAWING    |


表 1 TABLE 1

| 寸法区分 (mm)<br>DIMENSION | 公差 (mm)<br>TOLERANCE |
|------------------------|----------------------|
| $L \leq 50$            | $\pm 1.5$            |
| $50 < L \leq 100$      | $\pm 2.5$            |
| $100 < L \leq 500$     | $\pm 3$              |

表 2 工事材料

TABLE 2 INSTALLATION MATERIAL

| 品番<br>ITEM | 品名<br>NAME          | 図番<br>DWG. No. |
|------------|---------------------|----------------|
| 1          | ロックナット<br>LOCK NUT  | 16-023-2518    |
| 2          | ナットシート<br>NUT SHEET | 16-023-2519    |

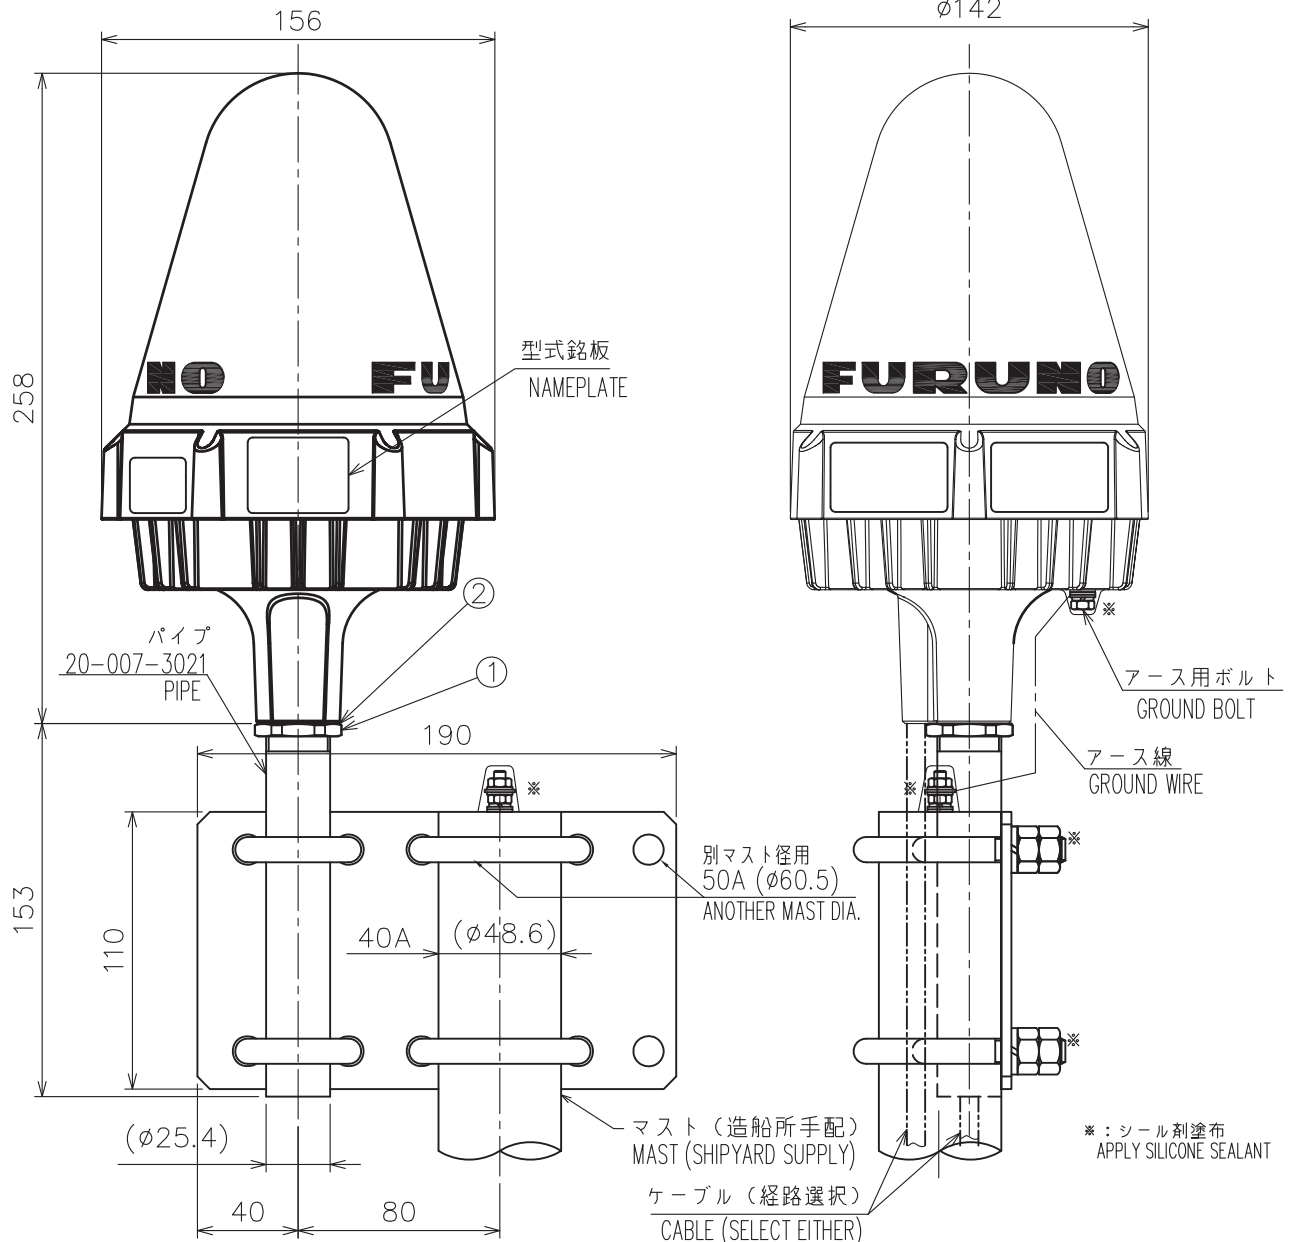

注 記 1) 指定外の寸法公差は表 1 による。

NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.

|          |                         |          |                                                    |
|----------|-------------------------|----------|----------------------------------------------------|
| DRAWN    | 25/Apr/2012 T.YAMASAKI  | TITLE    | IC-115/116/118/119                                 |
| CHECKED  | 25/Apr/2012 H.MAKI      | 名称       | アンテナユニット (取付板)                                     |
| APPROVED | 30/Apr/2012 Y.NISHIYAMA | 外寸図      |                                                    |
| SCALE    | 1/3                     | MASS     | 2.3 $\pm 10\%$ kg                                  |
| DWG. No. | C5635-G19-D             | REF. No. | 16-023-252G-1                                      |
|          |                         |          | 質量は工材を含む。<br>MASS INCLUDES INSTALLATION MATERIALS. |
|          |                         |          | ANTENNA UNIT (W/ FIXTURE PLATE)                    |
|          |                         |          | OUTLINE DRAWING                                    |

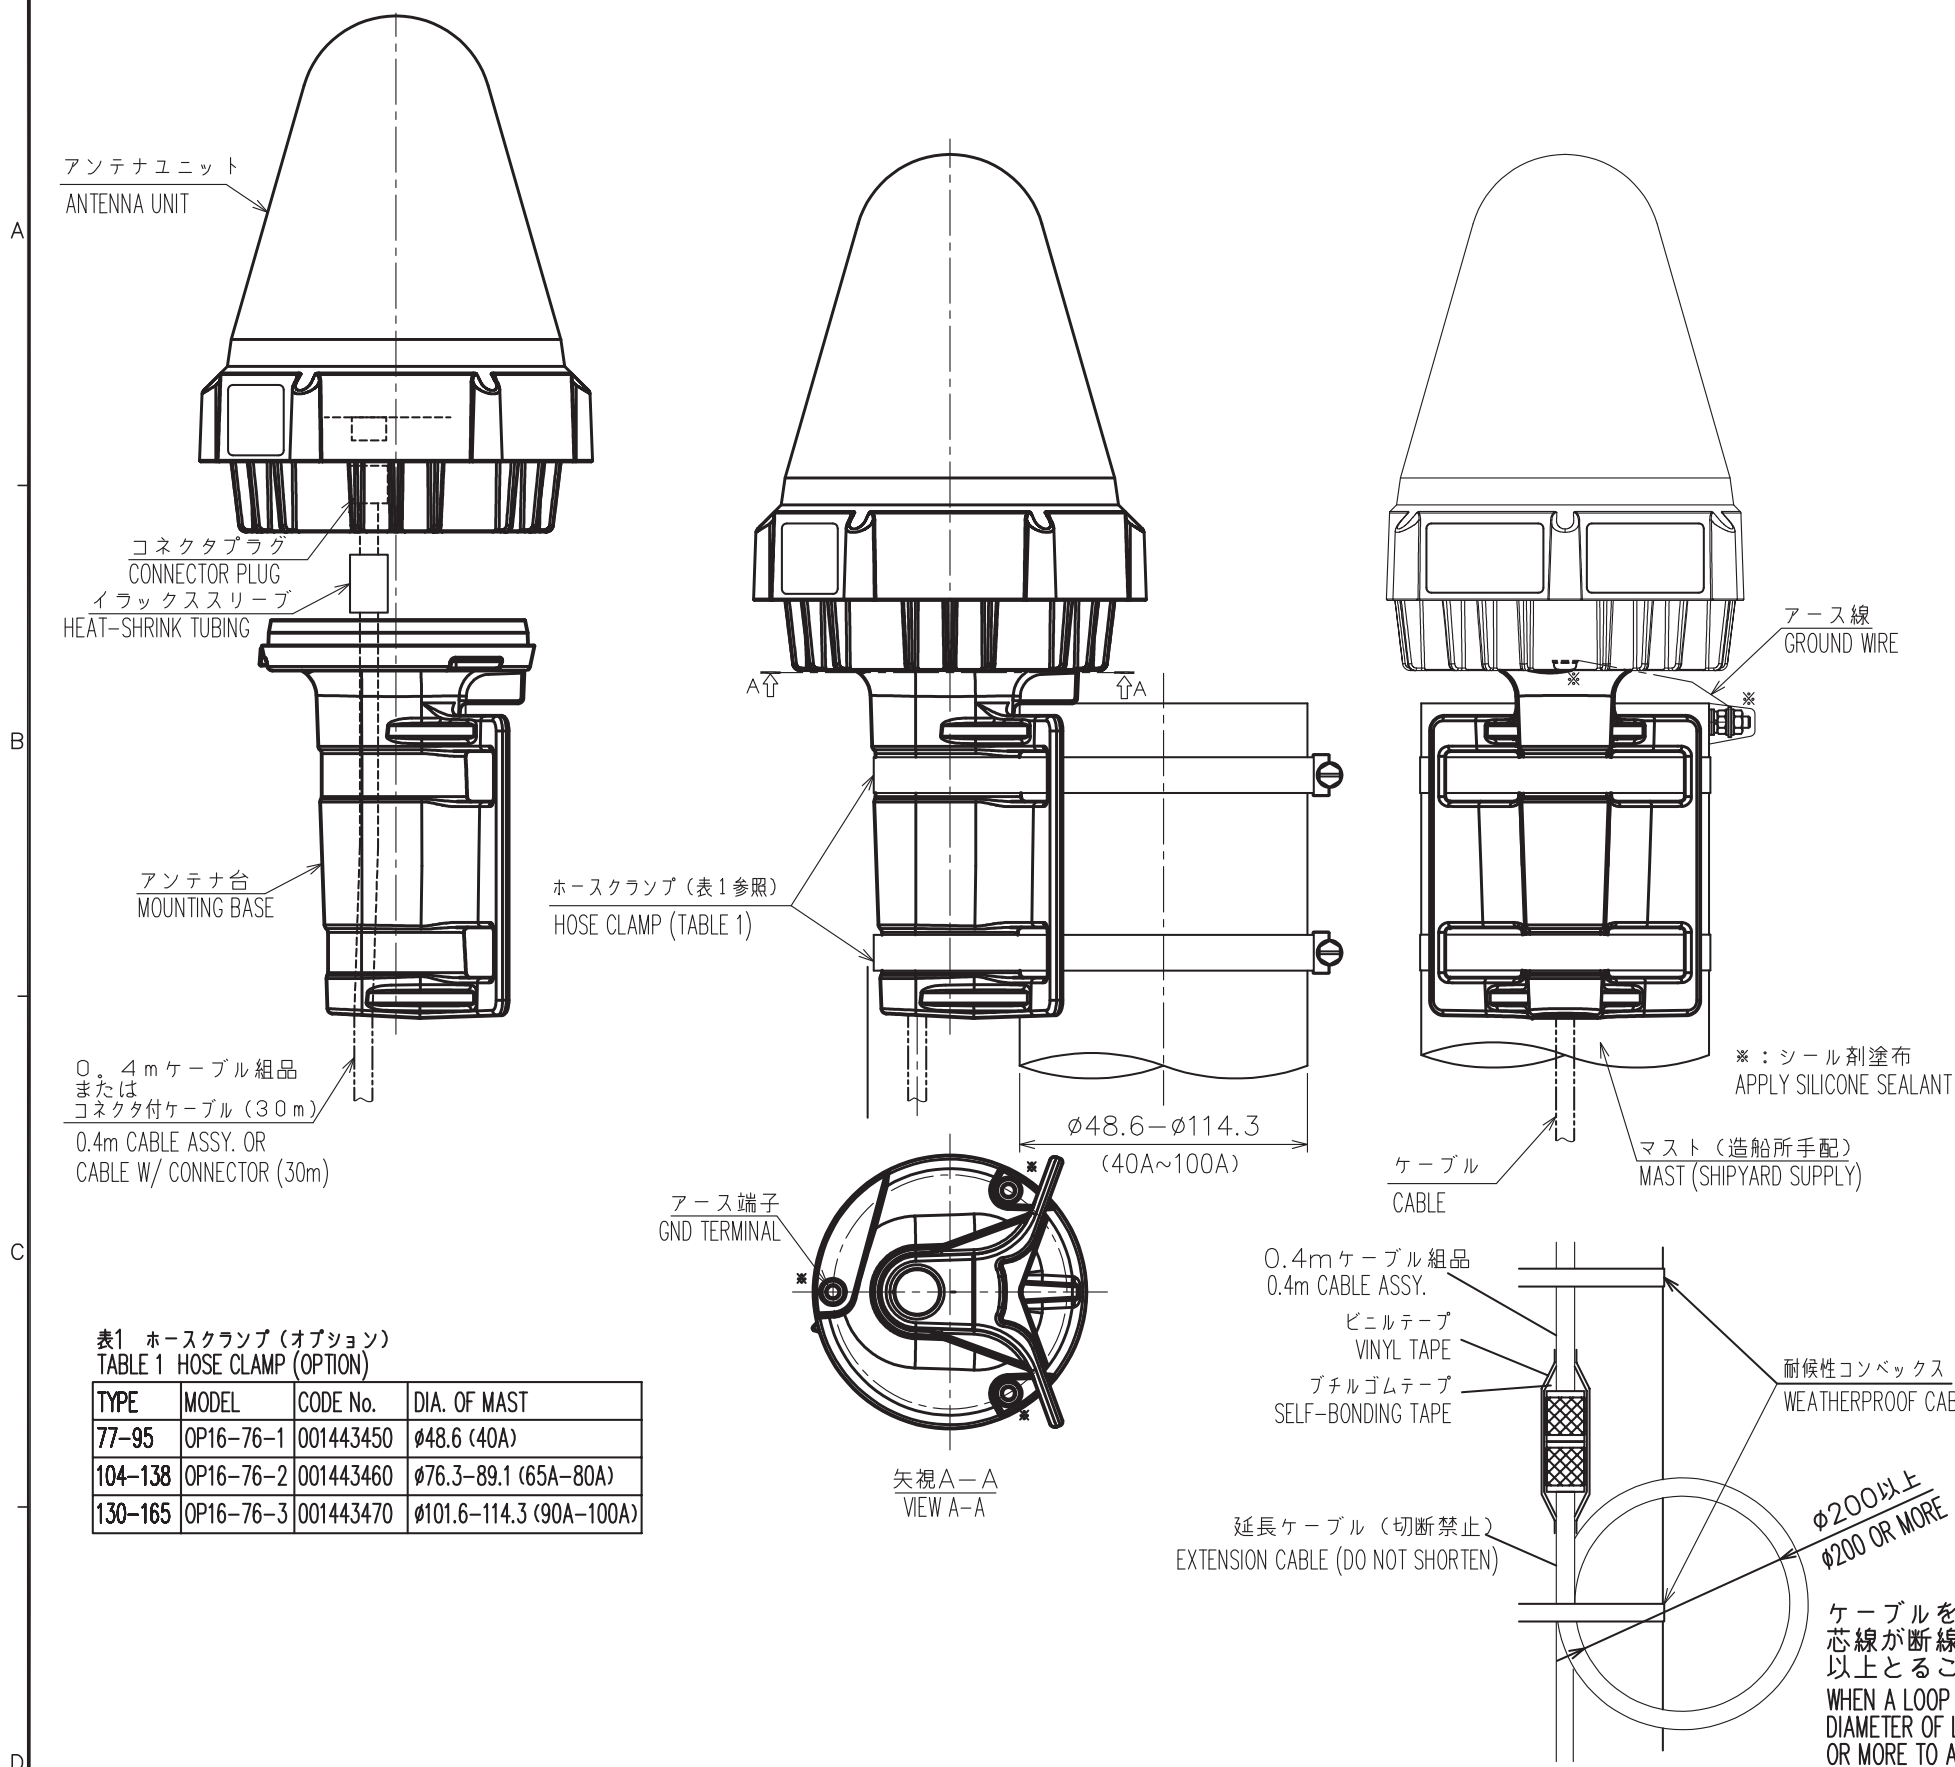


表1 ホースクランプ (オプション)  
TABLE 1 HOSE CLAMP (OPTION)

| TYPE    | MODEL     | CODE No.  | DIA. OF MAST                  |
|---------|-----------|-----------|-------------------------------|
| 77-95   | OP16-76-1 | 001443450 | $\phi 48.6$ (40A)             |
| 104-138 | OP16-76-2 | 001443460 | $\phi 76.3-89.1$ (65A-80A)    |
| 130-165 | OP16-76-3 | 001443470 | $\phi 101.6-114.3$ (90A-100A) |

- 手順
0. 4 m ケーブル組品を使用するときは、コネクタプラグをアンテナ上部底のコネクタに接続した後、ケーブルの下からイラックススリーブを通しておく。  
0. 4 m ケーブル組品を使用しないときは、アンテナ台の下から30 m ケーブルを通し、イラックススリーブを通してコネクタプラグをアンテナ上部底のコネクタに接続する。
  - イラックススリーブを熱で固着し (110℃以下)、自己融着テープおよびビニルテープで固定する。  
固定範囲は50 mm 以内。高温で熱すると部材の一部を変形させる恐れがあるので注意する。
  - アンテナ台をアンテナ上部にネジ3本で固定する。  
うち一本のネジは、アース線 (圧着端子付) を共締めする。
  - アンテナ台のネジ部にシール剤を塗布する。
  - アンテナ台をホースクランプ2本でマストに固定する。
  0. 4 m ケーブル組品を使用するときは、がい装付ケーブルのコネクタを接続し、自己融着テープ、ビニルテープで固定する。
  - ケーブルをマストに固定し、アース線をマストに接続する。  
ケーブルは耐候性コンベックスで固定する。
  - \* 部分をシール剤で完全に覆う。

- PROCEDURE
- FOR CONNECTION OF CABLE ASSY.(0.4m)  
CONNECT THE CONNECTOR PLUG OF CABLE ASSY. TO ANTENNA UNIT.  
THEN PASS HEAT-SHRINK TUBING FROM THE OTHER SIDE OF CABLE ASSY.  
FOR CONNECTION OF CABLE W/ CONNECTOR (30m).  
PASS THE ANTENNA CABLE THRU THE HOLE IN THE CENTER OF THE ANTENNA BASE. THEN PASS HEAT-SHRINK TUBING ONTO THE CABLE.  
CONNECT THE CABLE PLUG TO ANTENNA UNIT.
  - FIX THE SHRINK TUBE WITH HEAT (+110°C OR LESS) AND BIND WITH SELF-BONDING TAPE AND VINYL TAPE.  
WRAPPING LENGTH: WITHIN 50 mm. DO NOT HEAT WITH HIGH TEMPERATURE TO AVOID DISTORTION OF ANTENNA PARTS.
  - FIX THE MOUNTING BASE TO ANTENNA UNIT WITH 3 SCREWS.  
FASTEN THE GROUND WIRE TO A SCREW OF THEM WITH CRIMP-ON LUG.
  - APPLY SILICONE SEALANT TO SCREWS OF MOUNTING BASE.
  - FIX THE MOUNTING BASE TO MAST WITH TWO HOSE CLAMPS SECURELY.
  - CONNECT THE ARMED CABLE CONNECTOR TO THE CABLE ASSY.
  - WRAP THE CONNECTORS WITH SELF-BONDING TAPE AND VINYL TAPE.
  - FIX THE ANTENNA CABLE WITH WEATHERPROOF CABLE TIES AND CONNECT GROUND WIRE TO MAST.
  - COVER SCREW HEADS MARKED '\*' WITH SILICONE SEALANT.


|          |                        |                        |                                  |
|----------|------------------------|------------------------|----------------------------------|
| DRAWN    | 18/Feb/2016 T.YAMASAKI | TITLE                  | IC-115/116/118/119               |
| CHECKED  | 18/Feb/2016 H.MAKI     | 名称                     | アンテナユニット (ホースクランプ取付)             |
| APPROVED | 22/Feb/2016 H.MAKI     | 装備要領                   |                                  |
| SCALE    | MASS ±10%<br>kg        | NAME                   | ANTENNA UNIT (HOSE CLAMP FIXING) |
| DWG.No.  | C5674-Y01- C           | INSTALLATION PROCEDURE |                                  |

A

B

C

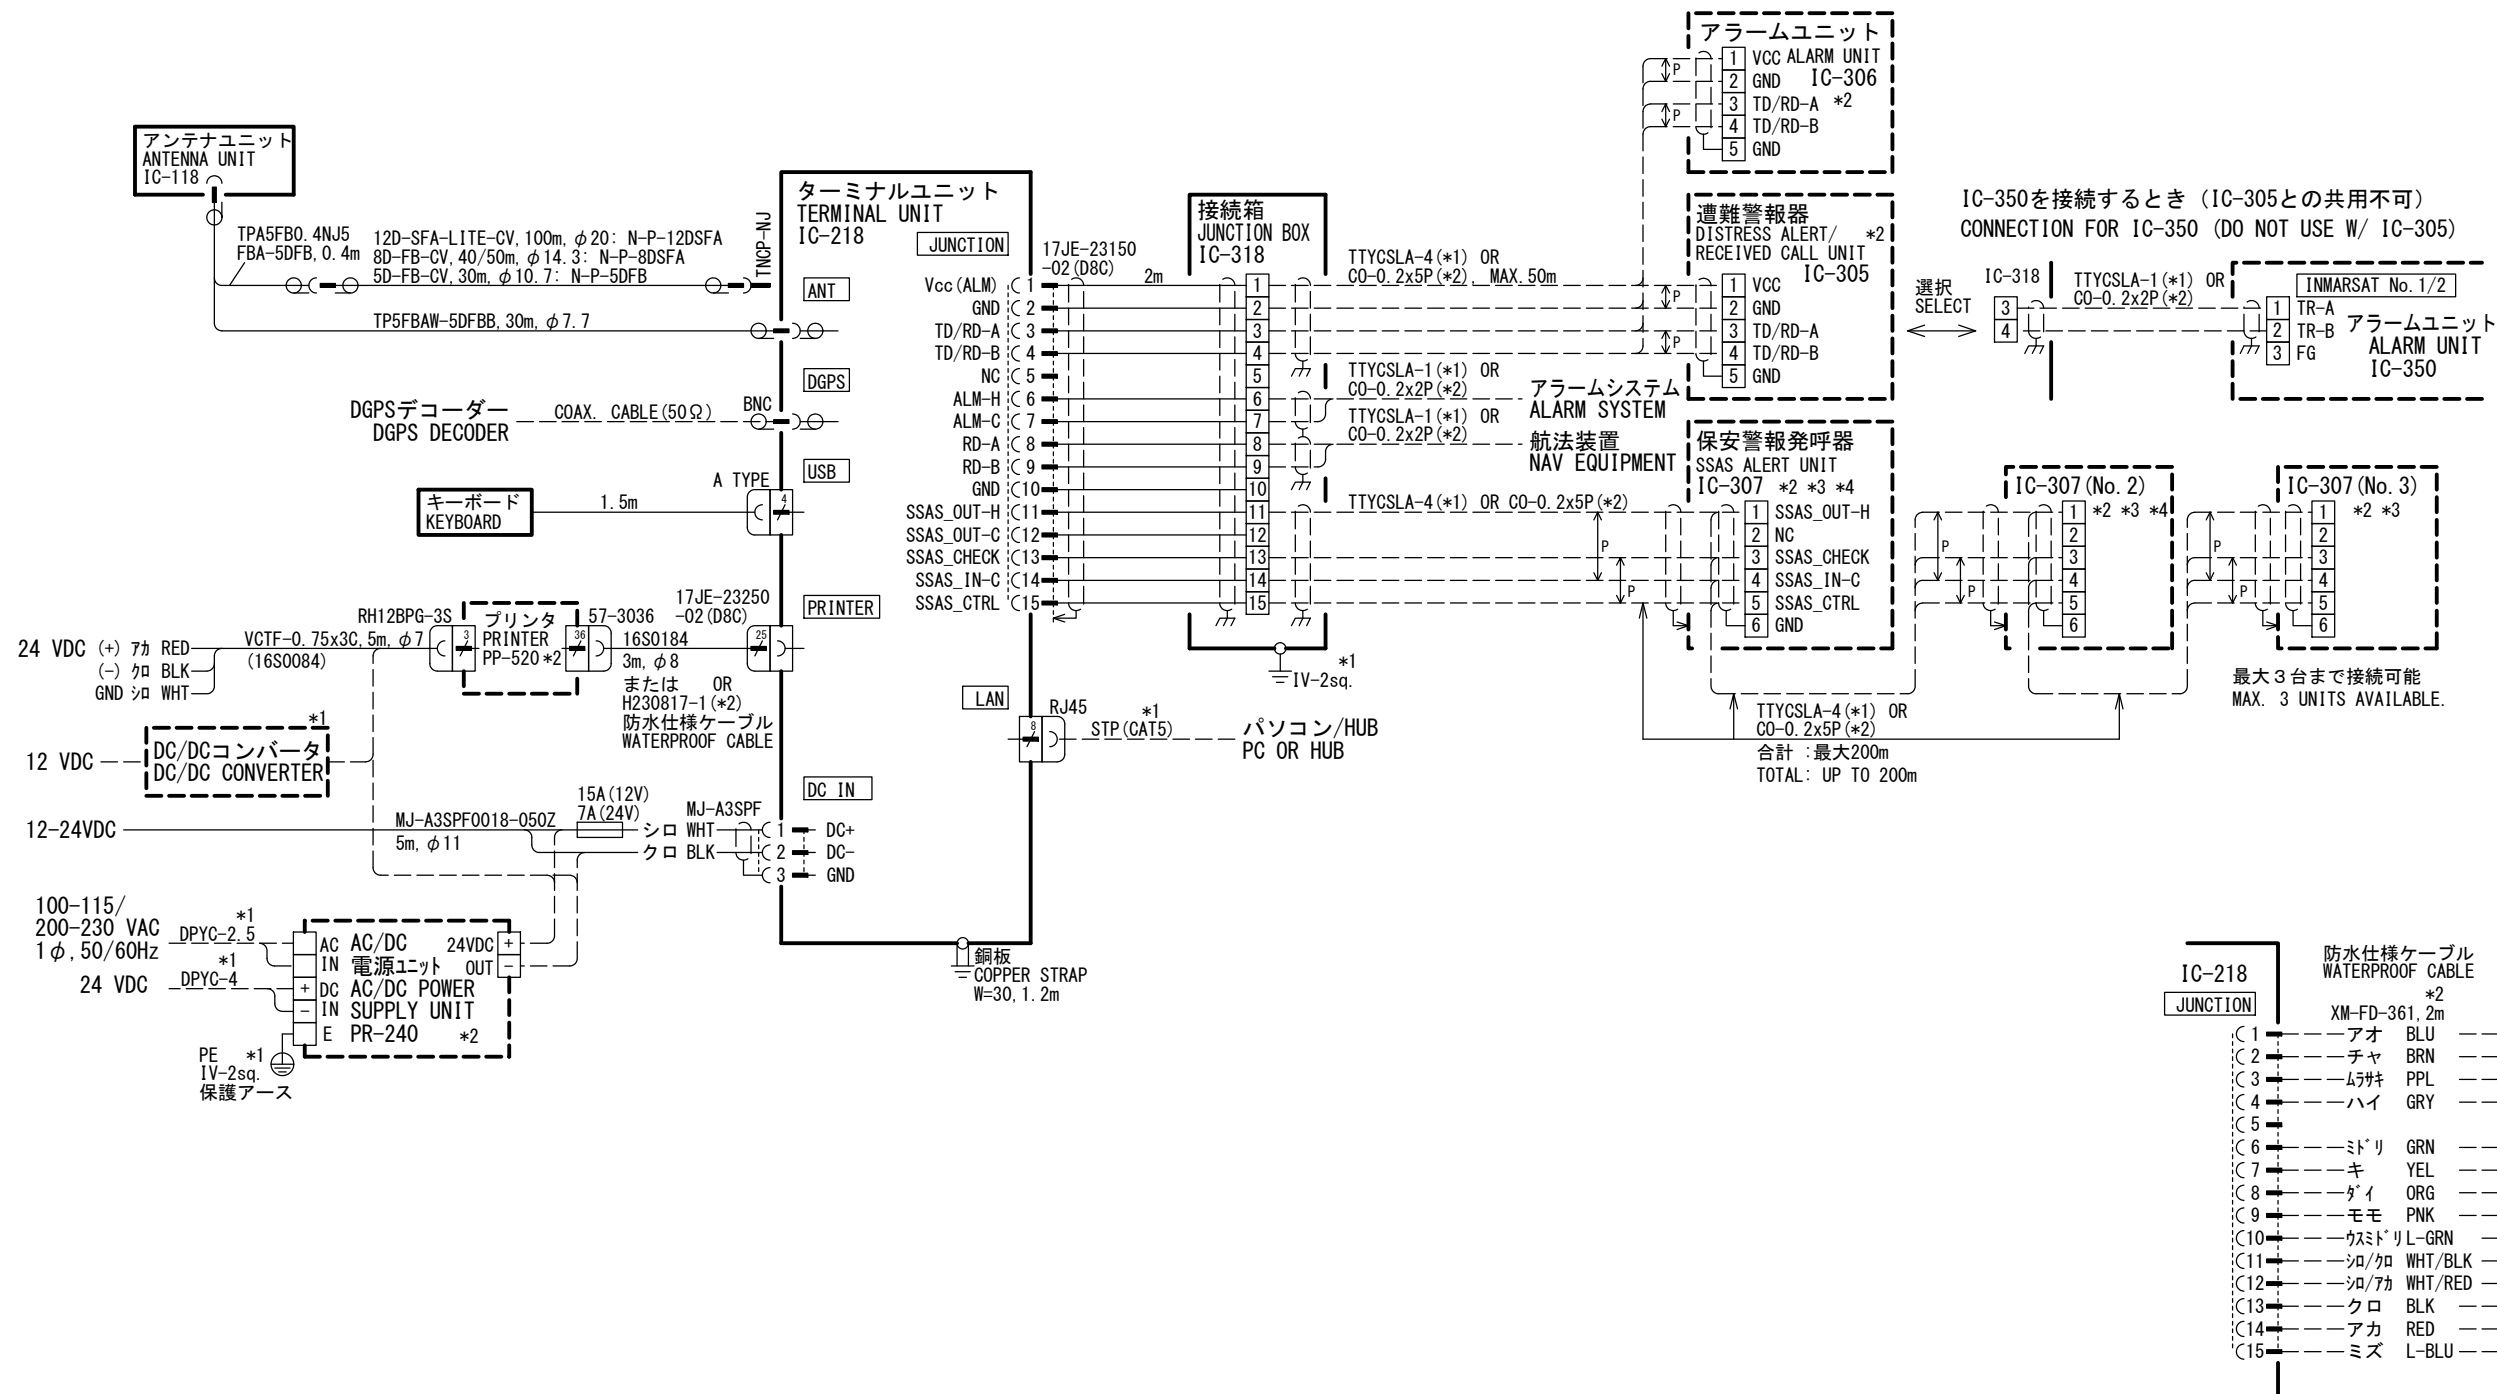D




注記

- \* 1) 造船所手配。
- \* 2) オプション。
- \* 3) 終端のIC-307はジャンパー設定を変更する。
- \* 4) SSAS仕様のとき標準構成。

NOTE

- \*1: SHIPYARD SUPPLY.
- \*2: OPTION.
- \*3: CHANGE SETTING OF JUMPER IN IC-307 TO TERMINATE.
- \*4: STANDARD CONFIGURATION FOR SSAS.

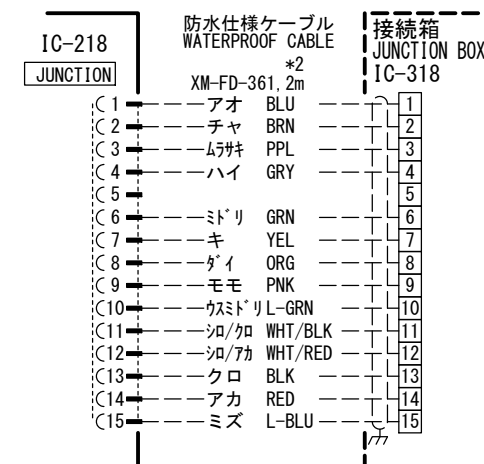CO-0.2x2P: CO-SPEVV-SB-C 0.2x2P, φ10.5  
CO-0.2x5P: CO-SPEVV-SB-C 0.2x5P, φ13.5



|                         |                        |          |                 |
|-------------------------|------------------------|----------|-----------------|
| DRAWN                   | 1/Feb/2019 T. YAMASAKI | TITLE    | FELCOM 18       |
| CHECKED                 | 1/Feb/2019 H. MAKI     | 名称       | インマルサット-C 船舶地球局 |
| APPROVED                | 6/Feb/2019 H.MAKI      |          | 相互結線図           |
| SCALE                   | MASS kg                | NAME     | INMARSAT-C MES  |
| DWG No.                 | C5674-C01- H           | REF. No. | 16-023-3001-1   |
| INTERCONNECTION DIAGRAM |                        |          |                 |