


[INSTALLATION SETTING] menu

The [INSTALLATION SETTING] menu appears only when the power is turned on for the first time after installation.

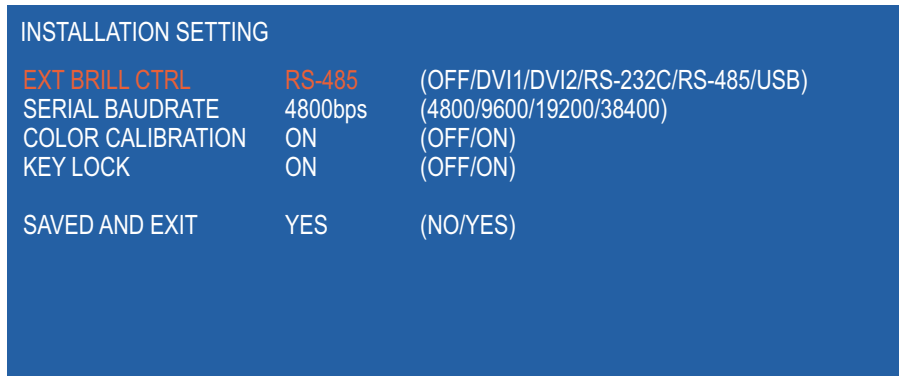

[INSTALLATION SETTING] menu


For FMD-3x00 and FAR-3xx0 series, no adjustment is necessary. Keep this equipment in the default settings as below.

Connected equipment	Connected Unit	EXTBRILL CTRL	SERIAL BAUDRATE	COLOR CALIBRATION	KEY LOCK	DVI PWR SYNC *
FMD-3x00, FAR-3xx0 ser.	EC-3000	RS-485	4800	ON	ON	ON

*: "DVI PWR SYNC" is the slide switch at the bottom rear of the monitor unit. See the "Slide switch" below.

Slide switch

The slide switch is set to ON at the factory to allow for power control from external DVI signals. To connect RGB or RGB and DVI signals, set the slide switch (located between the RGB and DVI ports) to OFF. Otherwise the monitor will not turn on.

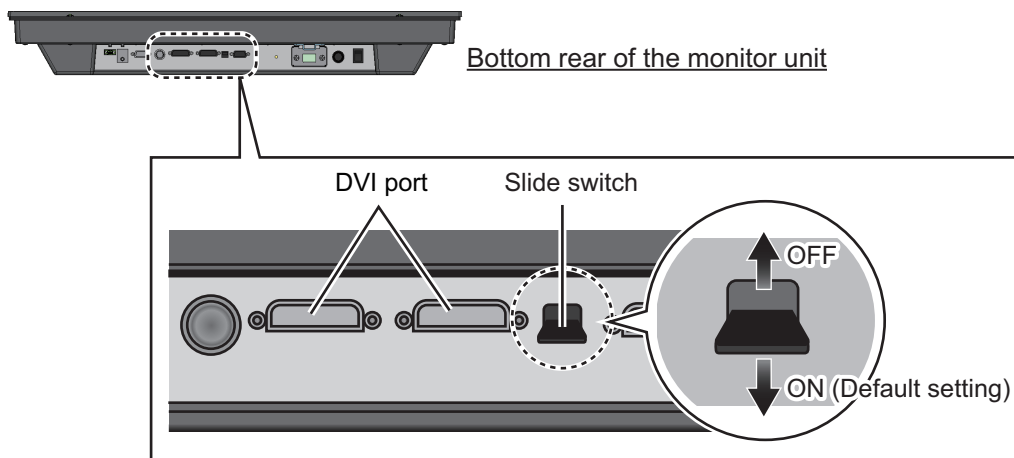

[INSTALLATION SETTING] メニューの設定

装備完了後、最初に電源を入れたときのみ、下図の [INSTALLATION SETTING] メニューが表示されます。下記の表を参考に、接続機器に応じた設定を行ってください。

INSTALLATION SETTING		
EXT BRILL CTRL	RS-485	(OFF/DVI1/DVI2/RS-232C/RS-485/USB)
SERIAL BAUDRATE	4800bps	(4800/9600/19200/38400)
COLOR CALIBRATION	ON	(OFF/ON)
KEY LOCK	ON	(OFF/ON)
SAVED AND EXIT	YES	(NO/YES)

[INSTALLATION SETTING] メニュー

FMD-3x00 と FAR-3xx0 シリーズを接続する場合は、下表の工場出荷設定から変更する必要がありません。

接続機種	接続ユニット	EXT BRILL CTRL	SERIAL BAUDRATE	COLOR CALIBRATION	KEY LOCK	DVI PWR SYNC *
FMD-3x00、 FAR-3xx0 シリーズ	EC-3000	RS-485	4800	ON	ON	ON

*: DVI PWR SYNC は表示部背面下部のスライドスイッチです。下記の「スライドスイッチの設定」を参照してください。

スライドスイッチの設定

RGB 信号、または DVI 信号と RGB 信号の両方を接続する場合は、“電源連動”スライドスイッチを「オフ」に設定してください。工場出荷時は、DVI 信号接続用として「オン」に設定されているため、表示器の電源キーでは電源のオン / オフができません。スイッチは RGB ポートと DVI ポートの間にあります。

