


How to set SPU (SPU-9211) Board

This board is set at factory for use in the MODEL 1832. For use in the MODEL1932 or 1942, change factory menu settings as shown in below.

While pressing and holding down the GAIN (HM-OFF) control, press the [MENU] key five times to display the factory menu.

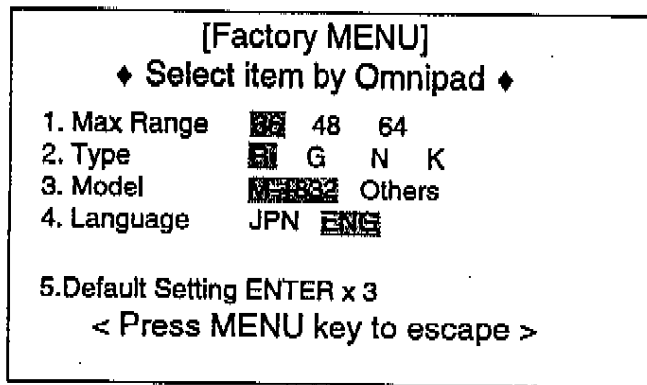

1. Max range

36 nm: Model 1832 48 nm: Model 1932 64 nm: Model 1942

2. Type

R: Regular G: German N: Netherland K: Korea

Note

Select R-type usually.

G, N: Same as R-type (as of 6/97)

K: Same as R-type, but range ring is same as IMO.

3. Model

Select the Antenna Unit (MIC).

M-1832: Model 1832 Others: Model 1932/1942s

4. Language

JPN: Japanese ENG: English

5. Default Setting

Default menu settings (except factory menu) may be restored by selecting Default Setting and pressing the [ENTER] key three times.

Note1: Restart radar to restore default settings.