




1815	TO	SCX21
YEL (RD1-H)	↔	WHT/ORG (TD2 A) GPS
GRN (RD1-C)	↔	BLU/ORG (TD2 B) GPS
YEL/GRY (RD3-H)	↔	WHT/GRY (TD3 A) HDG
GRN/GRY (RD3-C)	↔	BLU/GRY (TD3 B) HDG
		RED (12/24 VDC +)
		BLACK (12/24 VDC -)

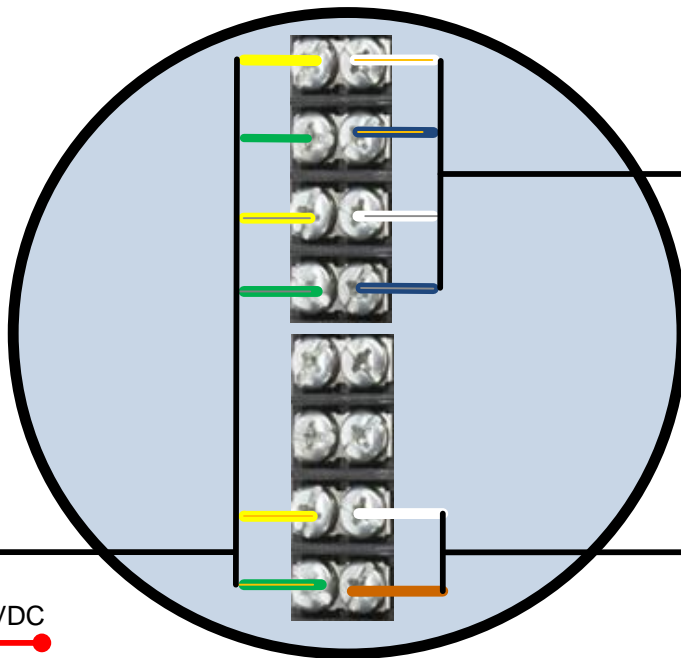

12/24VDC

SILENT MODE SWITCH



12/24VDC

1815	TO	FA70
YEL/ORG (RD2-H)	↔	WHT (TD-A) AIS
GRN/ORG (RD2-C)	↔	BRN (TD-B) AIS

Note: Grey and Purple wires from FA70 power/data cable allows connection to physical hardware switch to engage or disengage Silent Mode. When circuit is closed Silent Mode is activated and when circuit is open Silent Mode is deactivated.