

SALES BULLETIN

Number of Pages: 3

Date: February 20, 2025



Suzuki Engine Display Mode

INDEX

- 1. Overview
- 2. Interconnection
- 3. Suzuki Engine Display




1. Overview

NavNet TZtouchXL series MFDs are compatible with Suzuki's engine display mode, just like the Suzuki SMD7/9/12/16 models. With identical interconnection and engine configuration, the TZT10X/13X/16X/22X/24X/BBX can function as Suzuki engine gauges.



2. Interconnection

By connecting to the Suzuki outboard network through the Suzuki gateway (34923-96L1) and harness (3667-96L4), the NavNet TZtouchXL series MFDs gain access to the Suzuki engine display mode.

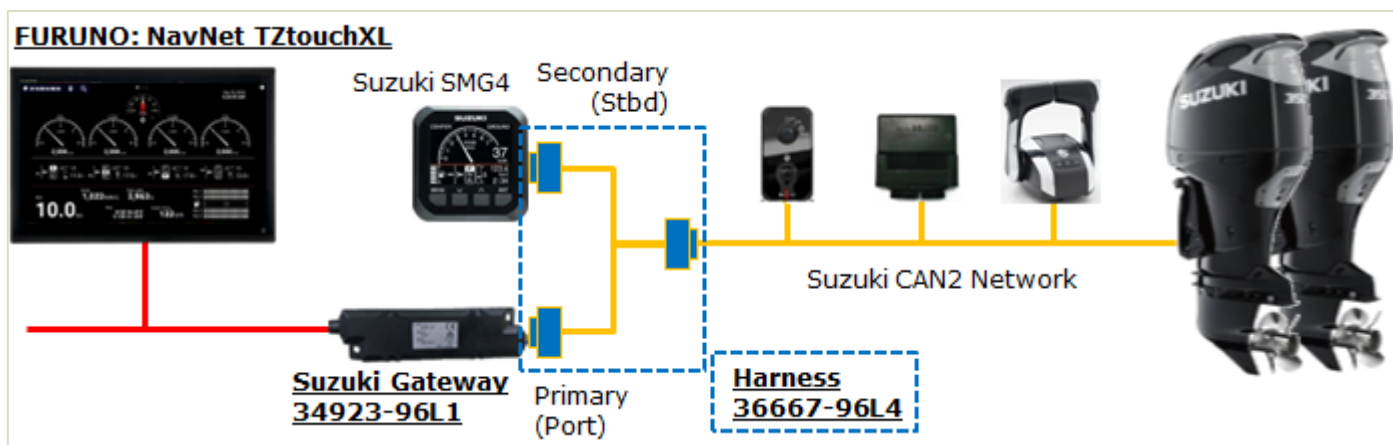

Notes:

- (1) For Suzuki engine components, including the gateway (34923-96L1) and harness (3667-96L4), contact your local Suzuki dealer.
- (2) The NavNet TZtouchXL series MFDs do not have the Keyless Setting menu that is available on the SMD7/9/12/16. A Suzuki SMG4 gauge is required to register a Keyless FOB key.
- (3) The Suzuki gauge SMG4 is also required to enter a pin code when the FOB key is lost or not detected.


Supported Outboards

The following engine models are network supported with the NavNet TZtouchXL series MFDs via the gateway and harness.

Year Model	Type
2022	DF115BG/140BG, DF150AP/175AP/200AP, DF250AP/300AP, DF300B/325A/350A
2023	DF40A/50A/60A, DF70A/80A/90A/100B, DF100C/115B/140B, DF150A/175A/200A
2025	DF200/225/250

3. Suzuki Engine Display

- [Suzuki Mode] can be activated via the Service Menu.
- Once the MFD is set to Suzuki Mode, Suzuki icons are available in Full and Quarter screen modes.

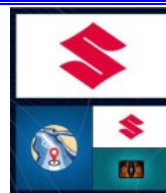


E.g., Home – Suzuki in Full and Quarter

- Suzuki engine gauges are presented in the authentic graphical design of Suzuki.




E.g., Suzuki Page – Full Screen

By edge-swiping from the right side, Troll Mode can be activated. Engine RPM can be adjusted in incremental steps of 50 RPM with [+] and [-] buttons. Troll Mode will automatically be deactivated by shifting the engine throttle to Neutral or increasing the engine speed to 3,000 RPM or higher.

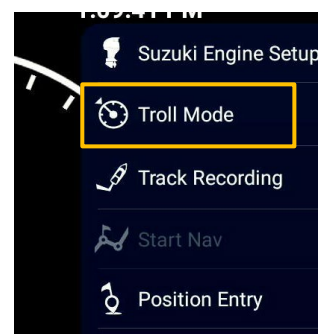

- In [Settings] – [Suzuki Engine Setup] or by edge-swiping on the right side for [Suzuki Engine Setup], Auto Trim (on/off), engine diagnosis, and QR code creation for diagnosis data, etc. are available.

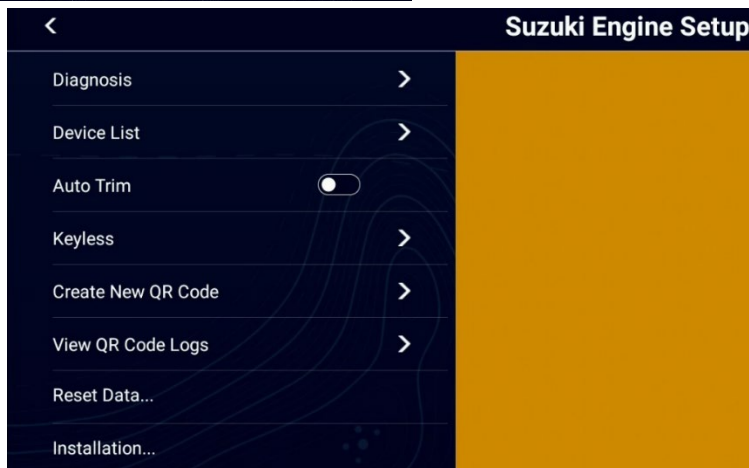

E.g., [Suzuki Engine Setup] Page

Note: Radar and Fish Finder functions are available, i.e., **NOT locked**, even while Suzuki Mode is activated. (The SMD7/9/12/15 required unlock codes for Radar and Fish Finder functions.)

--- END ---

- All brand and product names are registered trademarks, trademarks, or service marks of their respective holders.