



NAVnet

TZ2
touch

DFF3

Software Update Procedure

Preperation for DFF3 Software update


1. USB memory (Do not use SD to USB Adapter)



2. Download DFF3 Software for the TZT2 from the Furuno USA website under the “Software” selection of the DFF3 product.

3. Unzip DFF3 Software

4. Move unzipped software contents to root of USB memory. Root of USB memory will contain the following only:

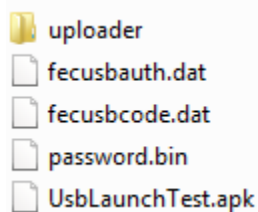


(Note: When you open your USB memory window, you should see only the files shown above. They should not be changed or placed inside any additional folders. Other software, photos, or files should NOT be on the USB along with this upgrade software)



5. With the power off to the MFD. Insert USB memory into the USB pigtail cable located on the back of the TZT2 MFD. This will be a white pigtail cable. Power on the TZT2 MFD and boot up normally.

You are now ready to begin the DFF3 software update

1. Press **Home** Button

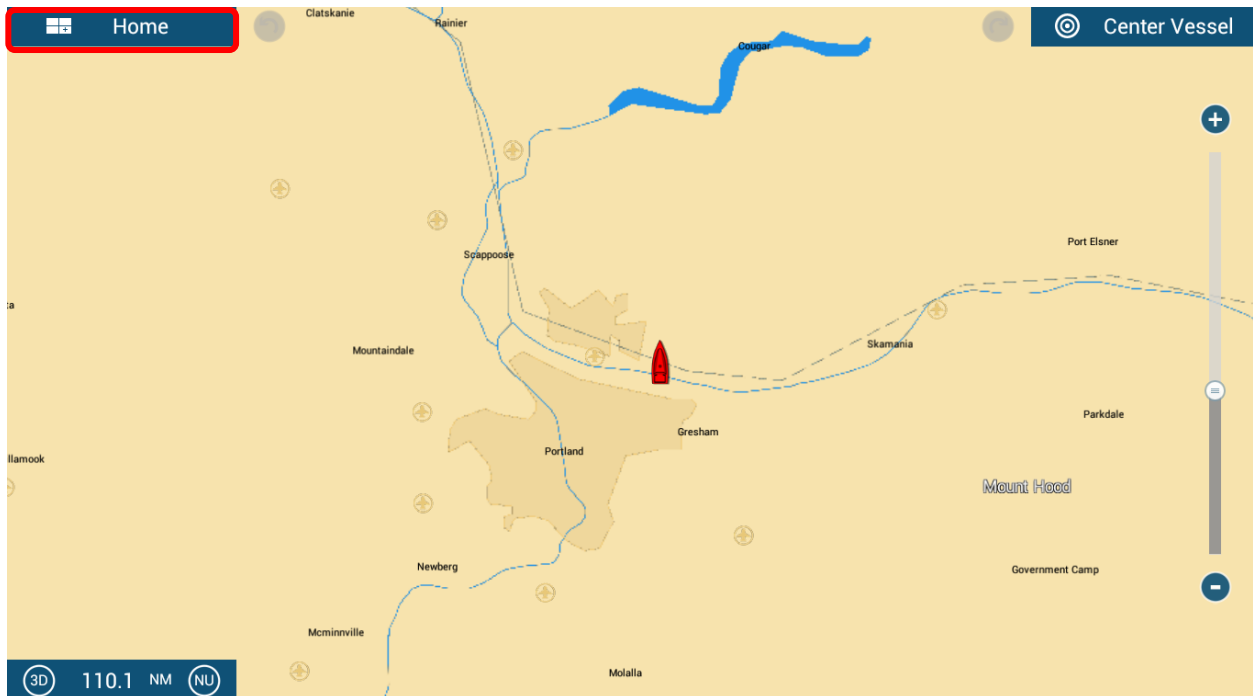


2. Press **Settings**




3. Press Initial Setup




4. Press Update Network Equipment

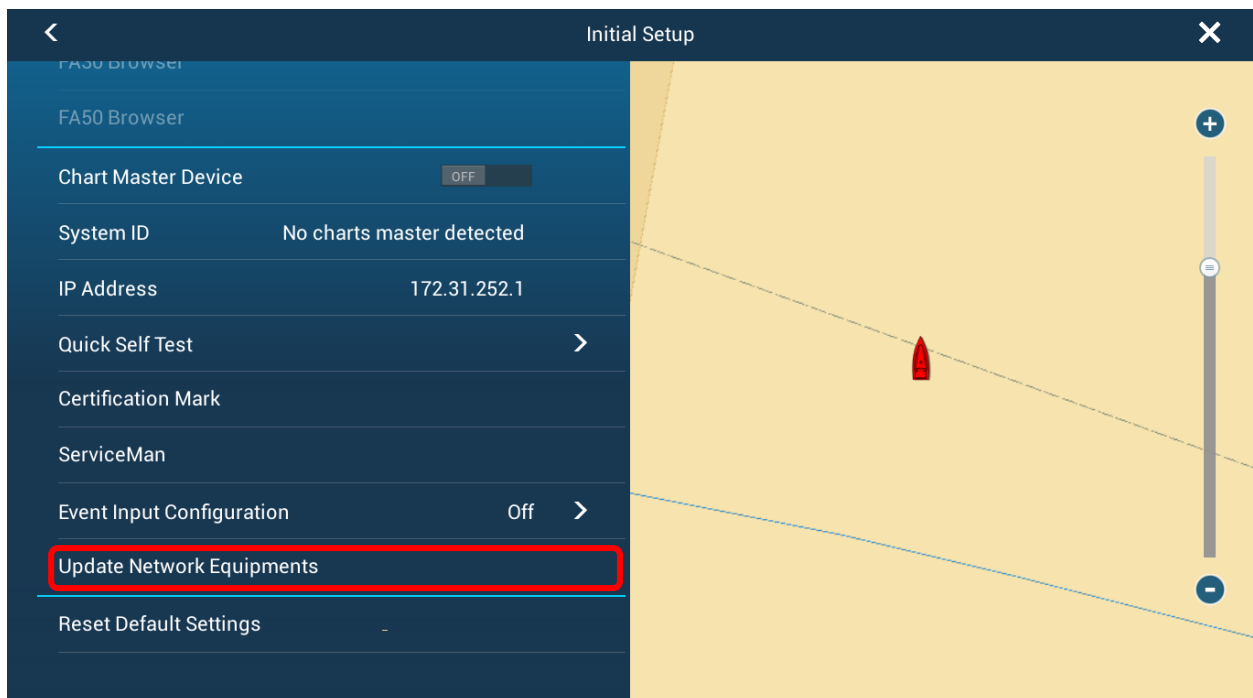

5. If DFF3 is not recognized Press **Scan**

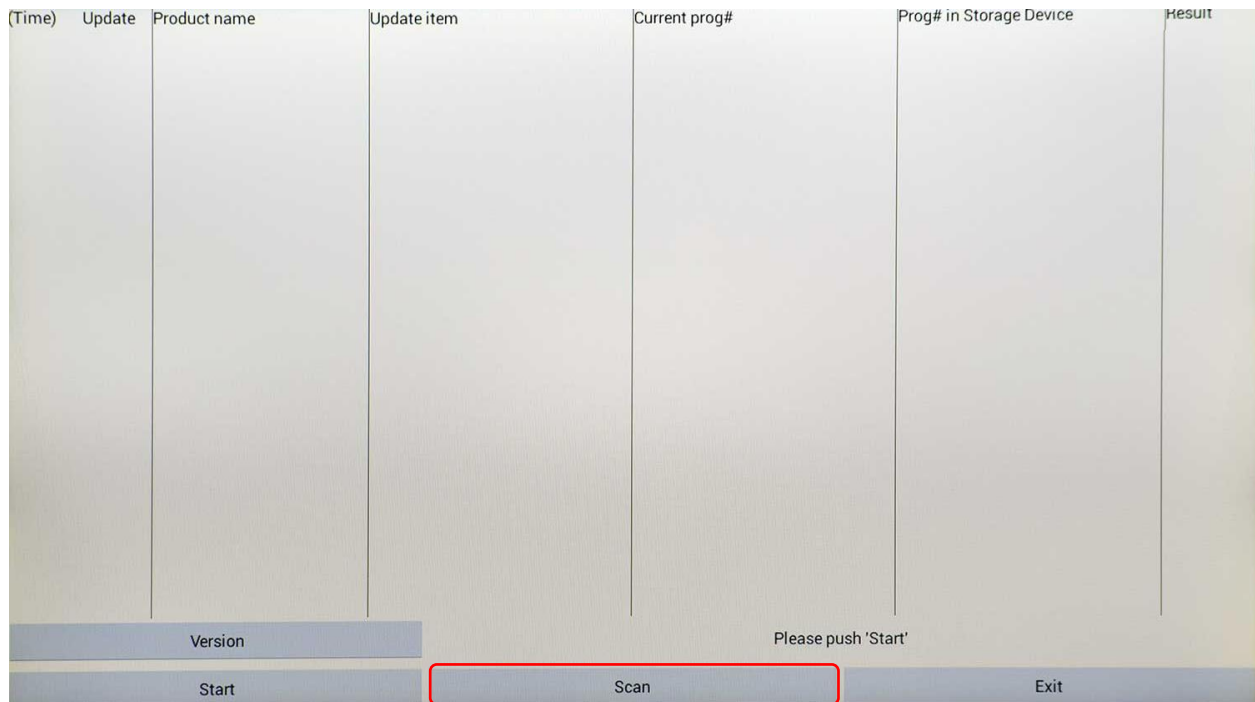


6. Make sure the Update Box is checked for DFF3 then press **Start** and acknowledge the update to begin the Update process.

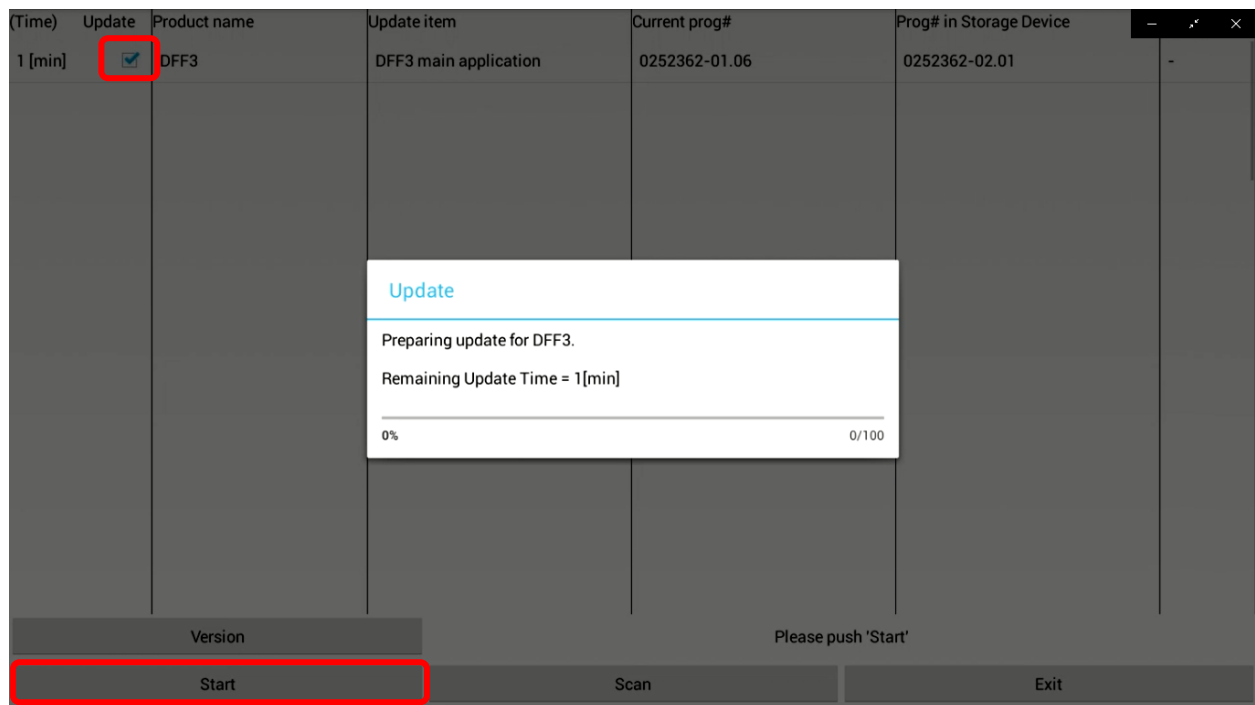

7. You will be notified once the update process is finished.


Press **Ok** and then press **Exit**

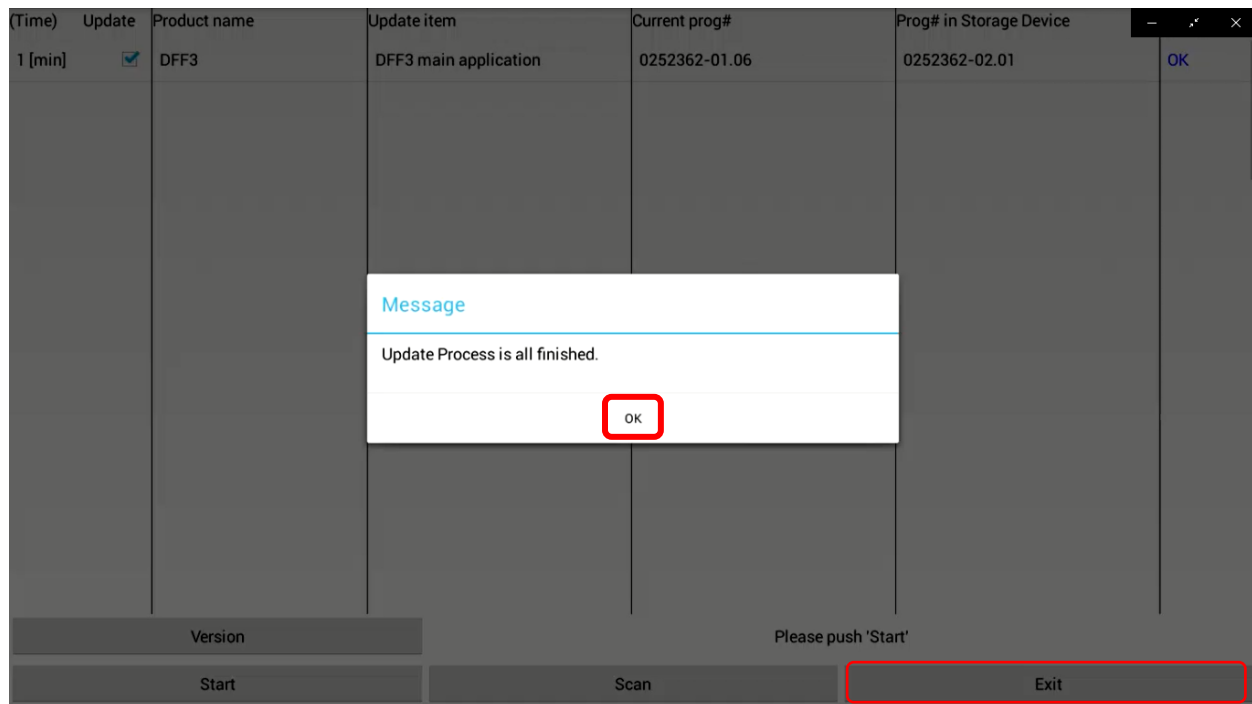


The unit will reboot back to normal mode. You may now remove the USB memory.

How to verify DFF3 has been successfully updated.



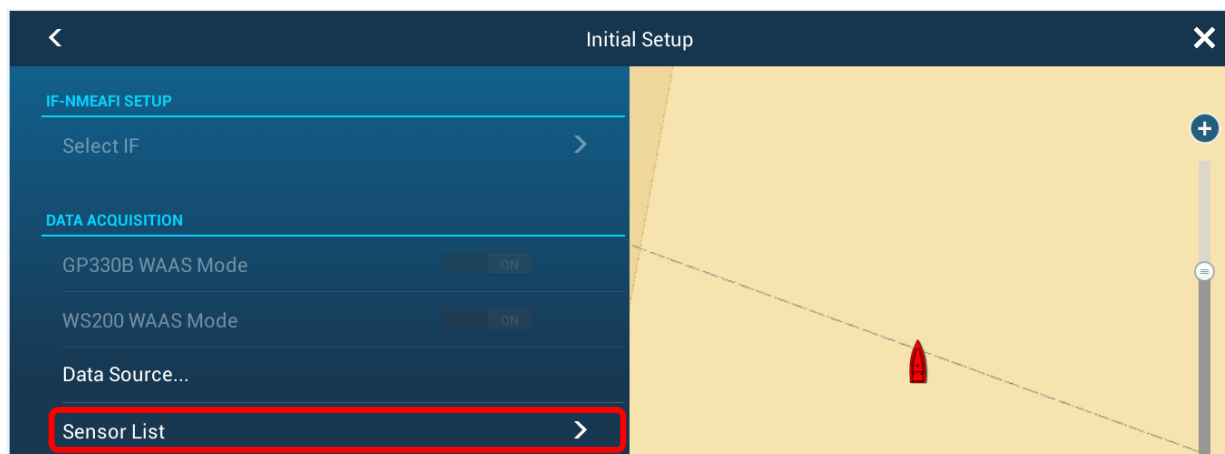

1. Access the **Initial Setup** menu. Press **Sensor List**

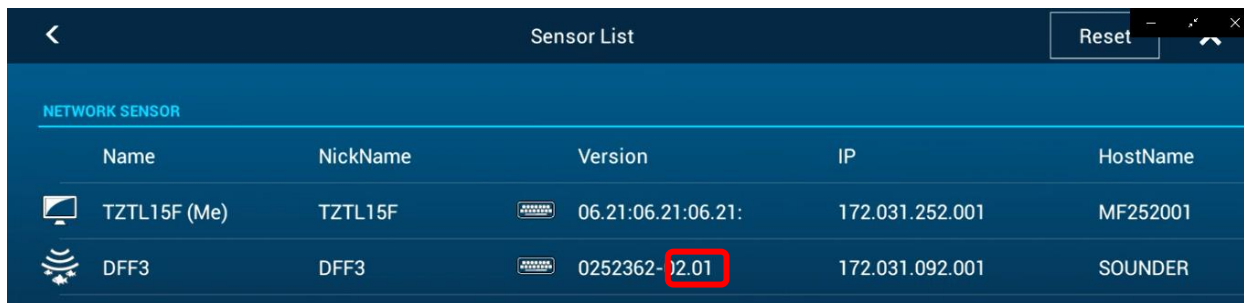

2. Verify that the updated software version is displayed.
(v2.01 is shown in this example)



The screenshot shows a 'Sensor List' window with a 'Reset' button in the top right corner. Below the title bar is a section labeled 'NETWORK SENSOR'. A table lists two sensors:

	Name	NickName	Version	IP	HostName
	TZTL15F (Me)	TZTL15F	 06.21:06.21:06.21:	172.031.252.001	MF252001
	DFF3	DFF3	 0252362-2.01	172.031.092.001	SOUNDER

END

9/2019